


# QUICKLOC FLATPAX KITCHEN RANGE





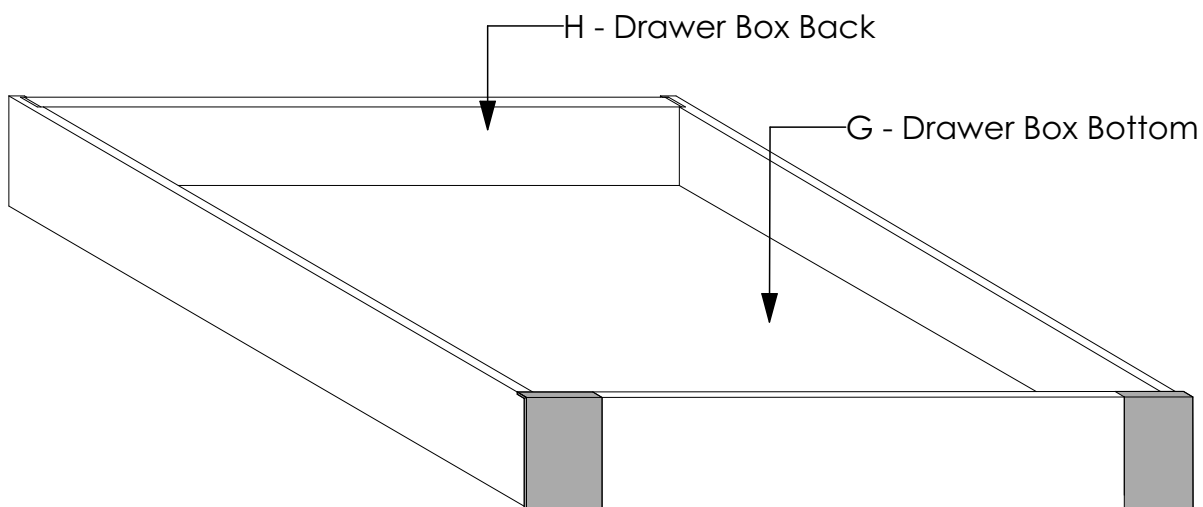


## ASSEMBLY GUIDE

### LEGRABOX INNER DRAWER BOX HEIGHT 1







#### HARDWARE

#### TOTAL NUMBER OF PANELS: 2


PRODUCT	QTY	IMAGE
Legrabox Back Fixing Bracket Left/Right	1 Pair	
Legrabox Drawer Sides Left/Right	1 Pair	
Screw 3.5 x 16mm	24	
Legrabox Front Fixing Bracket	2	
Legrabox Runners Left/Right	1 Pair	
Blum Cover Cap for Drawer Sides	2 of each	
Legrabox front section for inner Draw	1	

#### TOOLS REQUIRED

#### GENERAL INSTRUCTIONS

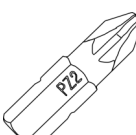
 Screw Driver (Pozi driv Head)	 Cordless Drill	 Pozi Bit (PZ2)	 Rubber Mallet	<ol style="list-style-type: none"> <li>1. Confirm that all panels (2) and hardware are in the package before assembling.</li> <li>2. Check the white sticker on each panel for the labelling (G &amp; H).</li> <li>3. Ensure that the panels are laid on a non-abrasive surface when assembling.</li> </ol>
--	---	---	---	---

## STEP 1

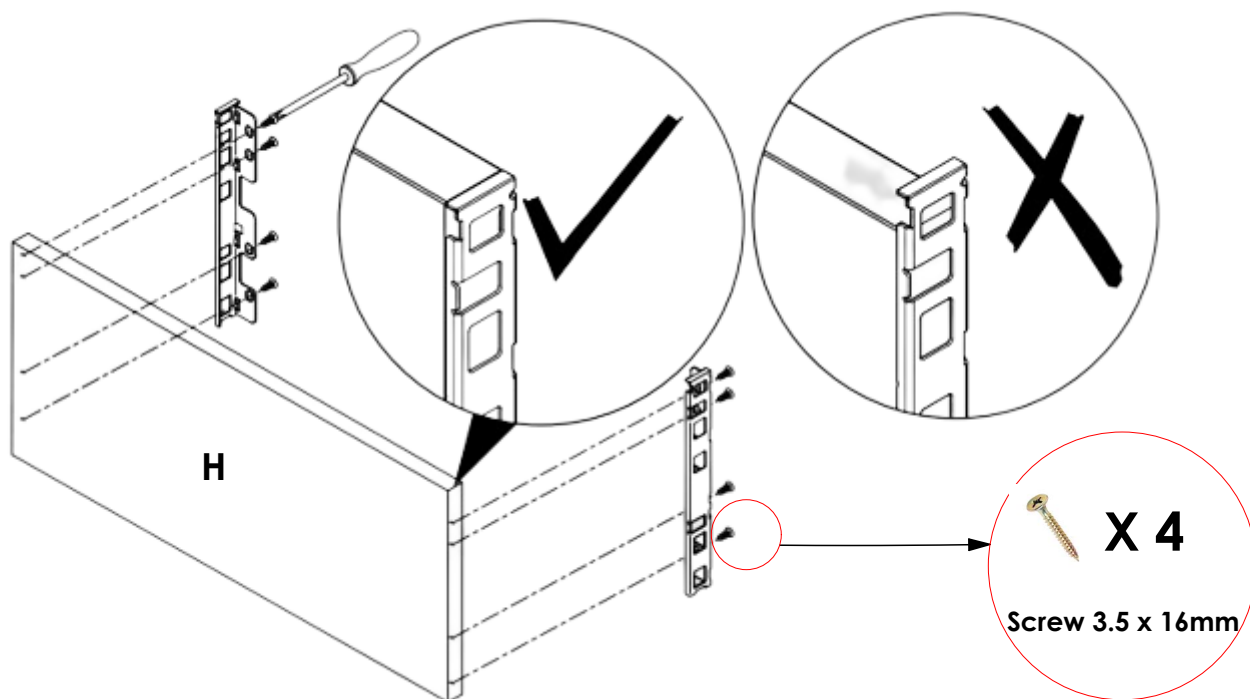

Place the Back Fixing Brackets in the shown positions on Panel **H**.

## STEP 2

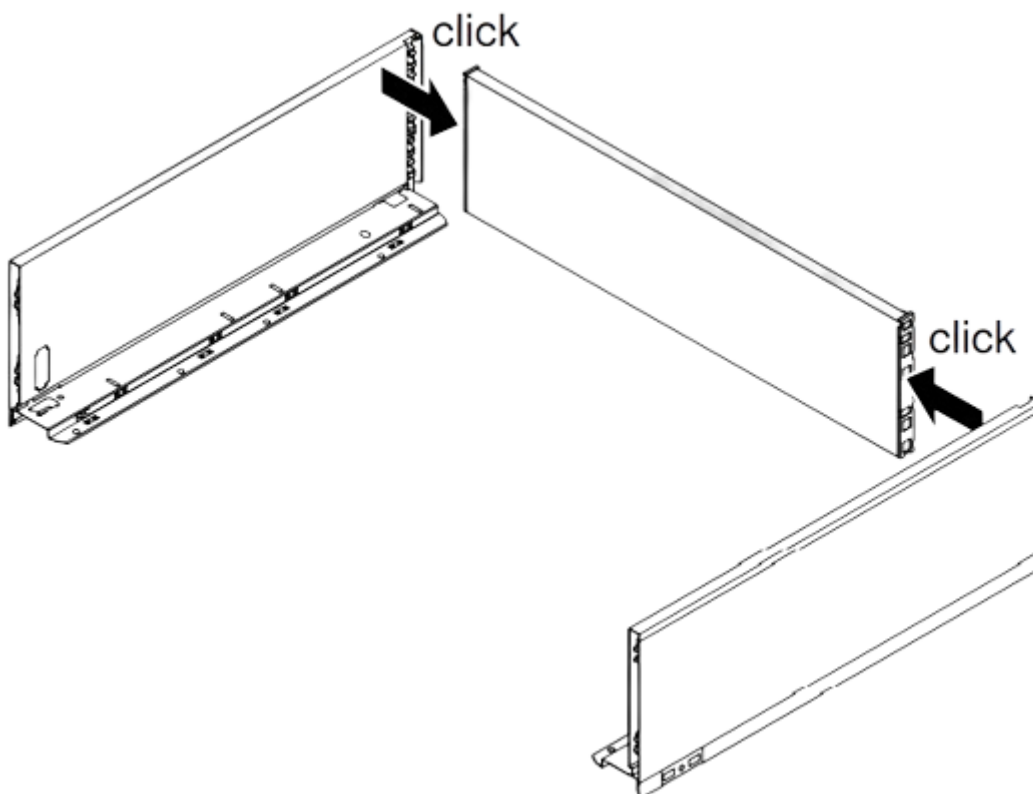

Connect the **Legrabox Drawer Sides** with panel **H** as shown. Do this by snapping the **Back Fixing plates** into the **protrusions** at the back of the **Drawer Sides**.

## STEP 3

Follow step by step to fix the front section and cross gallery for inner draw as illustrated below.

