PG BISON

GEDI FLOATING MEDIA UNIT 1800MM

COMPONENTS

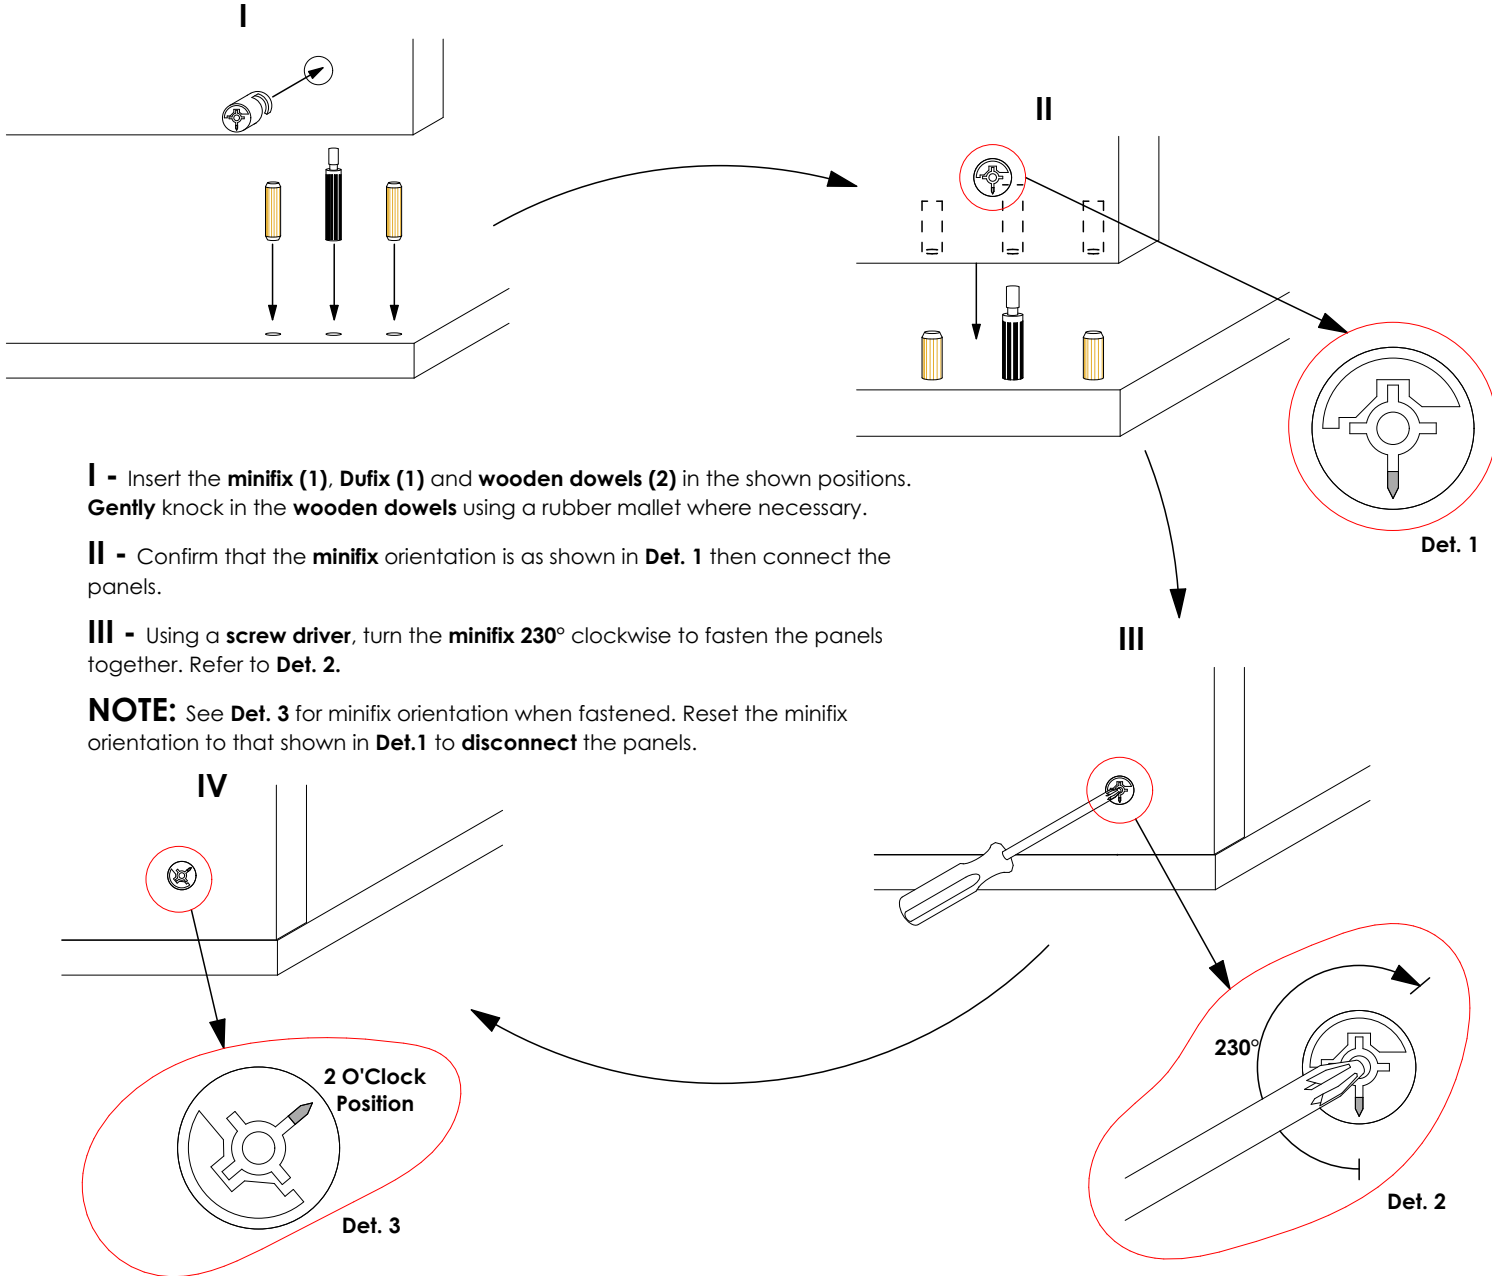| PART NO.	DESCRIPTION	QTY
A	Top	1
B	Floor Bottom	1
C	Visible side left	1
D	Visible side Right	1
E,F,G	Adjustable shelf	3
H,I	Partition	2
J,K	Door Flat Panel	2

HARDWARE

ITEM	IMAGE	QTY
Sys5 Cam 3000 15 x 14 mm		16
Sys5 Quickfit TL2 Dowel 8 x 34		16
Wooden Dowel Titus 8 x 30 mm		32
APC 6 Hanger Kit		2
110 Degree Overlay Hinge		4
Shelf Support Flipper 14mm Kit		8
Screws 4.0 x50MM		8
Nail In Anchor		8

1800

429.8

385
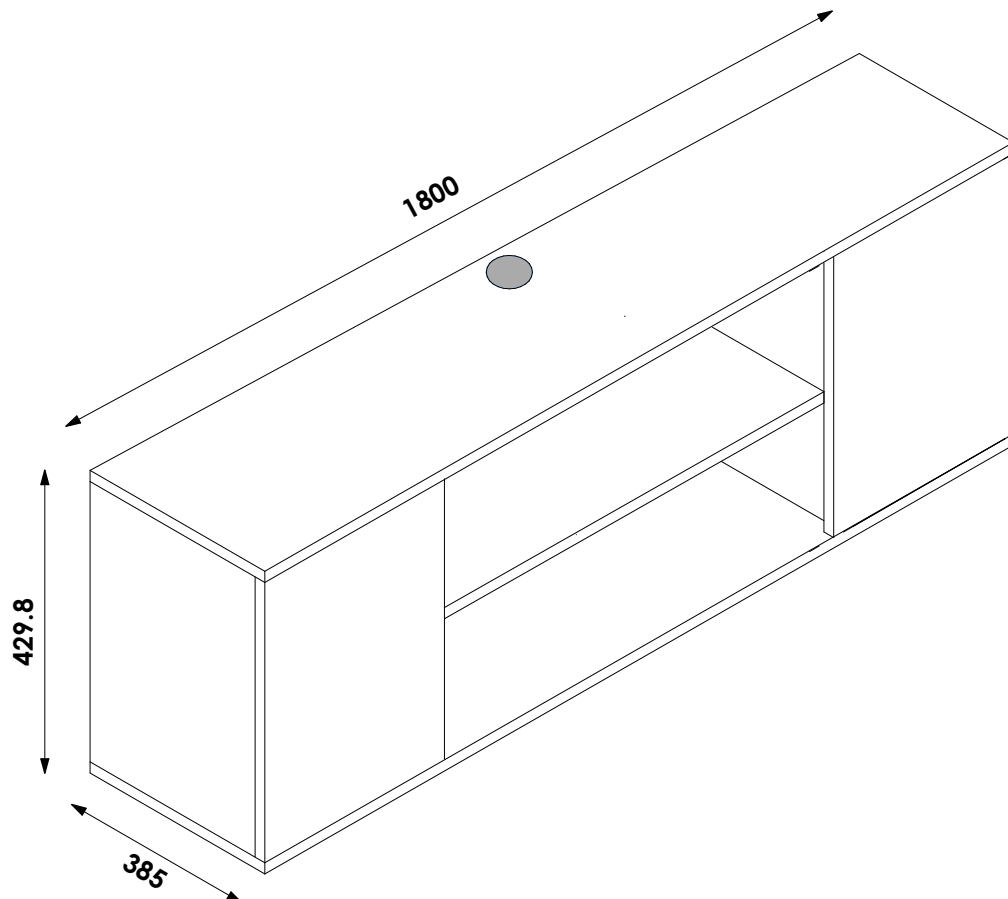
GENERAL INSTRUCTIONS

1. Confirm that all panels (11) are in the package before assembling.

2. Check the white sticker on each panel for the labelling (A,B,C,D,E,F,G,H,I,J&K).

3. Ensure that the panels are laid on a non-abrasive surface when assembling.

4. Note that all panel connections are done using the system described below.
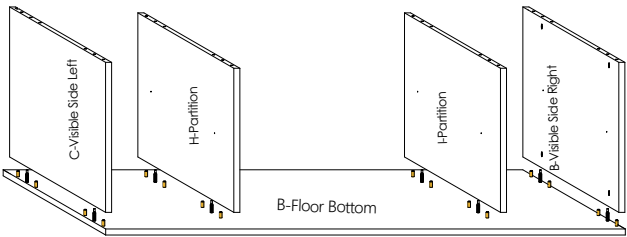
PANEL CONNECTION AND FASTENING

I

II

Det. 1

I - Insert the **minifix (1)**, **Dufix (1)** and **wooden dowels (2)** in the shown positions. **Gently** knock in the **wooden dowels** using a rubber mallet where necessary.

II - Confirm that the **minifix** orientation is as shown in **Det. 1** then connect the panels.

III - Using a **screw driver**, turn the **minifix 230°** clockwise to fasten the panels together. Refer to **Det. 2**.

NOTE: See **Det. 3** for minifix orientation when fastened. Reset the minifix orientation to that shown in **Det.1** to **disconnect** the panels.

III

IV

2 O'Clock Position

Det. 3

230°

Det. 2

For an easy and enjoyable assembly:

Please read the assembly chart completely.Remove all the parts from the carton box and place them on a smooth surface. Make sure you have exactly all the parts and tools listed in the chart. Start assembling the products following the steps on the chart. Please keep the assembly chart for future reference.
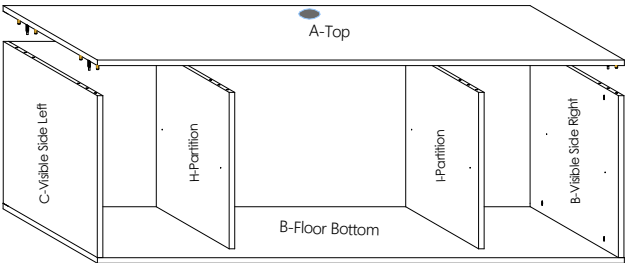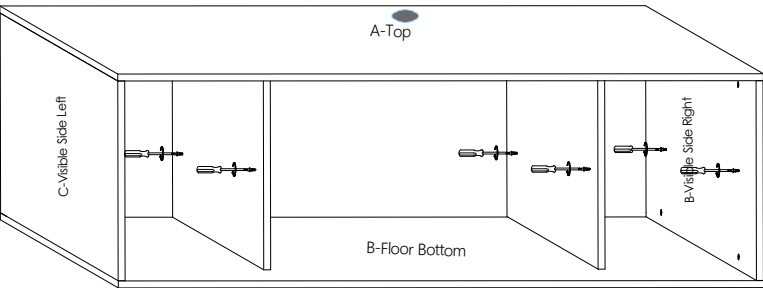
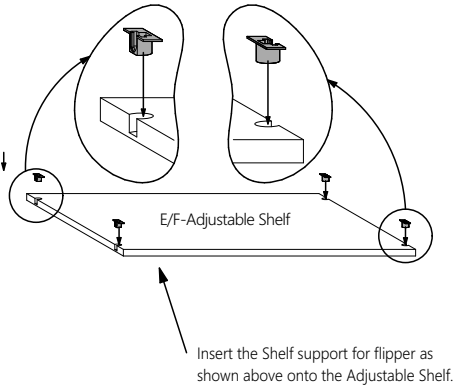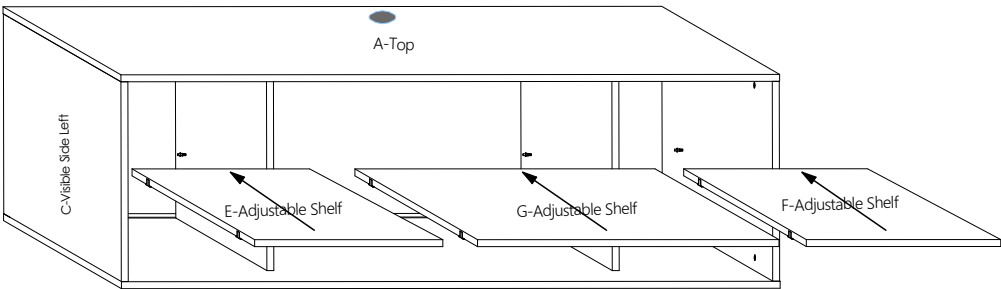**TWO PERSON ASSEMBLY REQUIRED.**

STEP 1

C-Visible Side Left
H-Partition
I-Partition
B-Visible Side Right
B-Floor Bottom

STEP 2

A-Top
C-Visible Side Left
H-Partition
I-Partition
B-Visible Side Right
B-Floor Bottom

STEP 3

A-Top
C-Visible Side Left
B-Visible Side Right
B-Floor Bottom

STEP 4

E/F-Adjustable Shelf

Insert the Shelf support for flipper as shown above onto the Adjustable Shelf.

STEP 5

A-Top
C-Visible Side Left
E-Adjustable Shelf
G-Adjustable Shelf
F-Adjustable Shelf
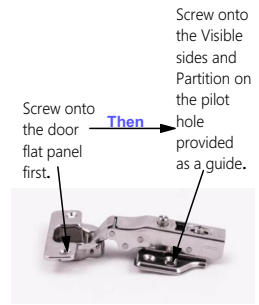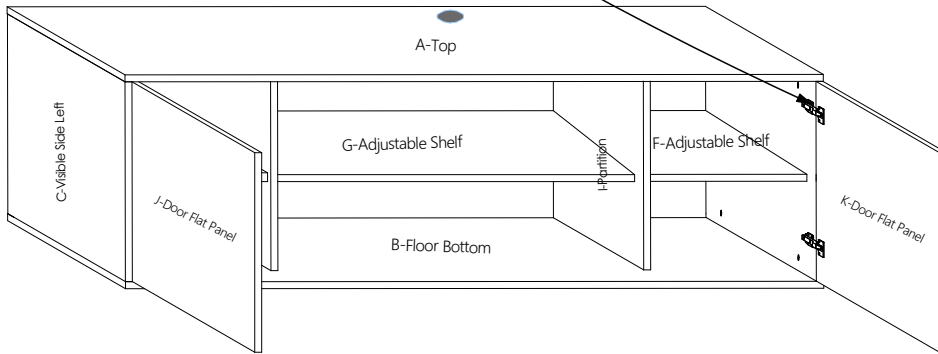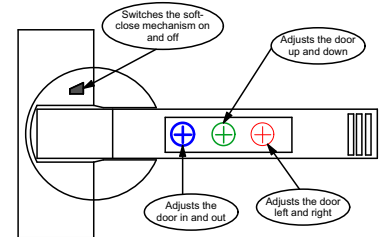
ASSEMBLY SHEET - GEDI FLOATING MEDIA UNIT 1800MM

STEP 6

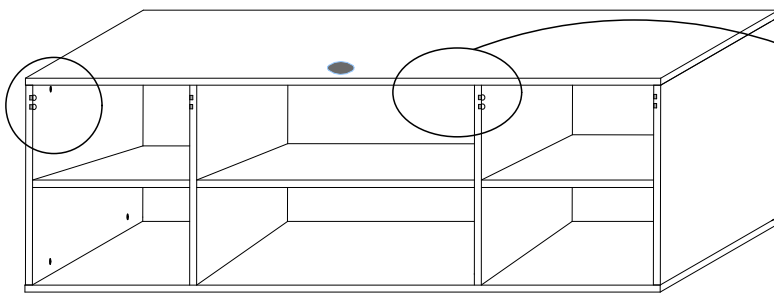Screw the hinge onto the holes provided using a screw driver and use **16mm Screws.**

Screw onto the Visible sides and Partition on the pilot hole provided as a guide.

Screw onto the door flat panel first. **Then**

A-Top

C-Visible Side Left

J-Door Flat Panel

G-Adjustable Shelf

I-Partition

F-Adjustable Shelf

K-Door Flat Panel

B-Floor Bottom

HINGE ADJUSTMENT DETAILS

Switches the soft-close mechanism on and off

Adjusts the door up and down

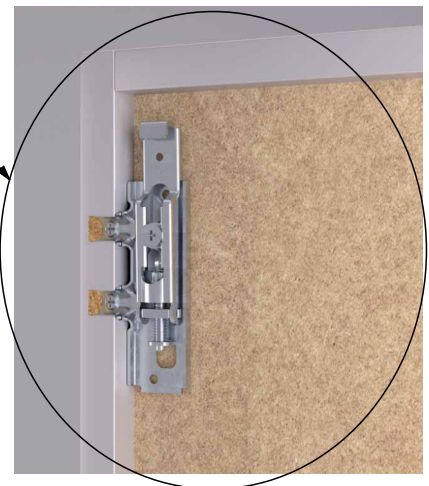Adjusts the door in and out

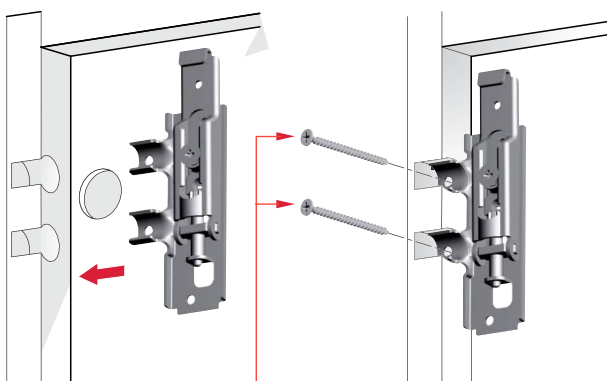Adjusts the door left and right

STEP 7

APC 6 INSTALLATION GUIDE

BACK SIDE OF THE GEDI FLOATING UNIT

INSTALLATION UNDER THE CABINET TOP
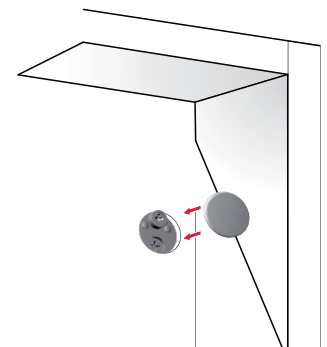
recommended fixing countersunk head wood screws Ø3x40 mm

INSTALLATION ON THE WALL
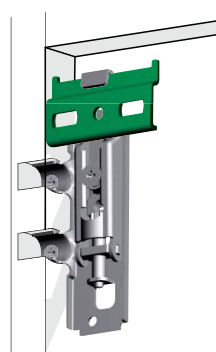
COVER CAP INSERTING

It is the responsibility of the customer:
- to ensure that the wall is of a suitable quality to hold the unit fixing in place.
- to use the proper hardware fittings according to the construction of the wall.

ADJUSTMENTS

Slots for cross
PZ2 screwdriver

Slot for in-depth
adjustment

Slot for vertical
adjustment

31 mm

18 mm

16 mm min.

WALL