PG BISON

QUICKLOC FLATPAX KITCHEN RANGE
ASSEMBLY GUIDE
TANDEMBOX ANTARO INNER DRAWER BOX HEIGHT 3

H - Drawer Box Back

G - Drawer Box Bottom
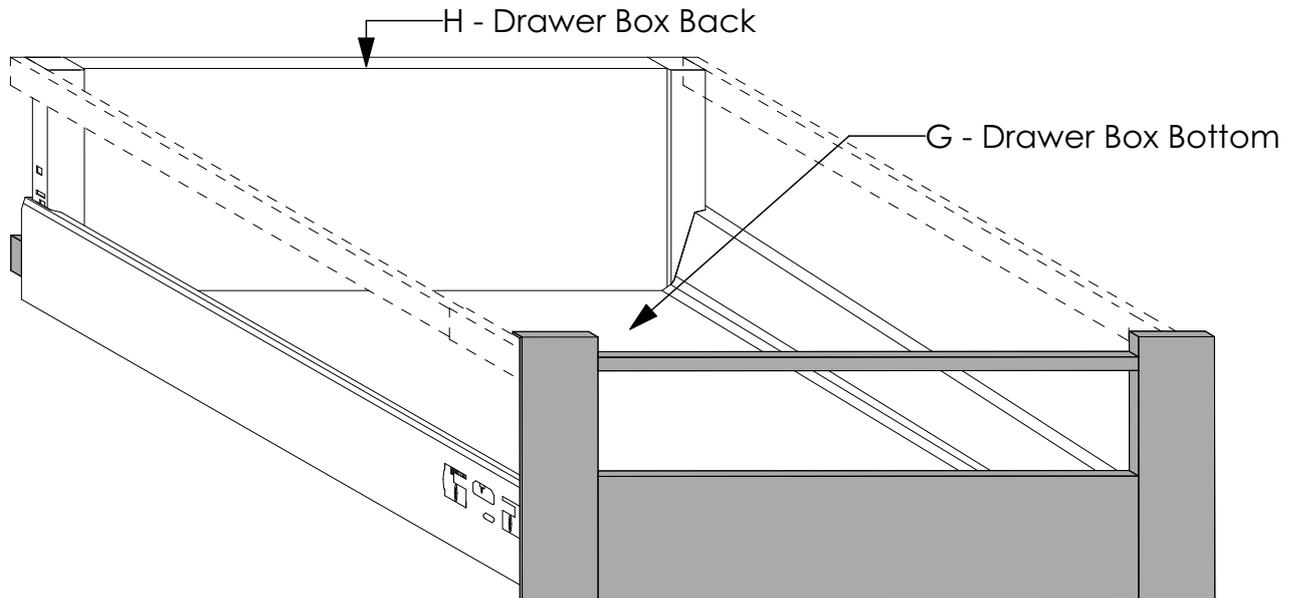
HARDWARE

TOTAL NUMBER OF PANELS: 2

| PRODUCT	QTY	IMAGE
Tandembox Antaro Back Fixing Bracket Left/Right	1 Pair	
Tandembox Antaro Drawer Sides Left/Right	1 Pair	
Screw 3.5 x 16mm	24	
Tandembox Antaro Front Fixing Bracket	2	
Tandembox Antaro Runners Left/Right	1 Pair	
Blum Cover Cap for Drawer Sides	2	
Longside Gallery Rail Left/Right	1 Pair	
Tandembox cross gallery for inner draw	1	

TOOLS REQUIRED

Screw Driver (Pozidriv Head)

Cordless Drill
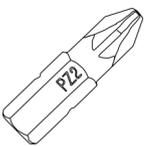
Pozi Bit (PZ2)

Rubber Mallet

GENERAL INSTRUCTIONS

1. Confirm that all panels (2) and hardware are in the package before assembling.

2. Check the white sticker on each panel for the labelling (G & H).

3. Ensure that the panels are laid on a non-abrasive surface when assembling.

1

STEP 1

Place the Back Fixing Brackets in the shown positions on Panel **H.**

# STEP 2

X 4
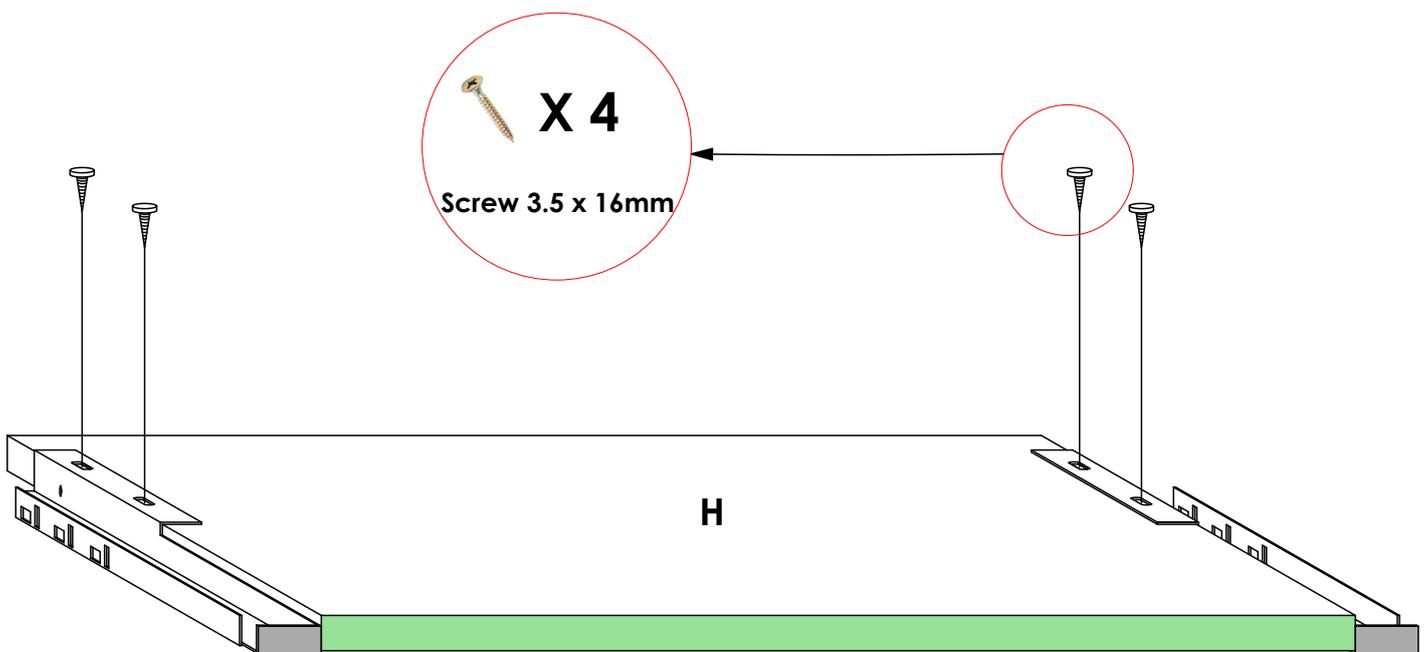
Screw 3.5 x 16mm

First, confirm that the shaded areas are **flush** with each other. Then, Secure the **Back Fixing Brackets** onto panel **H** using **screw 3.5 x 16** in the shown positions.

PG BISON

STEP 3

H
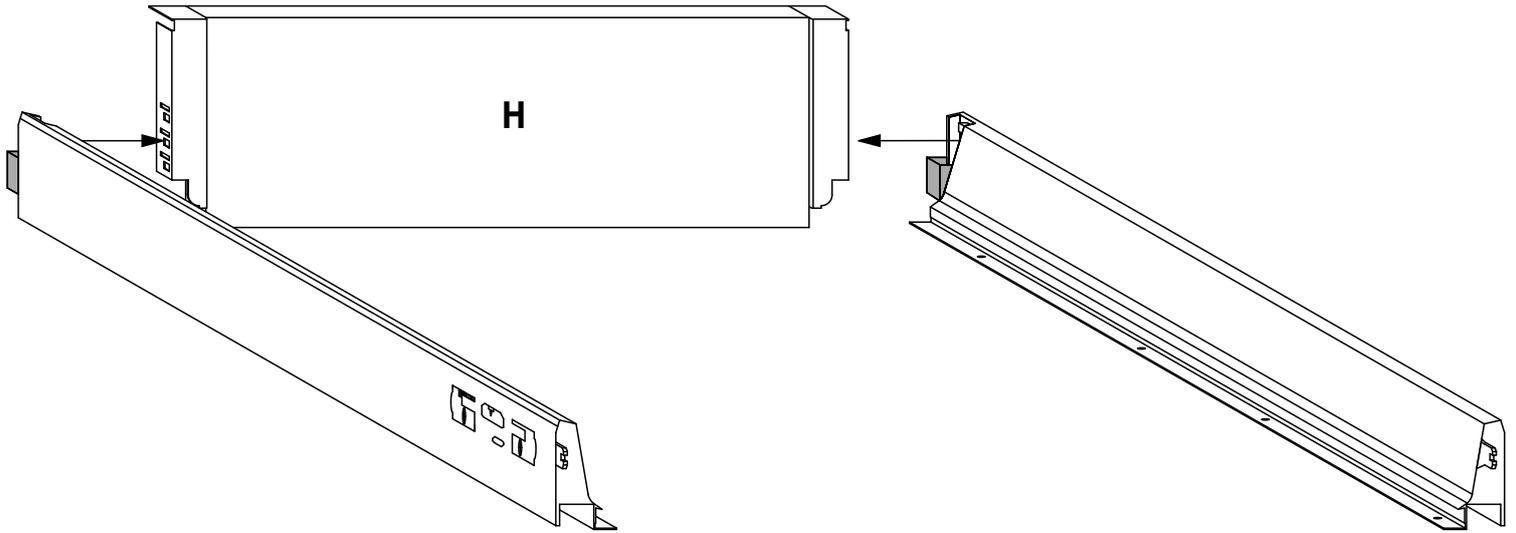
Connect the **Antaro Drawer Sides** with panel **H** as shown. Do this by snapping the **Back Fixing plates** into the **protrusions** at the back of the **Antaro Drawer Sides.**

STEP 4

H

G
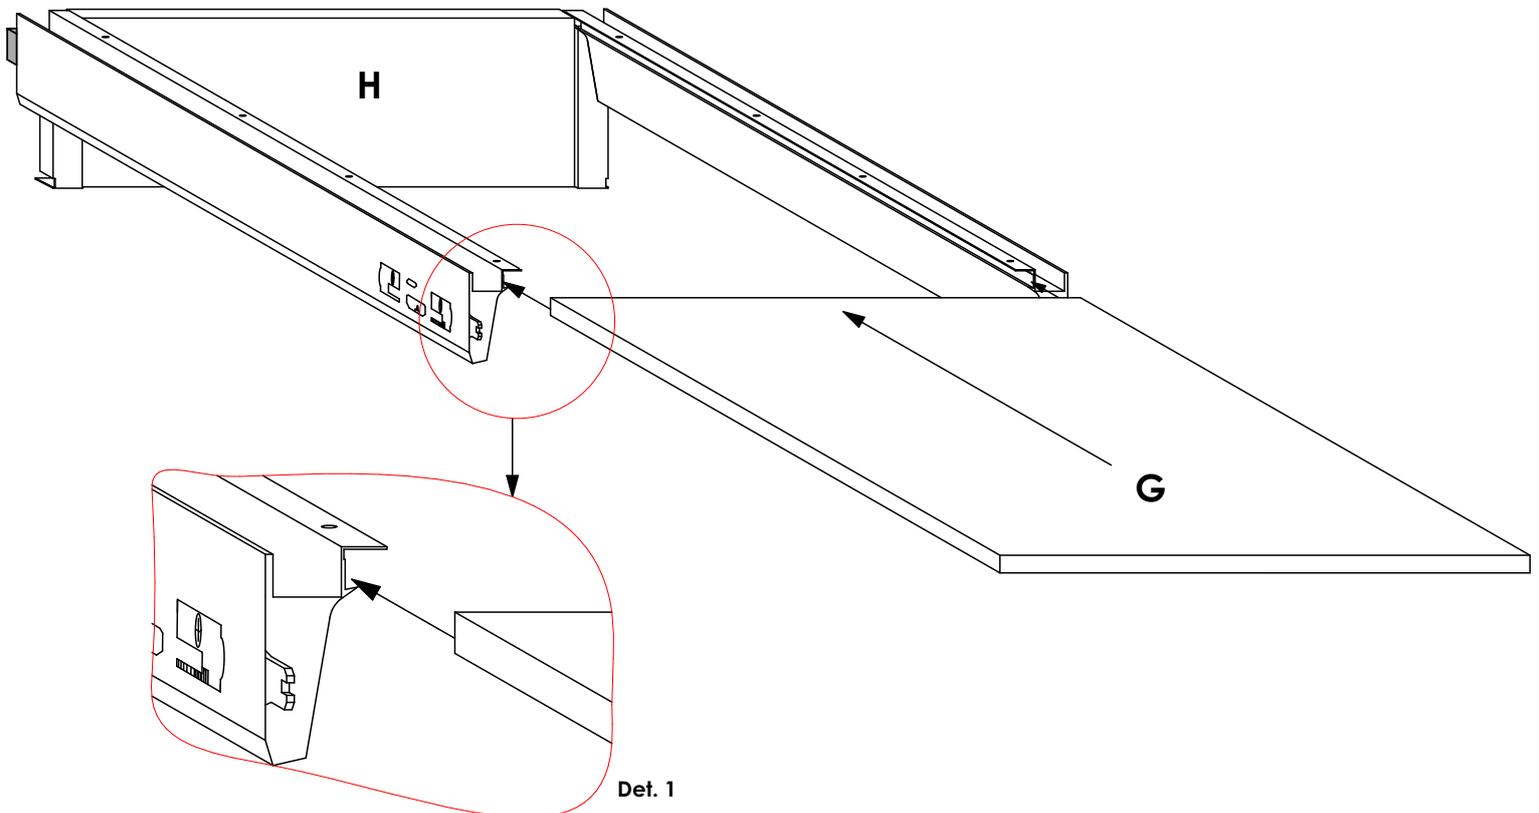
Det. 1

Slide in panel **G** into the Antaro Drawer Sides Until it hits panel **H**. Refer to **Det. 1.**

PG BISON

STEP 5

X 8
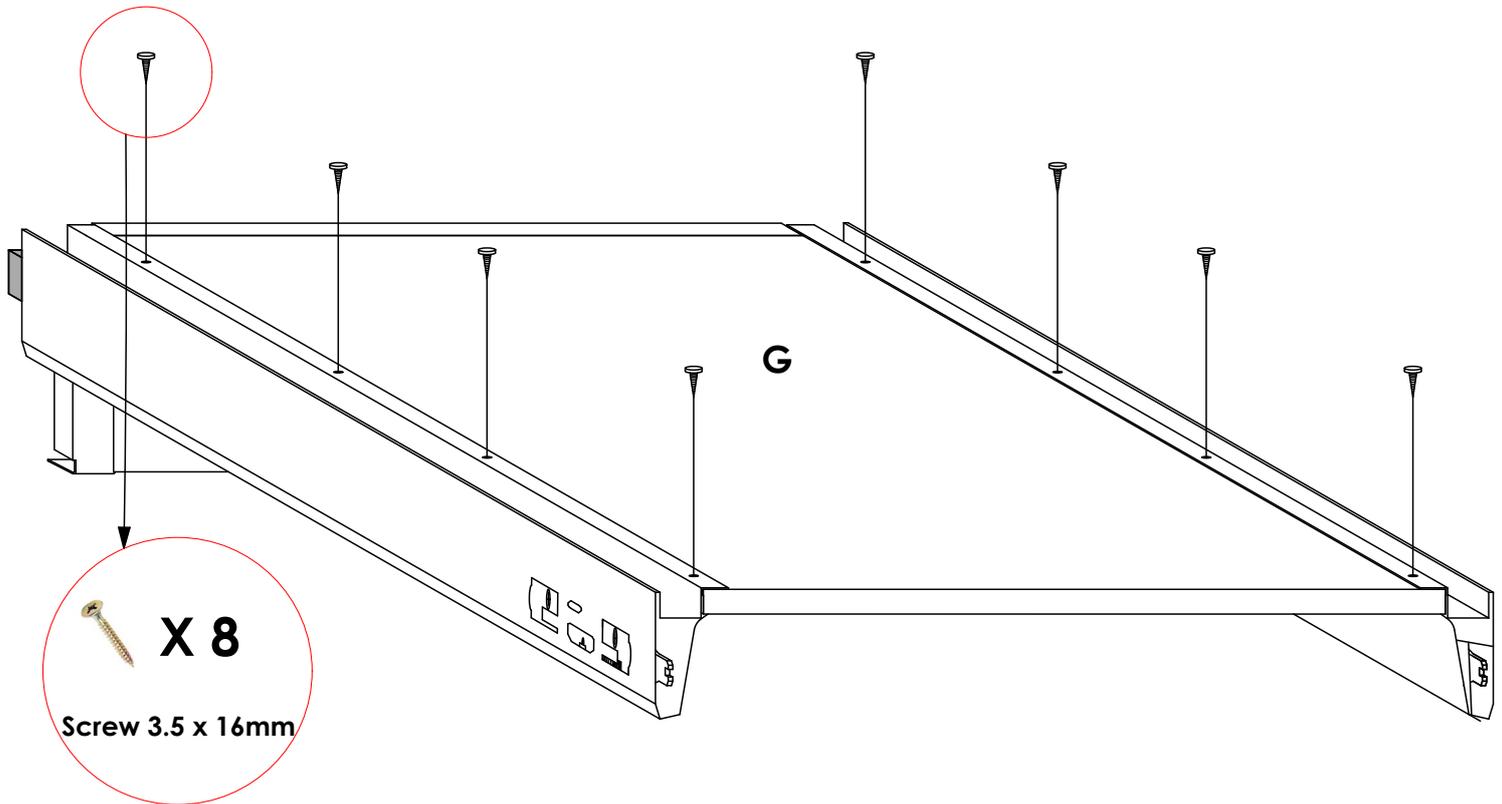
Screw 3.5 x 16mm

Using **Screw 3.5 x 16mm**, secure panel **G** in the shown positions.

STEP 6
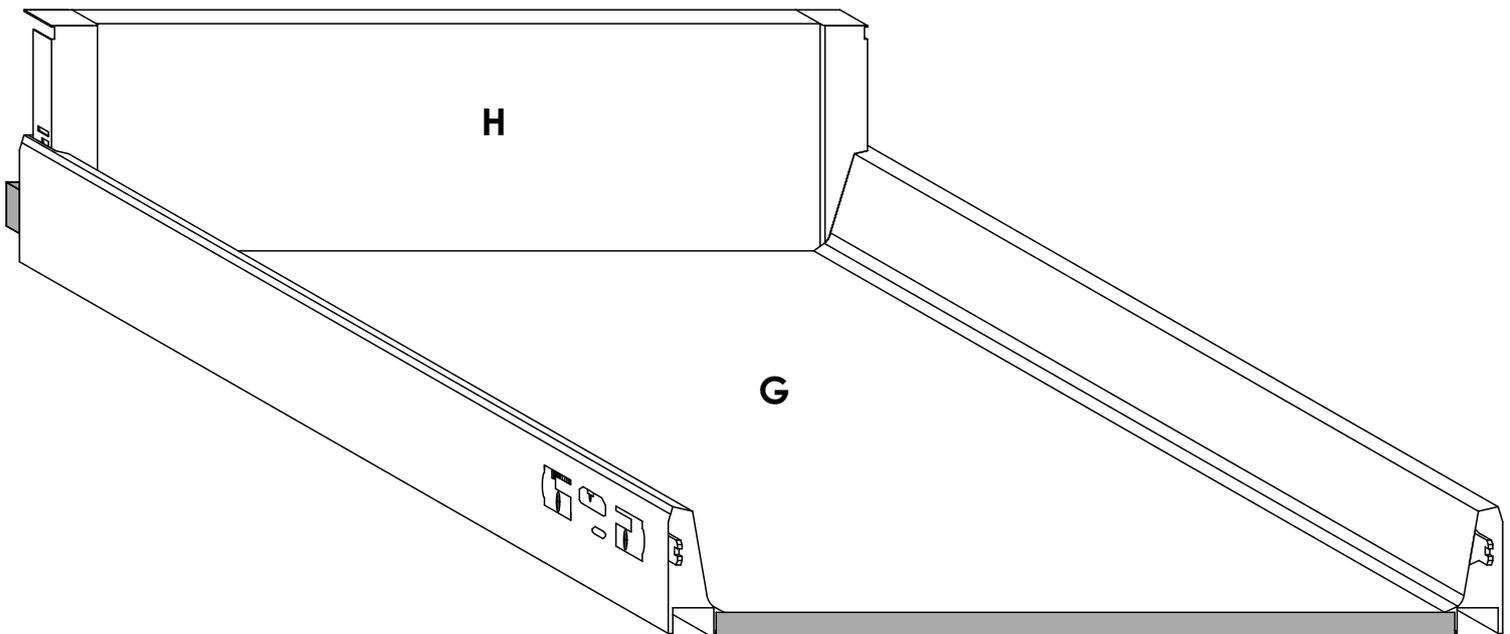
Confirm that the shaded edge on panel **G** is **flush** with the **front** of the **Antaro Drawer Sides**. If not, loosen the screws securing it and adjust accordingly.

PG BISON

STEP 7

Follow step by step to fix the front section and cross gallery for inner draw as illustrated below.

① ② ③ ④ ⑤ ⑥ ⑦ ⑧

click

PG BISON