




BOFA WALL CUBE

COMPONENTS


| PART NO. | DESCRIPTION | QTY |
|----------|--------------------|-----|
| A | Top | 1 |
| B | Floor Bottom | 1 |
| C | Visible Side Left | 1 |
| D | Visible Side Right | 1 |
| E | Back | 1 |
| F,G | Rails | 2 |

HARDWARE

| ITEM | IMAGE | QTY |
|----------------|---|-----|
| Minifix |  | 10 |
| Dufix |  | 10 |
| Dowel |  | 20 |
| Nail in Anchor | | 2 |

TOOLS REQUIRED


| | |
|----------------|---|
| Screw driver |  |
| Mallet |  |
| Measuring tape |  |

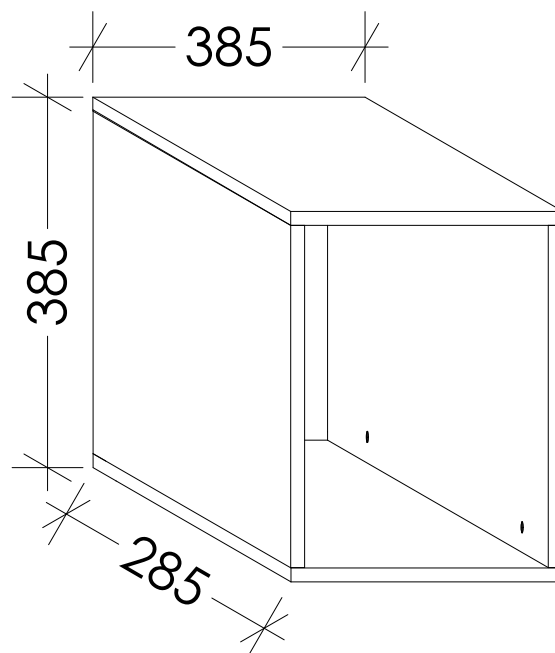

GENERAL INSTRUCTIONS

1. Confirm that all panels (7) are in the package before assembling.
2. Check the white sticker on each panel for the labelling (A,B,C,D,E,F&G).
3. Ensure that the panels are laid on a non-abrasive surface when assembling.
4. Note that all panel connections are done using the system described below.

PANEL CONNECTION AND FASTENING

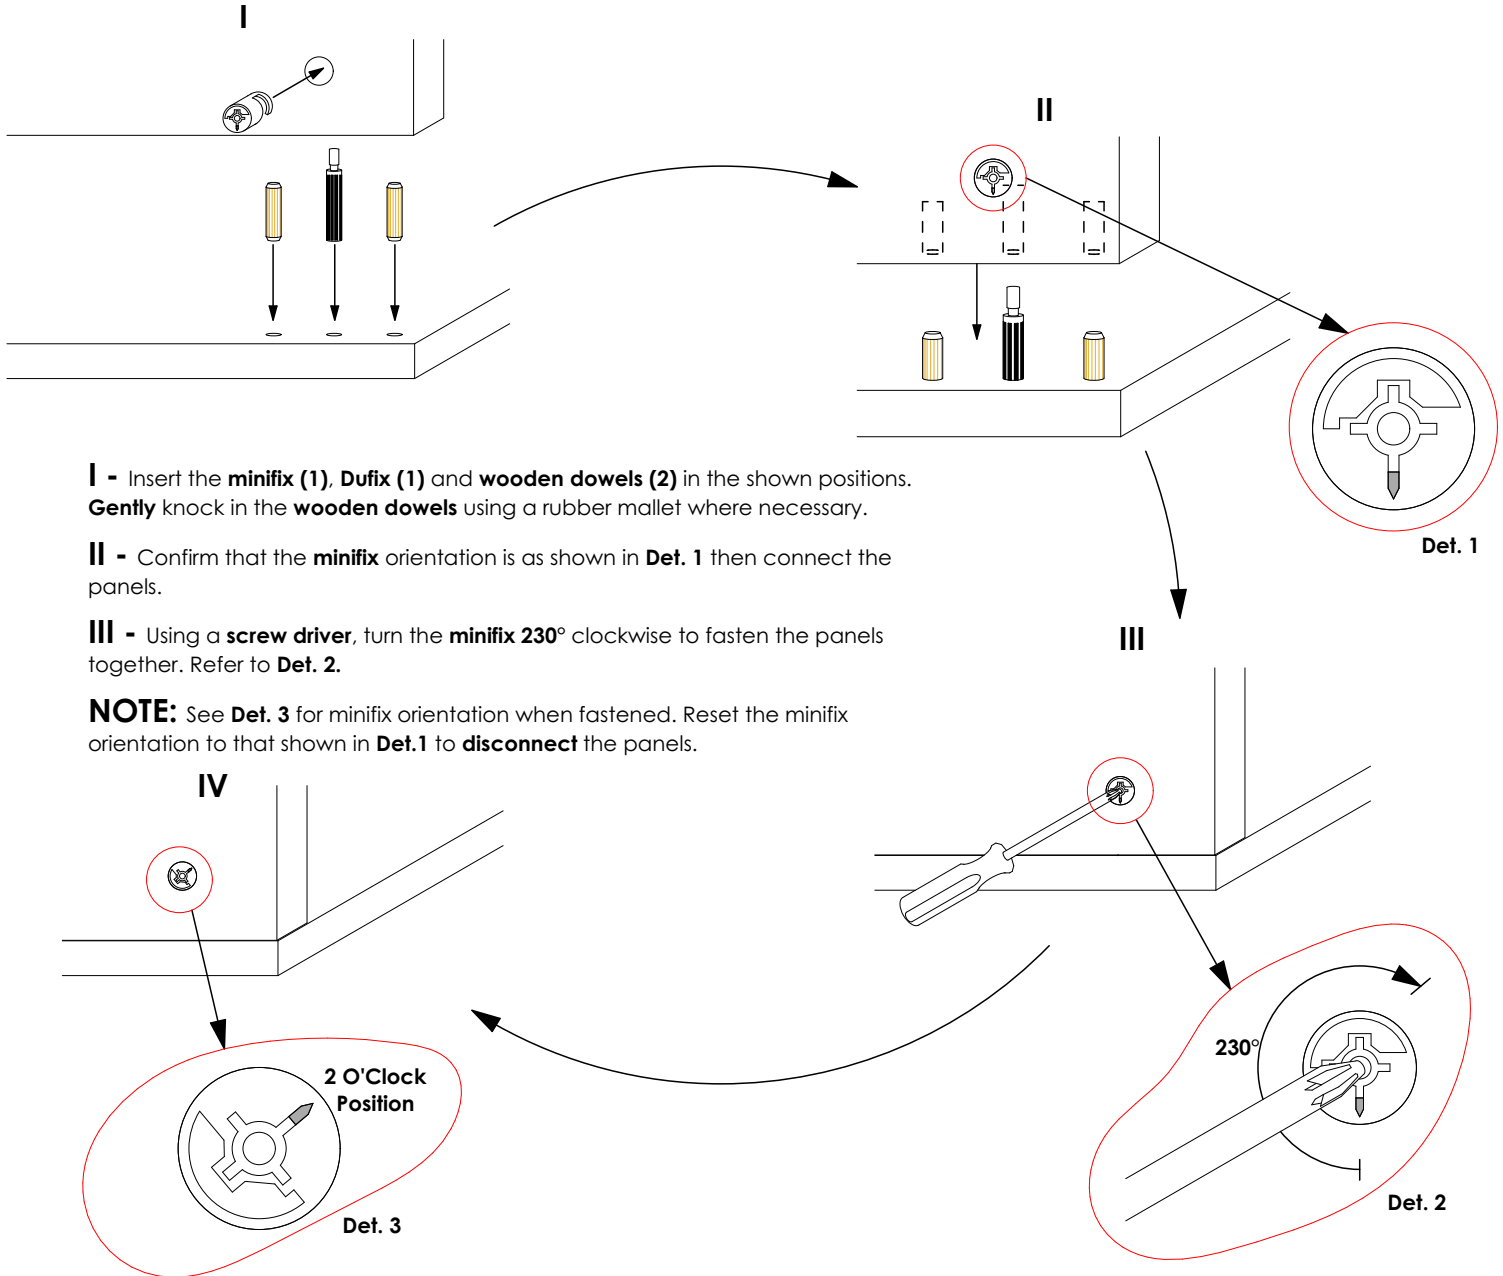


For an easy and enjoyable assembly:

Please read the assembly chart completely. Remove all the parts from the carton box and place them on a smooth surface. Make sure you have exactly all the parts and tools listed in the chart. Start assembling the products following the steps on the chart. Please keep the assembly chart for future reference.




**TWO PERSON
ASSEMBLY
REQUIRED.**

STEP 1


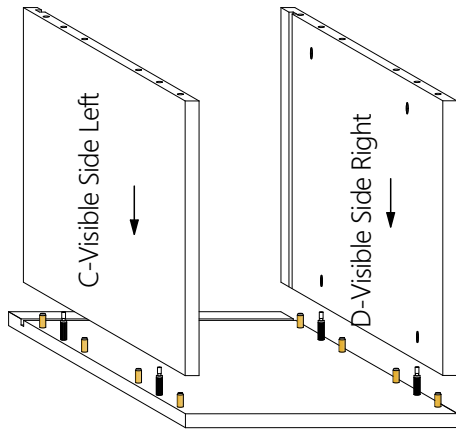


STEP 2


Note that the rail has been cut edge 45

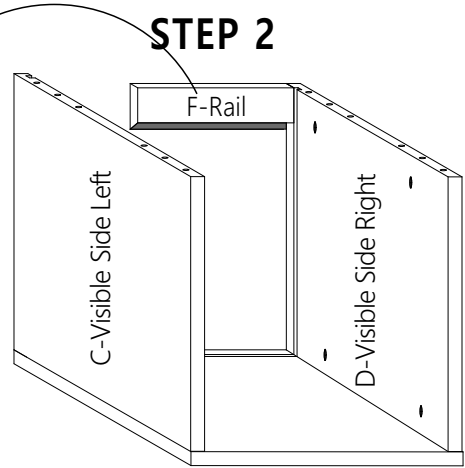



STEP 3

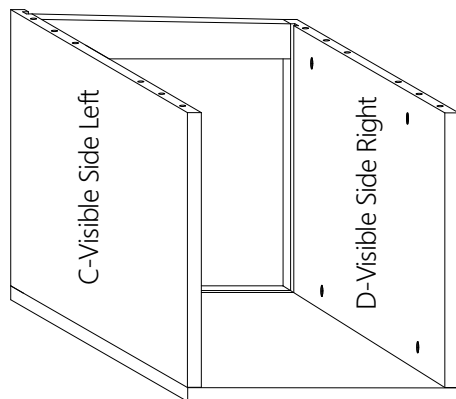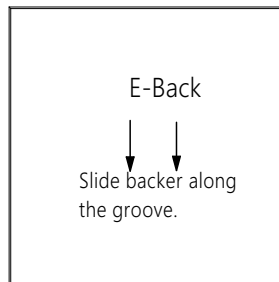

STEP 4

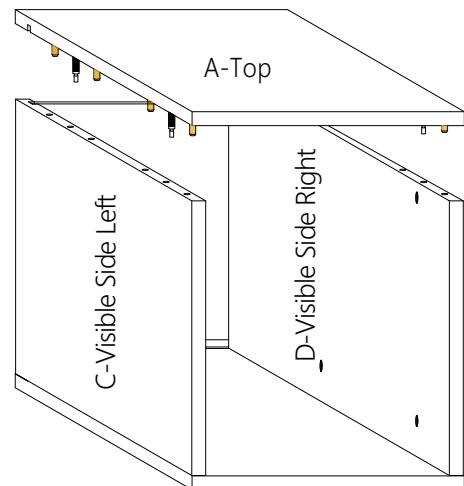

STEP 5

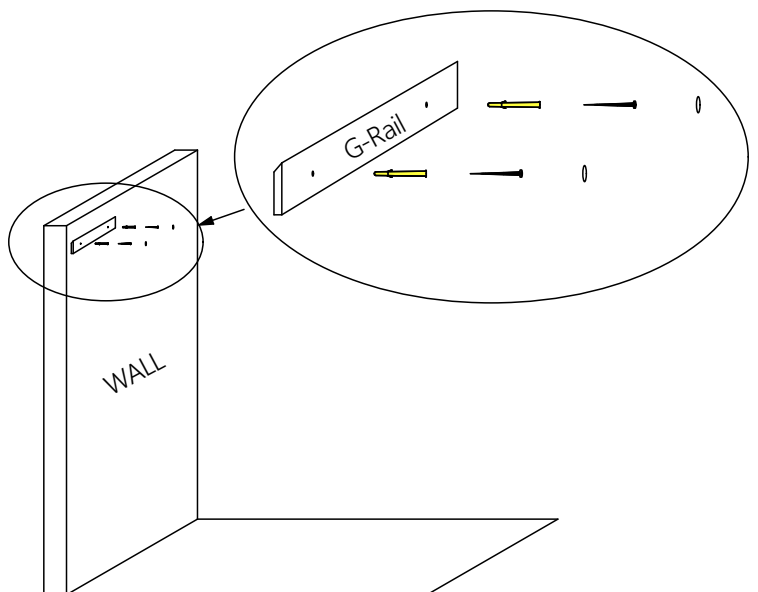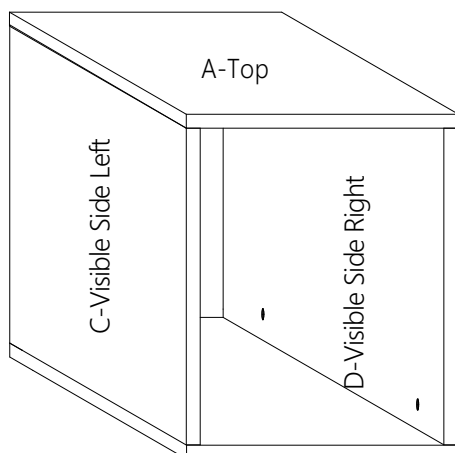

Separate the yellow plug from the nail in anchor and using a rubber mallet gently knock in the plug into the holes drilled in ,then screw the rail onto the wall as shown .