




QUICKLOC FLATPAX KITCHEN RANGE ASSEMBLY GUIDE DTC MAGIC STAR DRAWER BOX HEIGHT 3

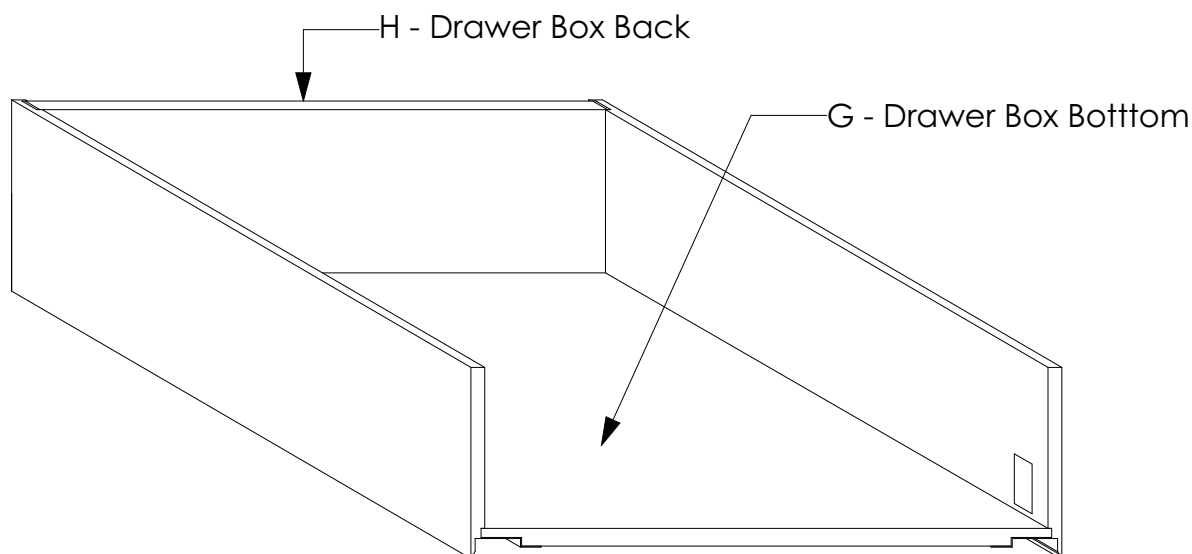

HARDWARE


TOTAL NUMBER OF PANELS: 2

PRODUCT	QTY	IMAGE
Back Fixing Bracket Left /Right	1 Pair	
Drawer Sides Left/Right	1 Pair	
Screw 3.5 x 16mm	24	
Front Fixing Bracket	2	
Runners Left/Right	1 Pair	
Cover Cap for Drawer Sides	2 of each	


TOOLS REQUIRED

				GENERAL INSTRUCTIONS
Screw Driver (Pozi driv Head)	Cordless Drill	Pozi Bit (PZ2)	Rubber Mallet	1. Confirm that all panels (2) and hardware are in the package before assembling. 2. Check the white sticker on each panel for the labelling (G & H). 3. Ensure that the panels are laid on a non-abrasive surface when assembling.


Drawer Assembly

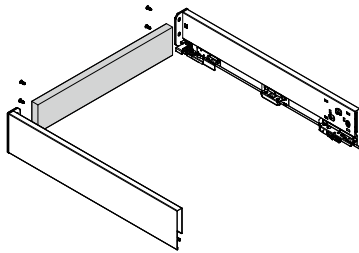


Back assembly

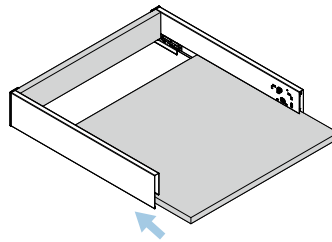


Bottom assembly

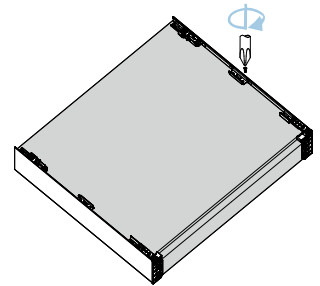


Fix screws

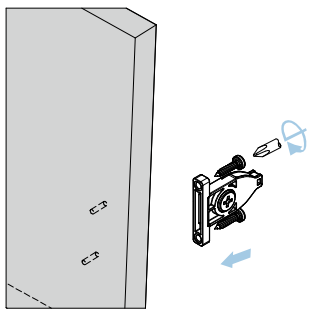


Front assembly

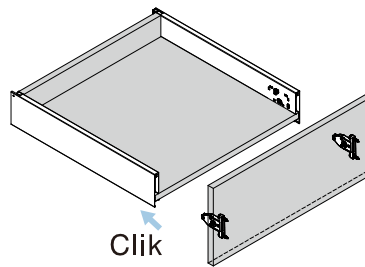

Click

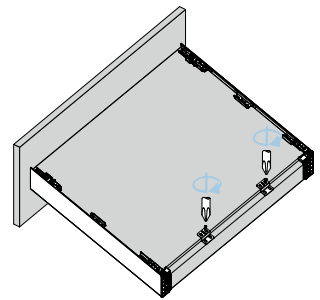


Fixing-brackets assembly

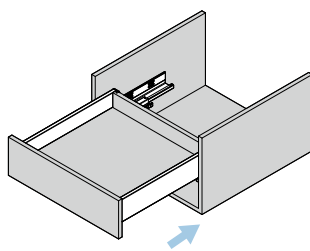


Slide into the cabinet


Adjustments for Lower/Medium Drawer(M/K Height)

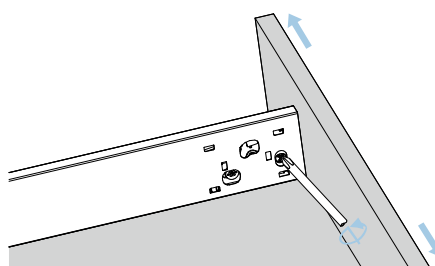

Left&right adjustment

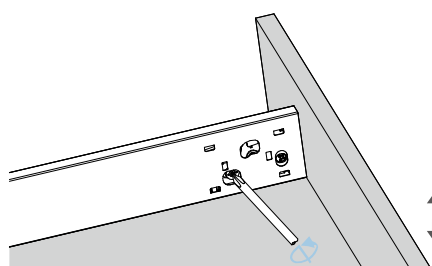


Up&down adjustment

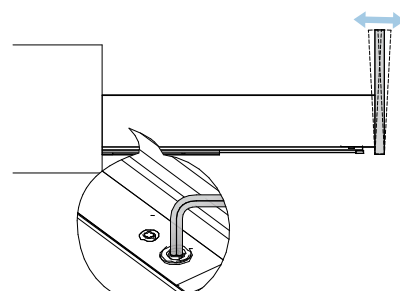


Tilt adjustment (by M3 Allen key)


Removal for Lower/Medium Drawer(M/K Height)

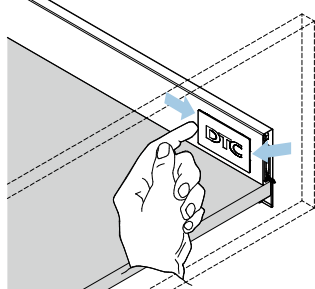

Tip up the cover and pull out

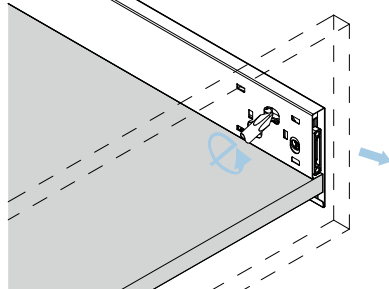

Turn screw driver to release the drawer front

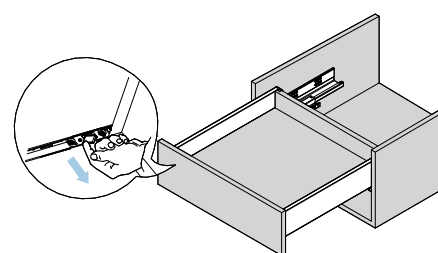

Press the locking device under drawer bottom and pull out the drawer

Adjustments for High Drawer/Super High Drawer (C/F Height)

