


FUNZI MEDIUM CABINET OPEN

COMPONENTS			
PART NO.	DESCRIPTION	QTY	
A	Тор	1	
В	Visible Side Left	1	
С	Visible Side Right	1	
D	Floor Bottom	1	
E,F	Back	2	
G,J	Shelf	2	
Н	Front Skirting	1	
I	Back Skirting	1	

HARDWARE			
ITEM	IMAGE	QTY	
Sys5 Cam 3000 15 x 14mm		20	
Sys5 Quickfit TL2 Dowel 8 x 34mm	T. St.	20	
Wooden Dowel Titus 8x30mm		40	
Rectangular White Pin		4	
shelf studs		8	


TOOLS REQUIRED		
Screw driver		
Mallet		
Measuring tape		

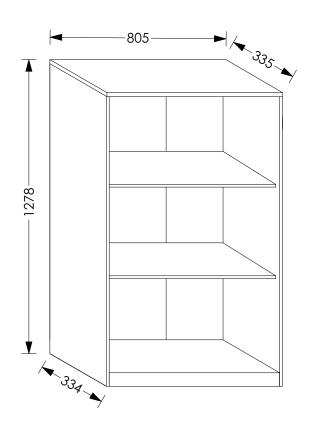

GENERAL INSTRUCTIONS

- 1. Confirm that all panels (10) are in the package before assembling.
- 2. Check the white sticker on each panel for the labelling (A,B,C,D,E,F,G,H,I&J).
- 3. Ensure that the panels are laid on a non-abrasive surface when assembling.
- 4. Note that all panel connections are done using the system described below.

PANEL CONNECTION AND FASTENING

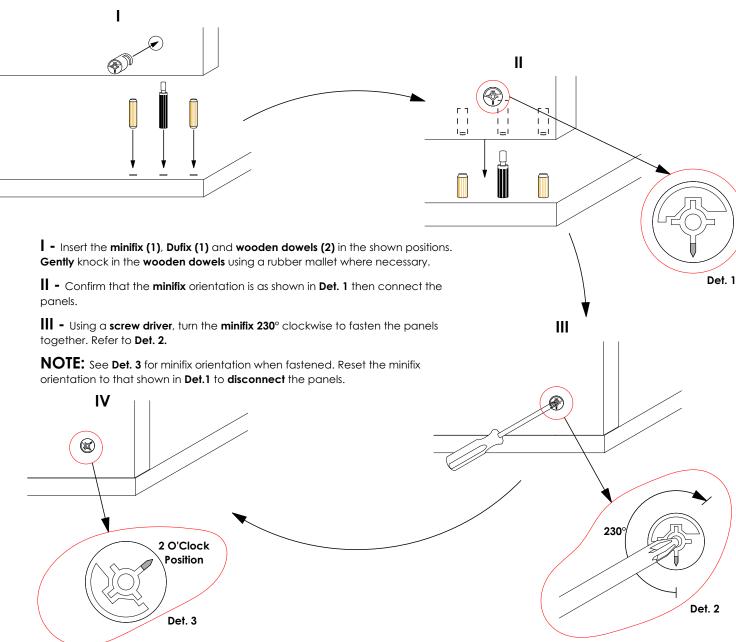


For an easy and enjoyable assembly:

Please read the assembly chart completely. Remove all the parts from the carton box and place them on a smooth surface. Make sure you have exactly all the parts and tools listed in the chart. Start assembling the products following the steps on the chart. Please keep the assembly chart for future reference.



REQUIRED.

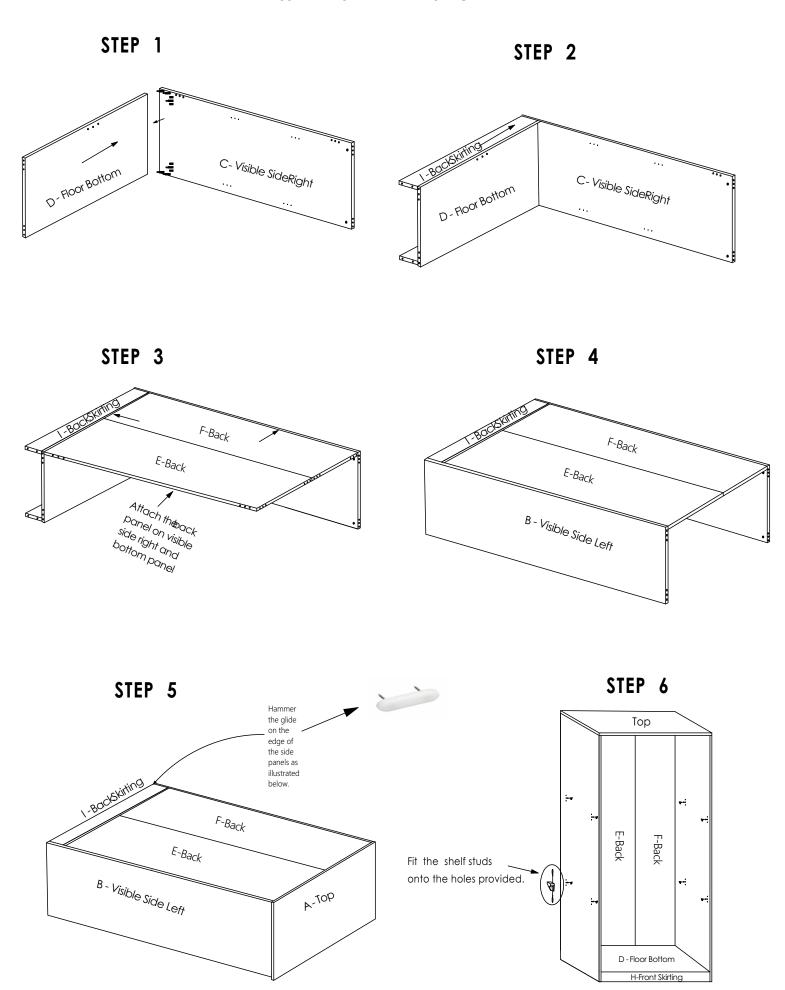

ASSEMBLY SHEET - MEDIUM CABINET

