

FUNZI SHORT CABINET OPEN

COMPONENTS


PART NO.	DESCRIPTION	QTY
A	Top	1
B	Visible Side Left	1
C	Visible Side Right	1
D	Floor Bottom	1
E,F	Back	2
G	Shelf	1
H	Front Skirting	1
I	Back Skirting	1

HARDWARE

ITEM	IMAGE	QTY
Sys5 Cam 3000 15 x 14mm		20
Sys5 Quickfit TL2 Dowel 8 x 34mm		20
Wooden Dowel Titus 8x30mm		40
Rectangular White Pin		4
shelf studs		4

TOOLS REQUIRED


Screw driver	
Mallet	
Measuring tape	

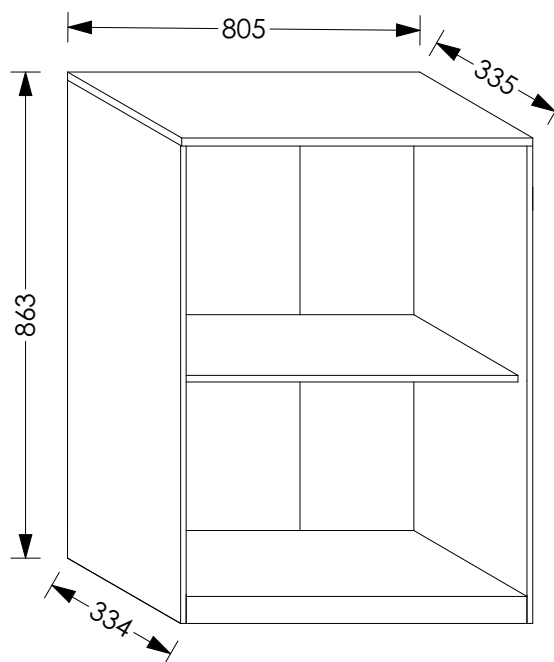

GENERAL INSTRUCTIONS

1. Confirm that all panels (9) are in the package before assembling.
2. Check the white sticker on each panel for the labelling (A,B,C,D,E,F,G,H&I).
3. Ensure that the panels are laid on a non-abrasive surface when assembling.
4. Note that all panel connections are done using the system described below.

PANEL CONNECTION AND FASTENING

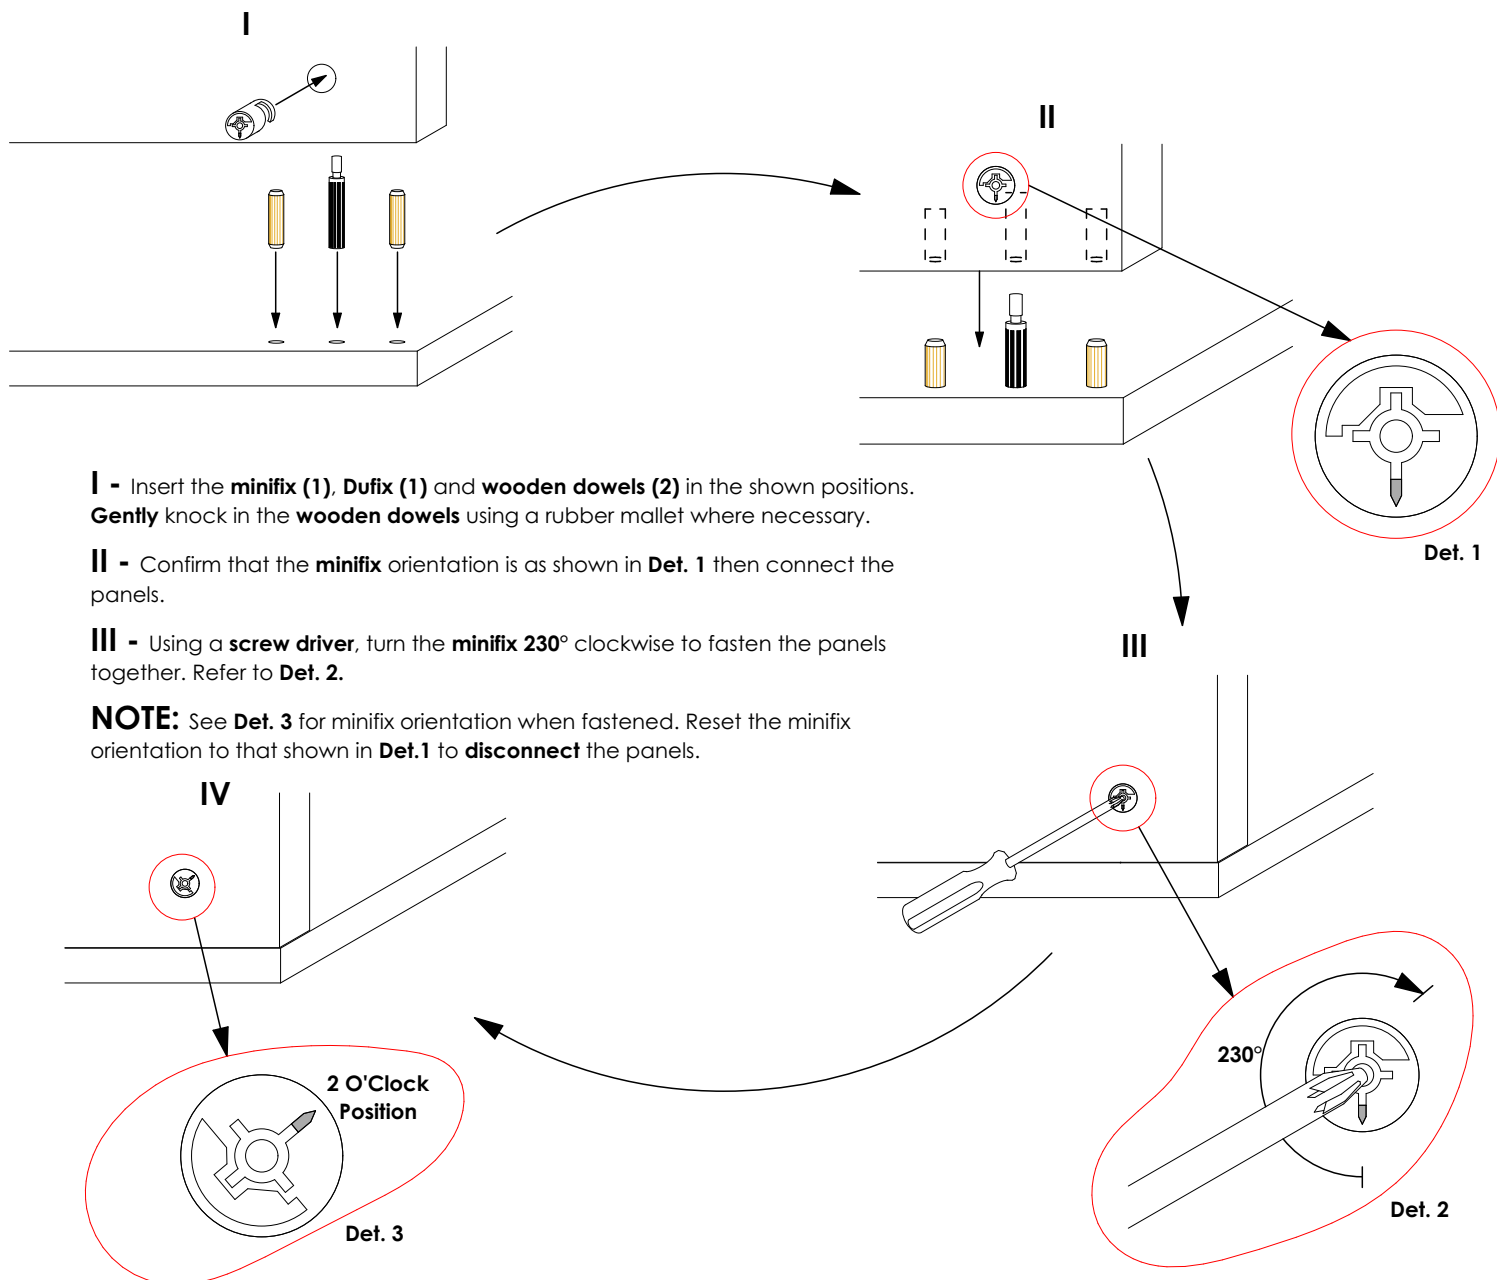

For an easy and enjoyable assembly:


Please read the assembly chart completely. Remove all the parts from the carton box and place them on a smooth surface. Make sure you have exactly all the parts and tools listed in the chart. Start assembling the products following the steps on the chart. Please keep the assembly chart for future reference.




**TWO PERSON
ASSEMBLY
REQUIRED.**

ASSEMBLY SHEET - SHORT CABINET


STEP 1

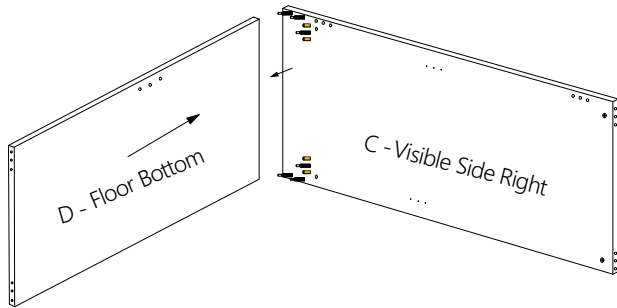


STEP 2

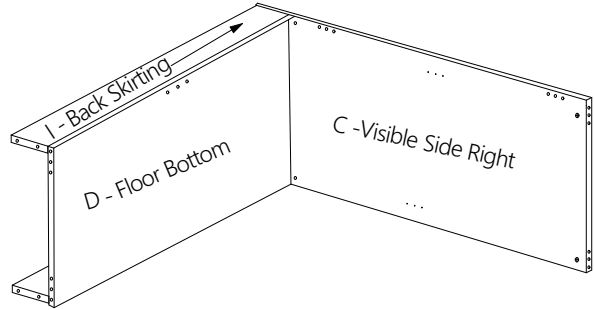


STEP 3

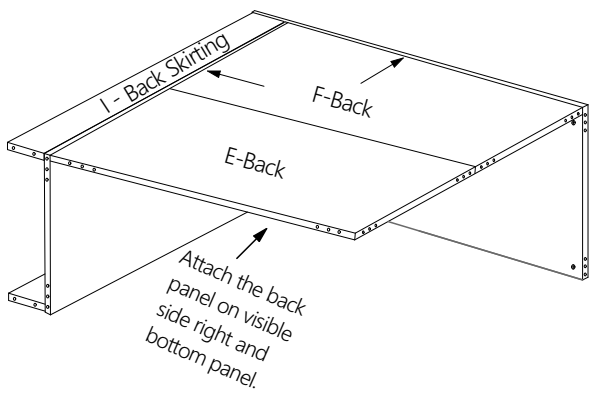

STEP 4

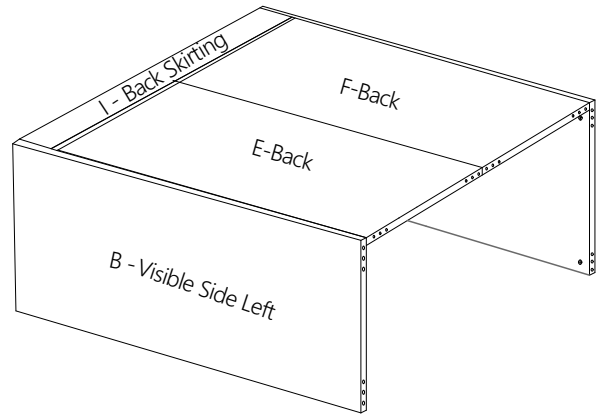


STEP 5

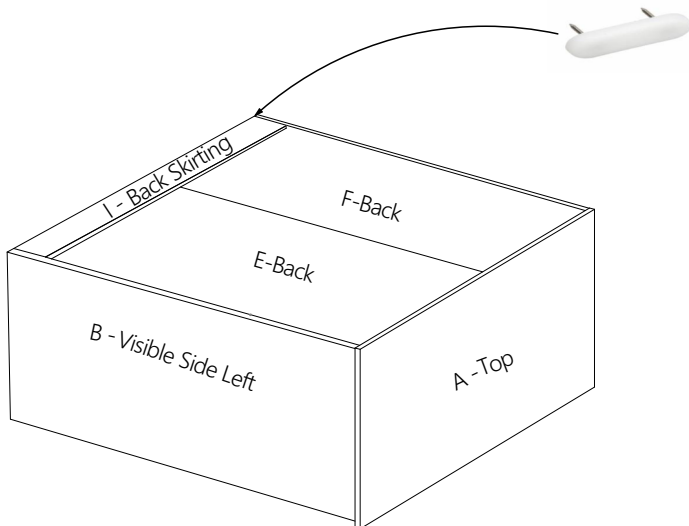

STEP 6

Fit the shelf studs onto the holes provided.

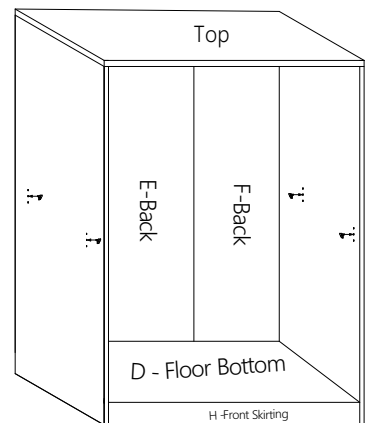

ASSEMBLY SHEET - SHORT CABINET

