


GEDI WALL FLAP CUBE 824mm

COMPONENTS		
PART NO .	DESCRIPTION	QTY
A	Top	1
B	Bottom	1
C	Visible side left	1
D	Visible side Right	1
E	Door Flat Panel	1

HARDWARE		
ITEM	IMAGE	QTY
Sys5 Cam 3000 15 x 14 mm		8
Sys5 Quickfit TL2 Dowel 8 x 34		8
Wooden Dowel Titus 8 x 30 mm		4
Screw Nail in Anchor 8 x 80mm Yellow		4
Screw 3.5 X 16mm		10
APC 1 Wall Cabinet Hanger Kit		1
Cabinet Connecting Screw Kit		4
Aventos Blumotion HK-XS PF 1501 Kit		1
110 Degree Overlay Hinge		2

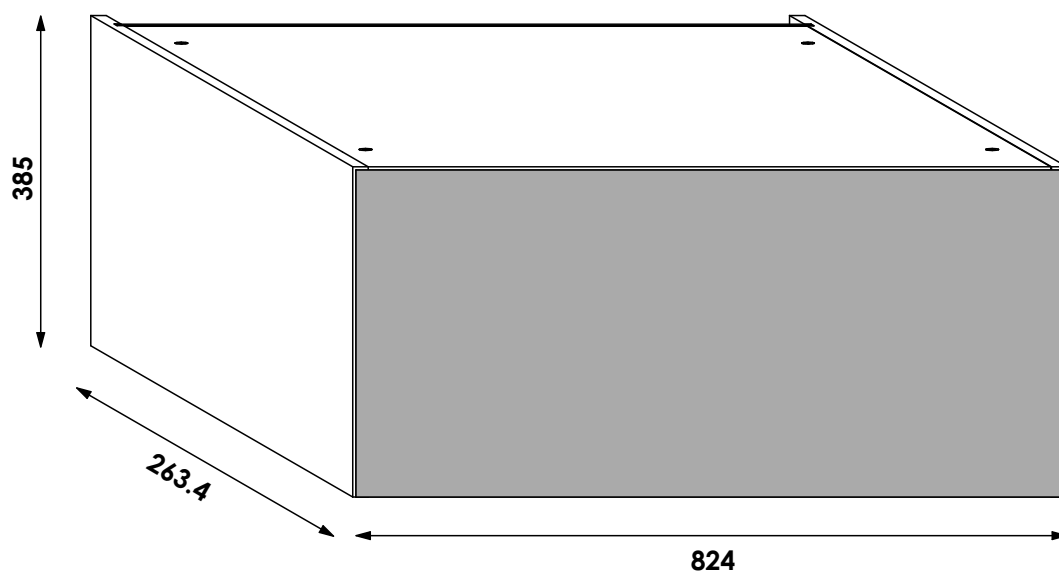


GENERAL INSTRUCTIONS


1. Confirm that all panels (5) are in the package before assembling.
2. Check the white sticker on each panel for the labelling (A,B,C,D&E).
3. Ensure that the panels are laid on a non-abrasive surface when assembling.
4. Note that all panel connections are done using the system described below.

PANEL CONNECTION AND FASTENING

I

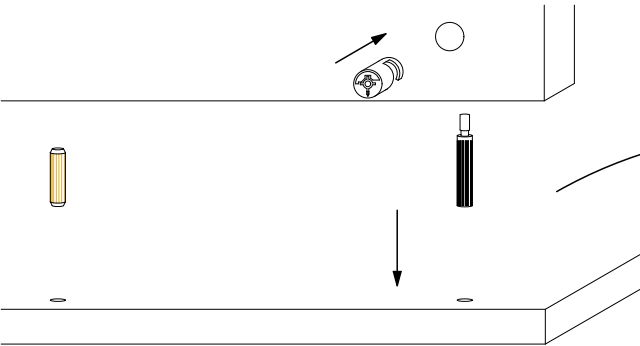


II

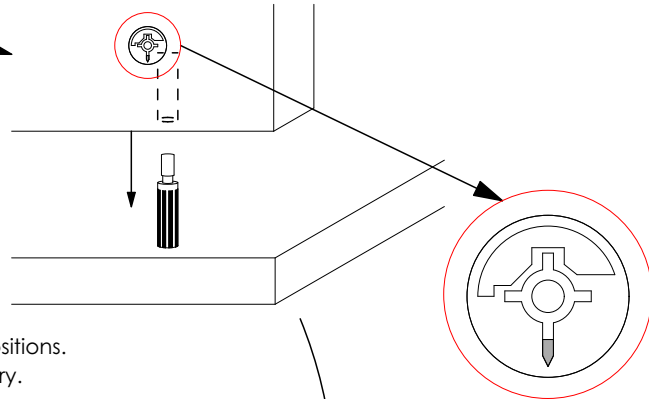


Det. 1

III

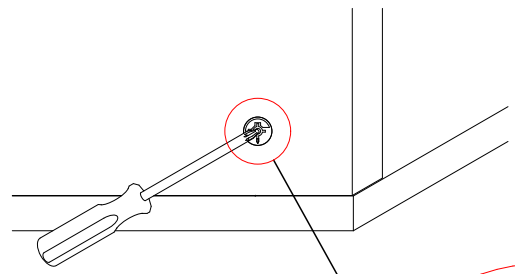

Det. 2

IV

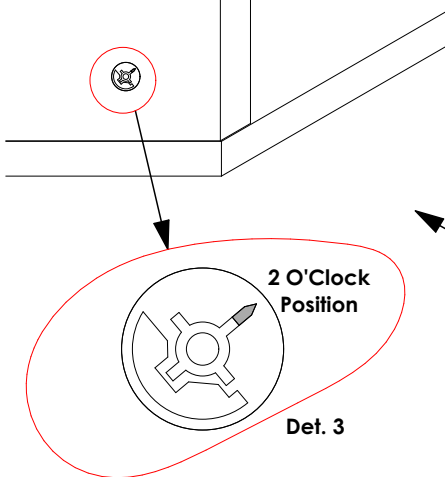

Det. 3

I - Insert the **minifix (1)**, **Dufix (1)** and **wooden dowels (2)** in the shown positions. **Gently** knock in the **wooden dowels** using a rubber mallet where necessary.

II - Confirm that the **minifix** orientation is as shown in **Det. 1** then connect the panels.

III - Using a **screw driver**, turn the **minifix 230°** clockwise to fasten the panels together. Refer to **Det. 2**.

NOTE: See **Det. 3** for minifix orientation when fastened. Reset the minifix orientation to that shown in **Det.1** to **disconnect** the panels.


For an easy and enjoyable assembly:

Please read the assembly chart completely. Remove all the parts from the carton box and place them on a smooth surface. Make sure you have exactly all the parts and tools listed in the chart. Start assembling the products following the steps on the chart. Please keep the assembly chart for future reference.




**TWO PERSON
ASSEMBLY
REQUIRED.**


PILOT HOLES GUIDE FOR SIDE PANELS

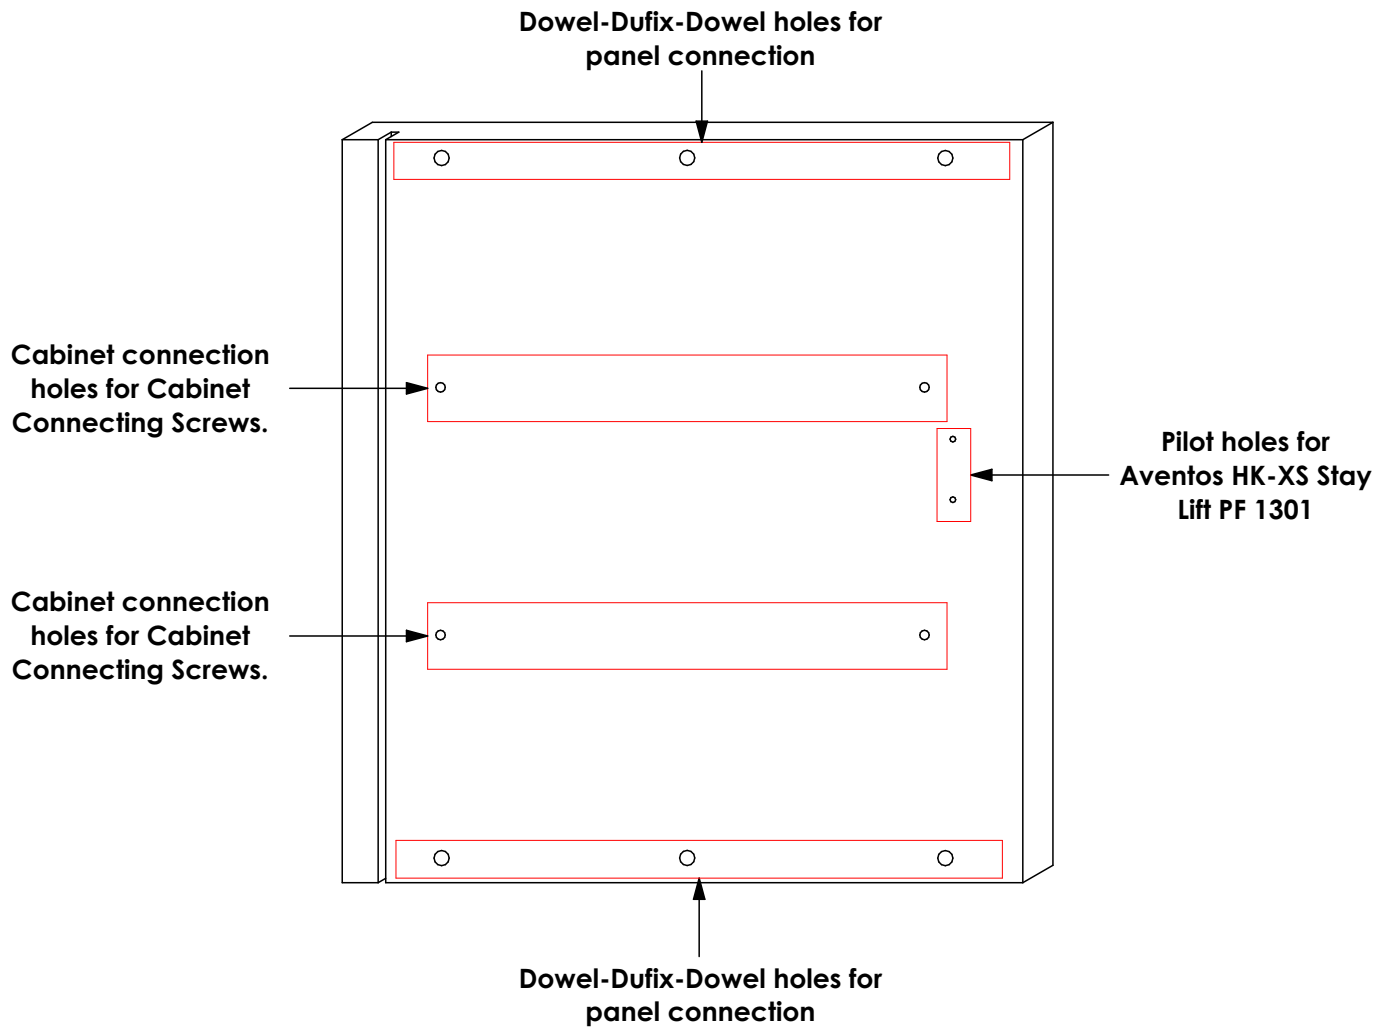

PILOT HOLES GUIDE FOR TOP PANEL

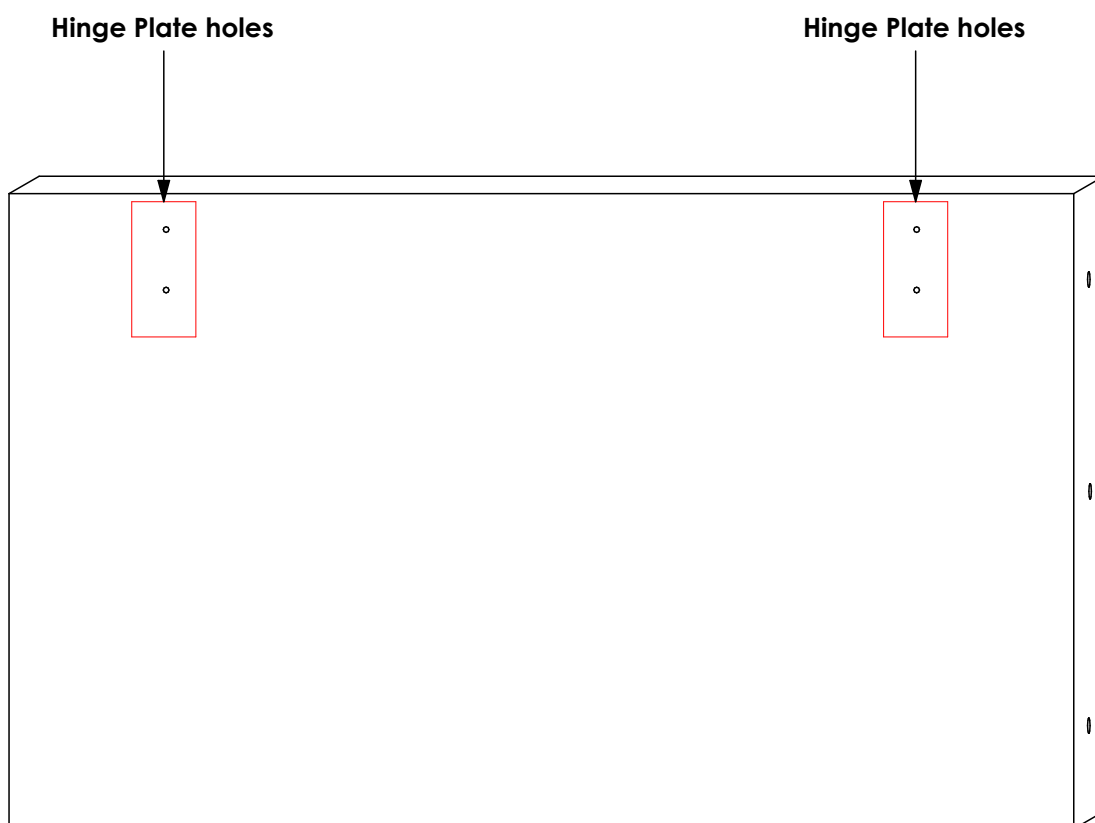


STEP 1

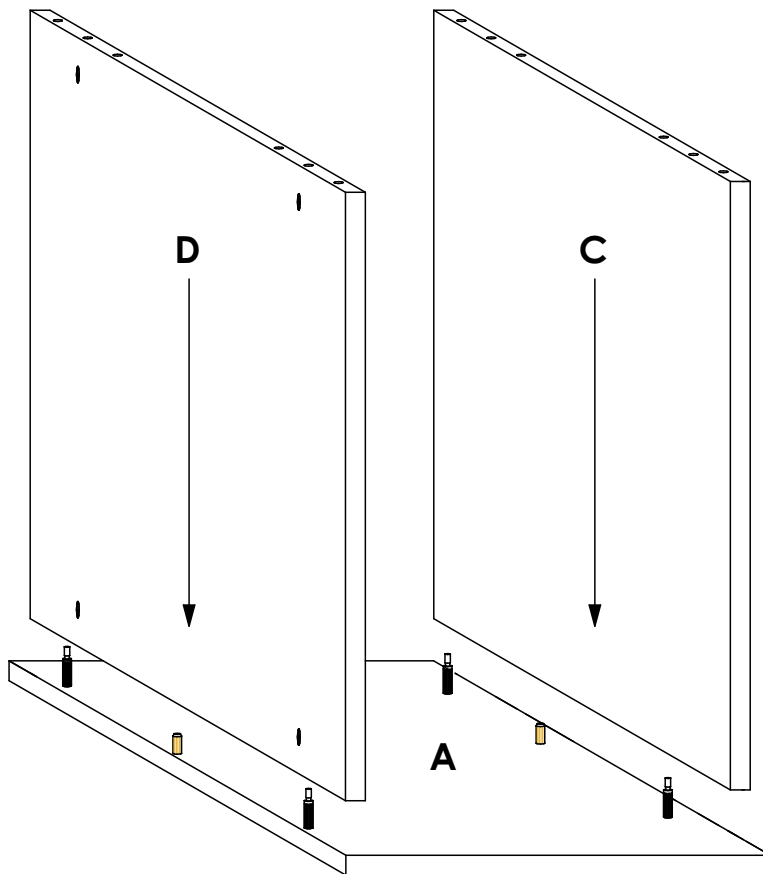


Connect panels **C & D** to panel **A** as shown. Refer to the holes on the diagram to determine the panel orientation.

STEP 2

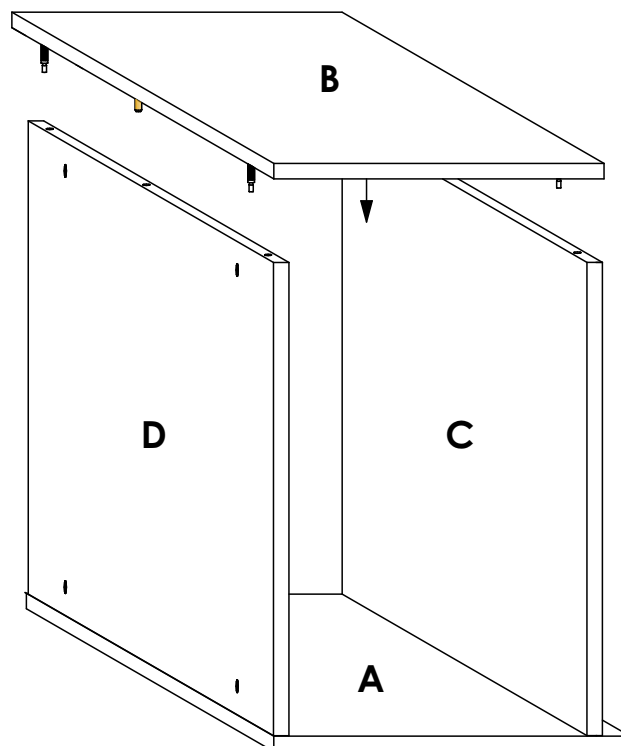

Connect panel **B** to panels **C & D** as shown. Refer to the holes on the diagram to determine the panel orientation.


STEP 3

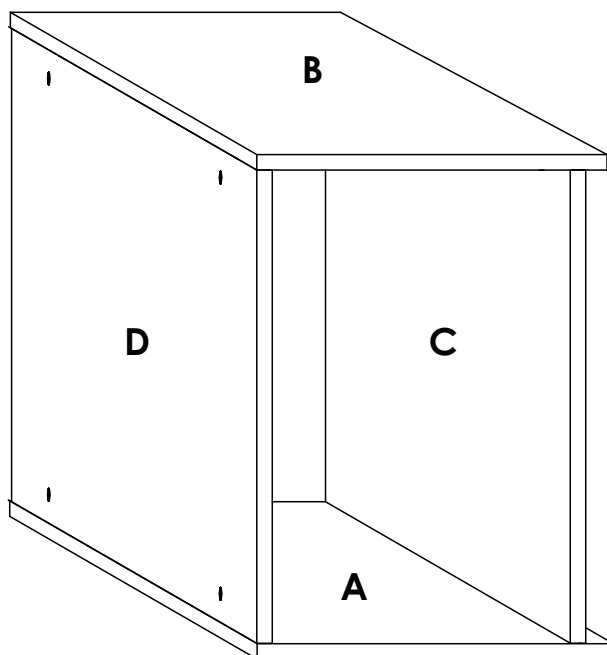


Make sure the assembled wall flap resembles the one shown above before installing the APC 6 as shown below onto the side panels with the pre drilled holes.

STEP 4

INSTALLATION OF APC 6 ONTO THE SIDE PANEL OF THE WALL FLAP

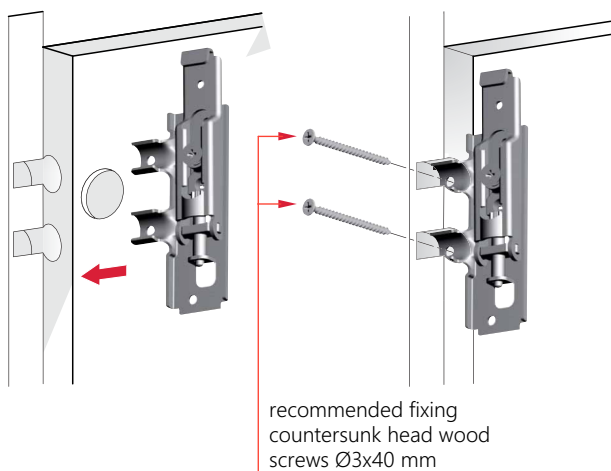


INSTALLATION ON THE WALL

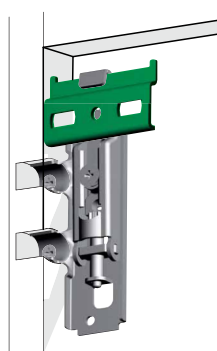


It is the responsibility of the customer:

- to ensure that the wall is of a suitable quality to hold the unit fixing in place.
- to use the proper hardware fittings according to the construction of the wall.

COVER CAP INSERTING

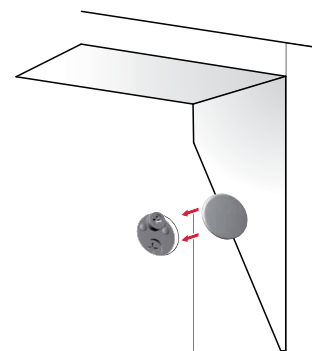


STEP 5

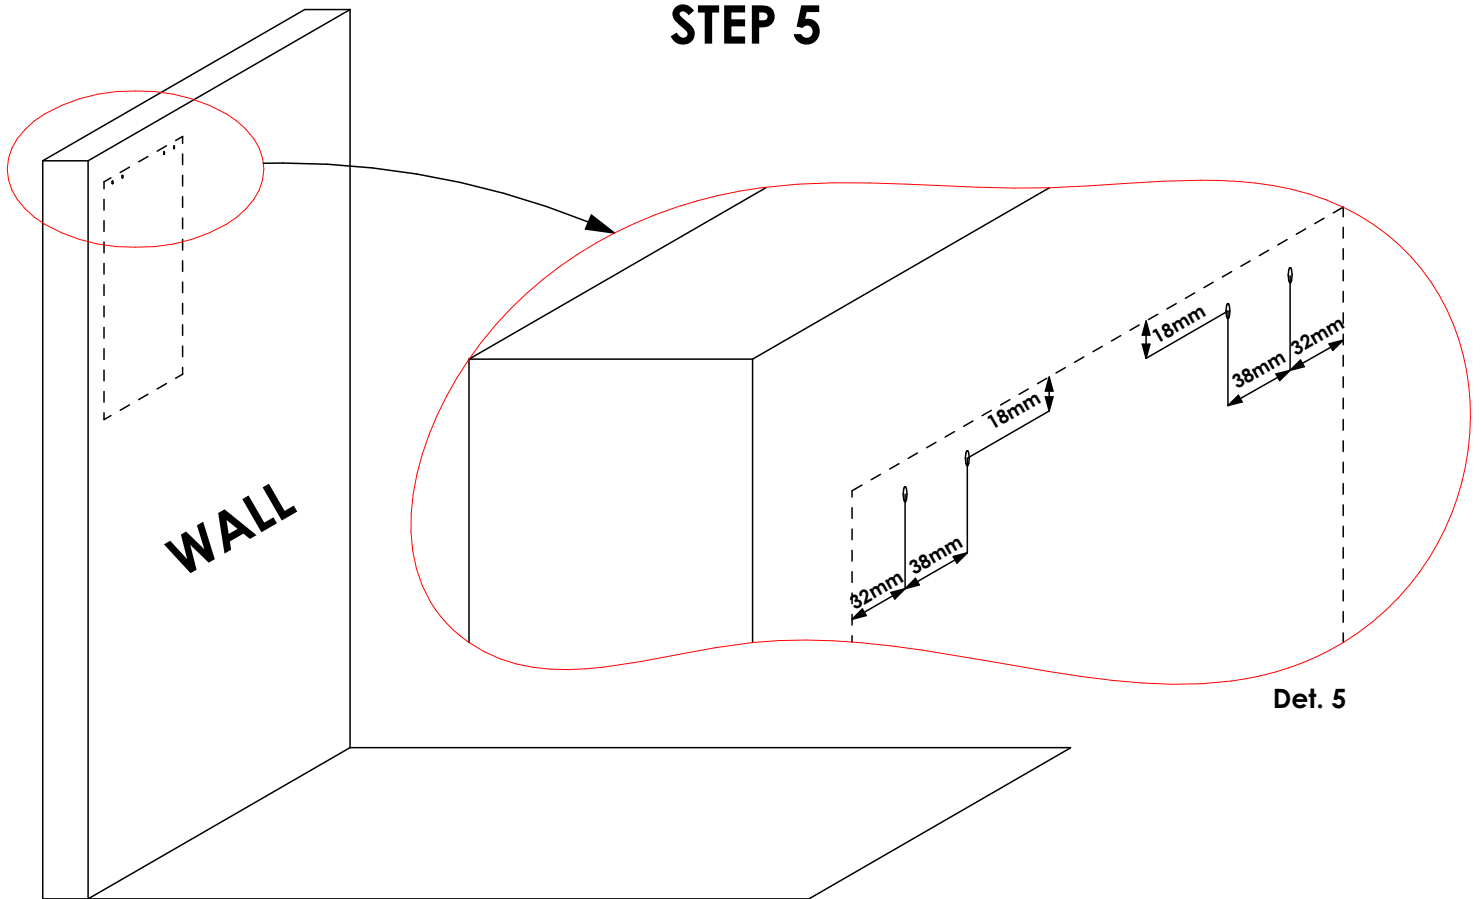





The **broken lines** indicate the **outer boundaries** of the **wall cabinet**. Mark the drill points on the wall with respect to the hanging position of the wall cabinet. Refer to **Det. 5** for dimensions. Then, using an **8mm** Drill Bit, drill **80mm deep** holes through the marked positions on the wall ensuring that the **drill bit** is **perpendicular** to the **wall surface**.

STEP 6

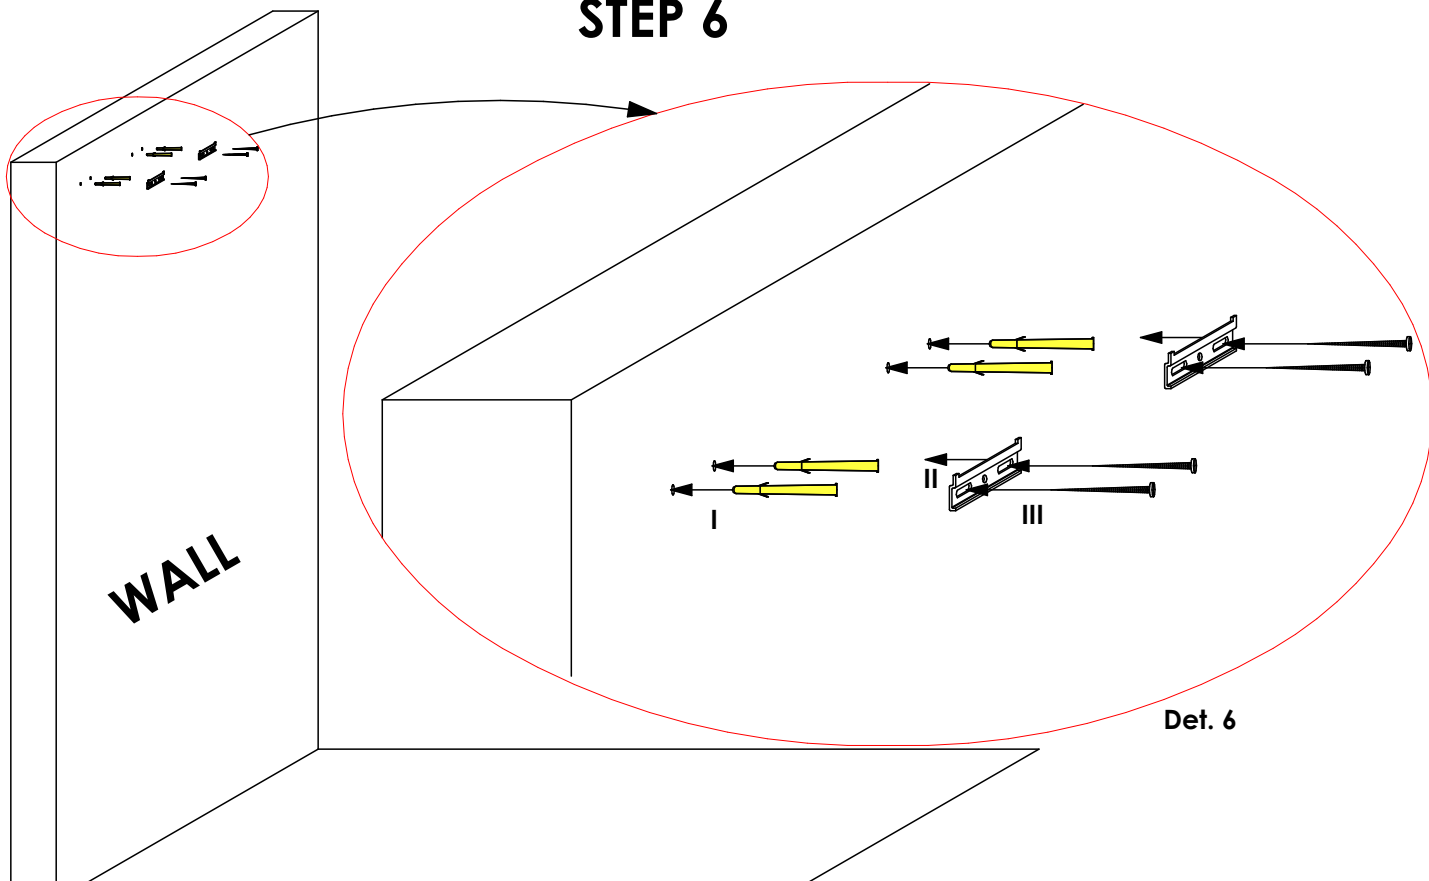






- I) Separate the **yellow plug** from the **nail in anchor** and, using a **rubber mallet**, **gently** knock in the plug into the holes drilled in **Step 5**.
- II) Place the **APC 6 wall plates** on the wall. Align the oval holes on the wall plate with the plugs.
- III) Screw the **nail in anchor** into the **yellow plug**.

ADJUSTMENTS

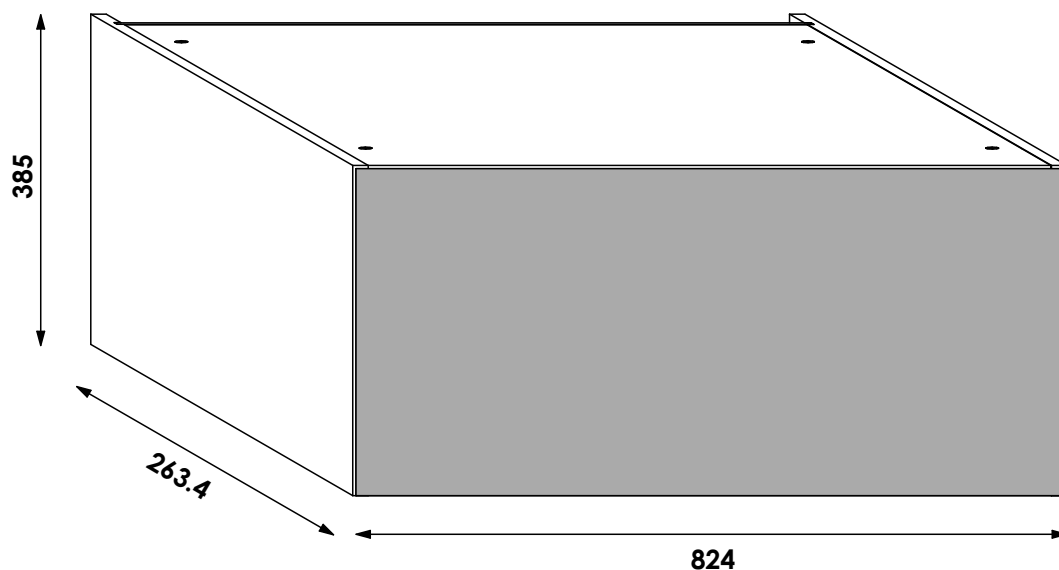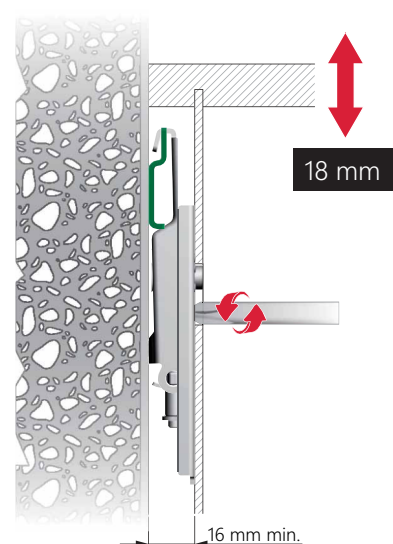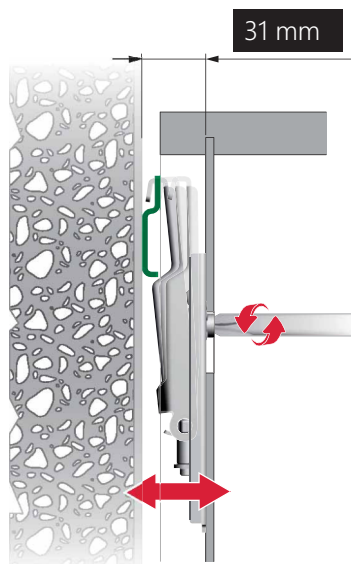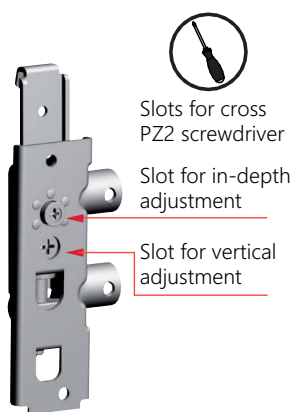


The next page is an illustration on how to install the aventos Blumotion HK-XS 1301.

Bridging and Contemporary Wall Units

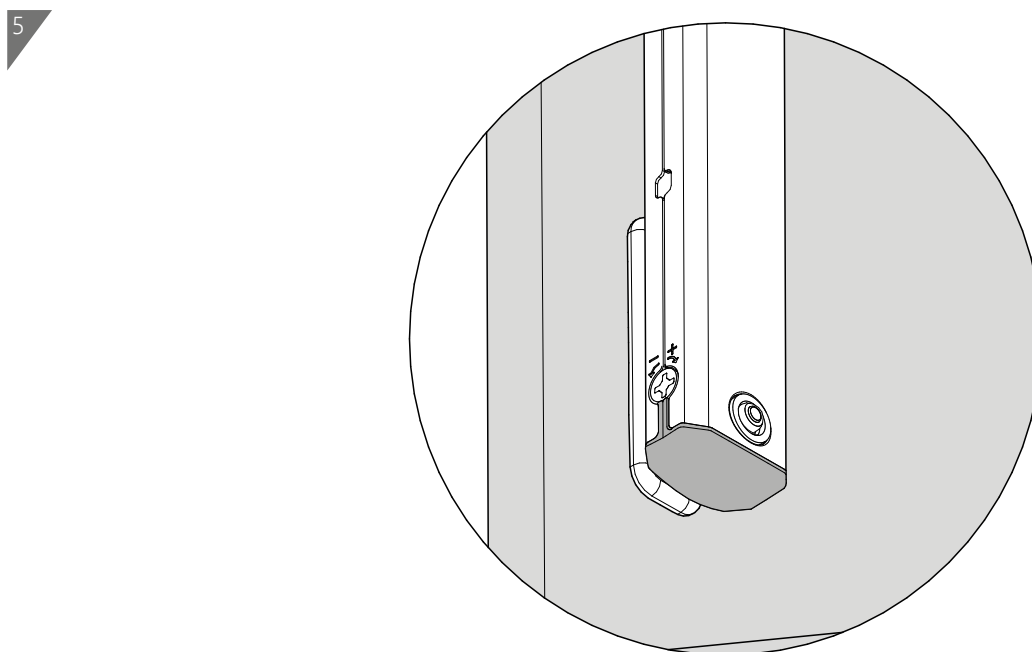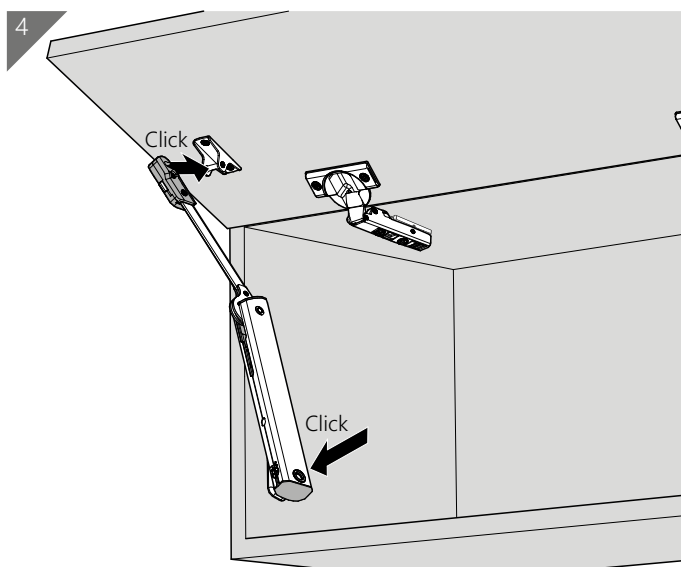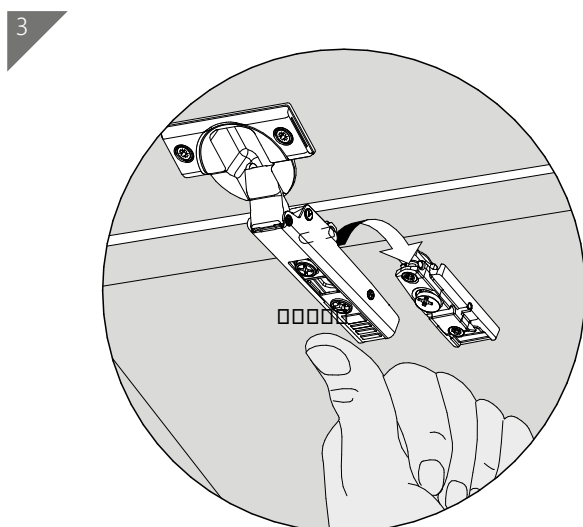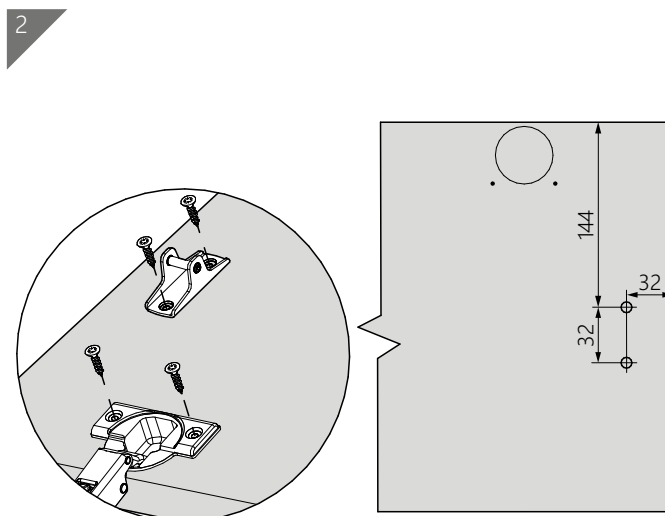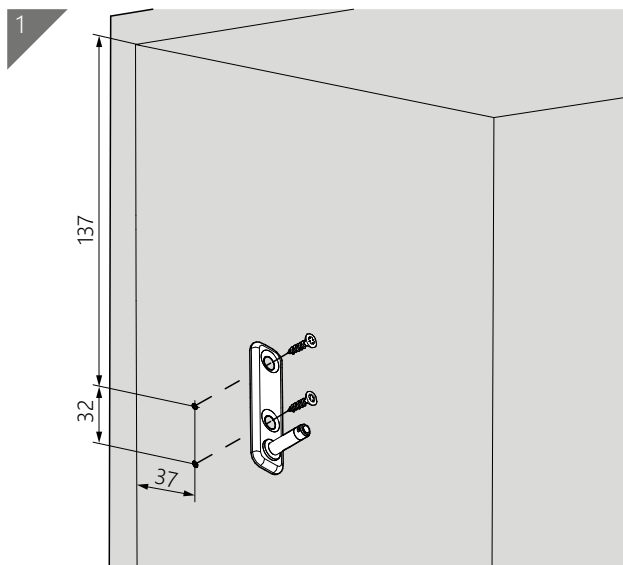

6

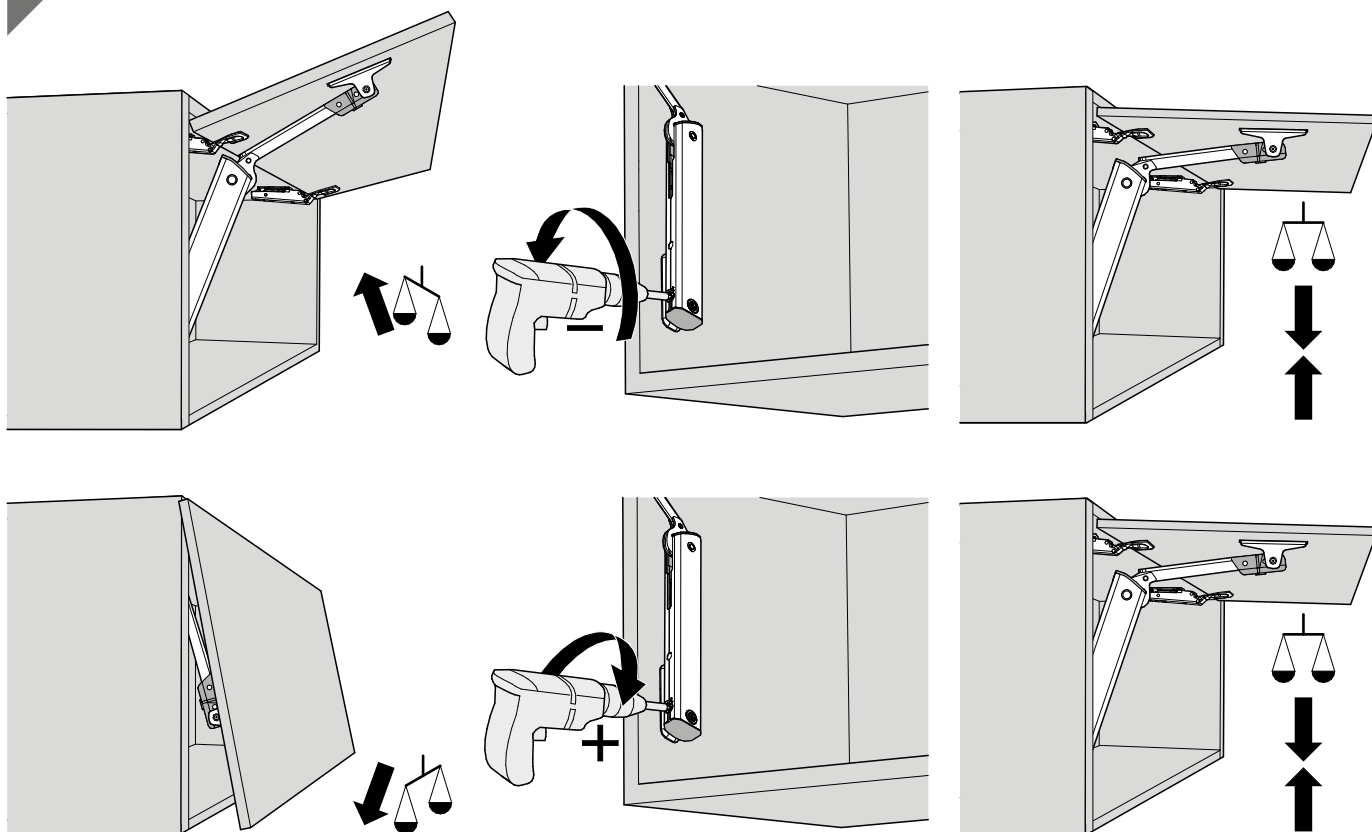

7

