


EDGLINE SCREWLOC FLATPAX KITCHEN RANGE

ASSEMBLY GUIDE

WALL CABINET 400mm

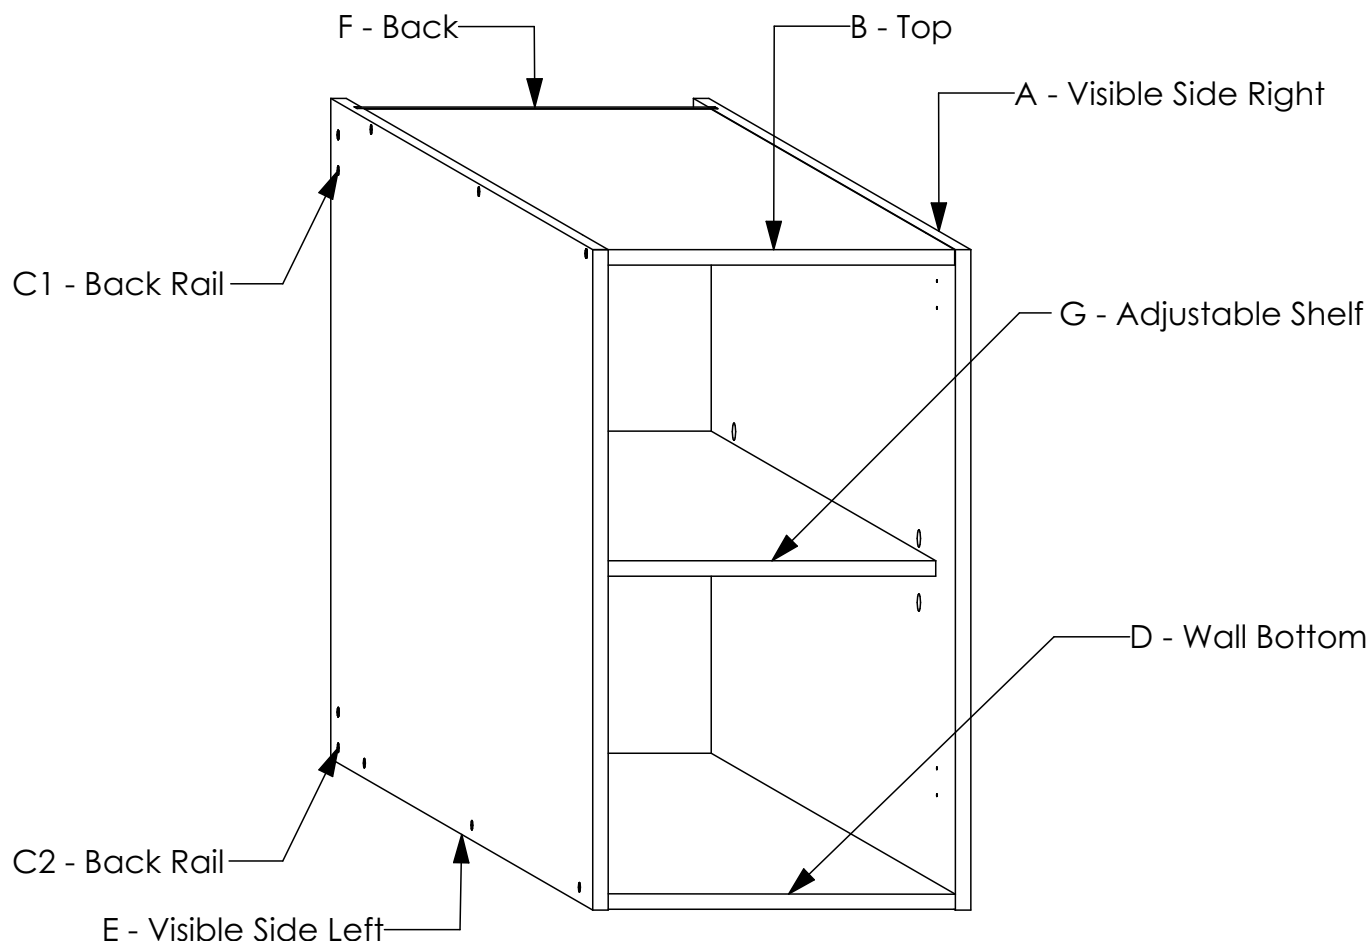

HARDWARE

TOTAL NUMBER OF PANELS: 8

PRODUCT	QTY	IMAGE
Screw 4.0 x 50mm	20	
Shelf Studs	4	
Screw 3.5 x 16mm	10	
Screw Nail in Anchor 8 x 80mm Yellow	4	


GENERAL INSTRUCTIONS

1. Confirm that all panels (8) are in the package before assembling.
2. Check the white sticker on each panel for the labelling (A, B, C, D, E, F & G).
3. Ensure that the panels are laid on a non-abrasive surface when assembling.
4. Countersink the holes on the side panels before inserting the screws.
5. Ensure that the screw is perpendicular to the surface being drilled for a clean and strong joint.


TOOLS REQUIRED




Screw Driver
(Pozidriv Head)

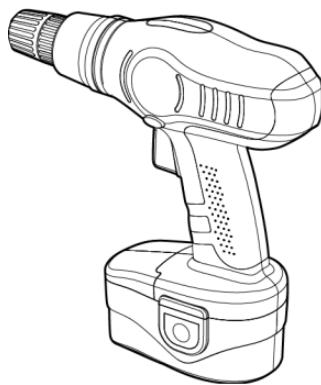

Cordless Drill

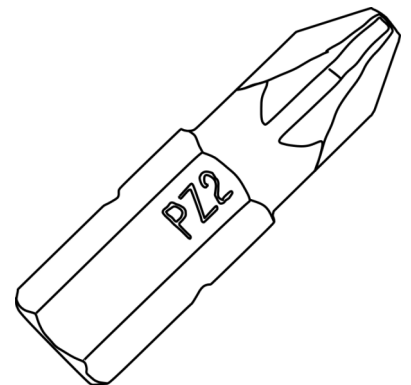



Pozi Bit (PZ2)

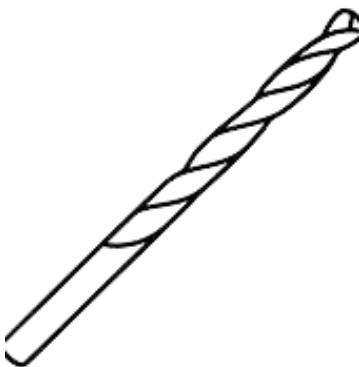


8mm Drill Bit



Rubber Mallet

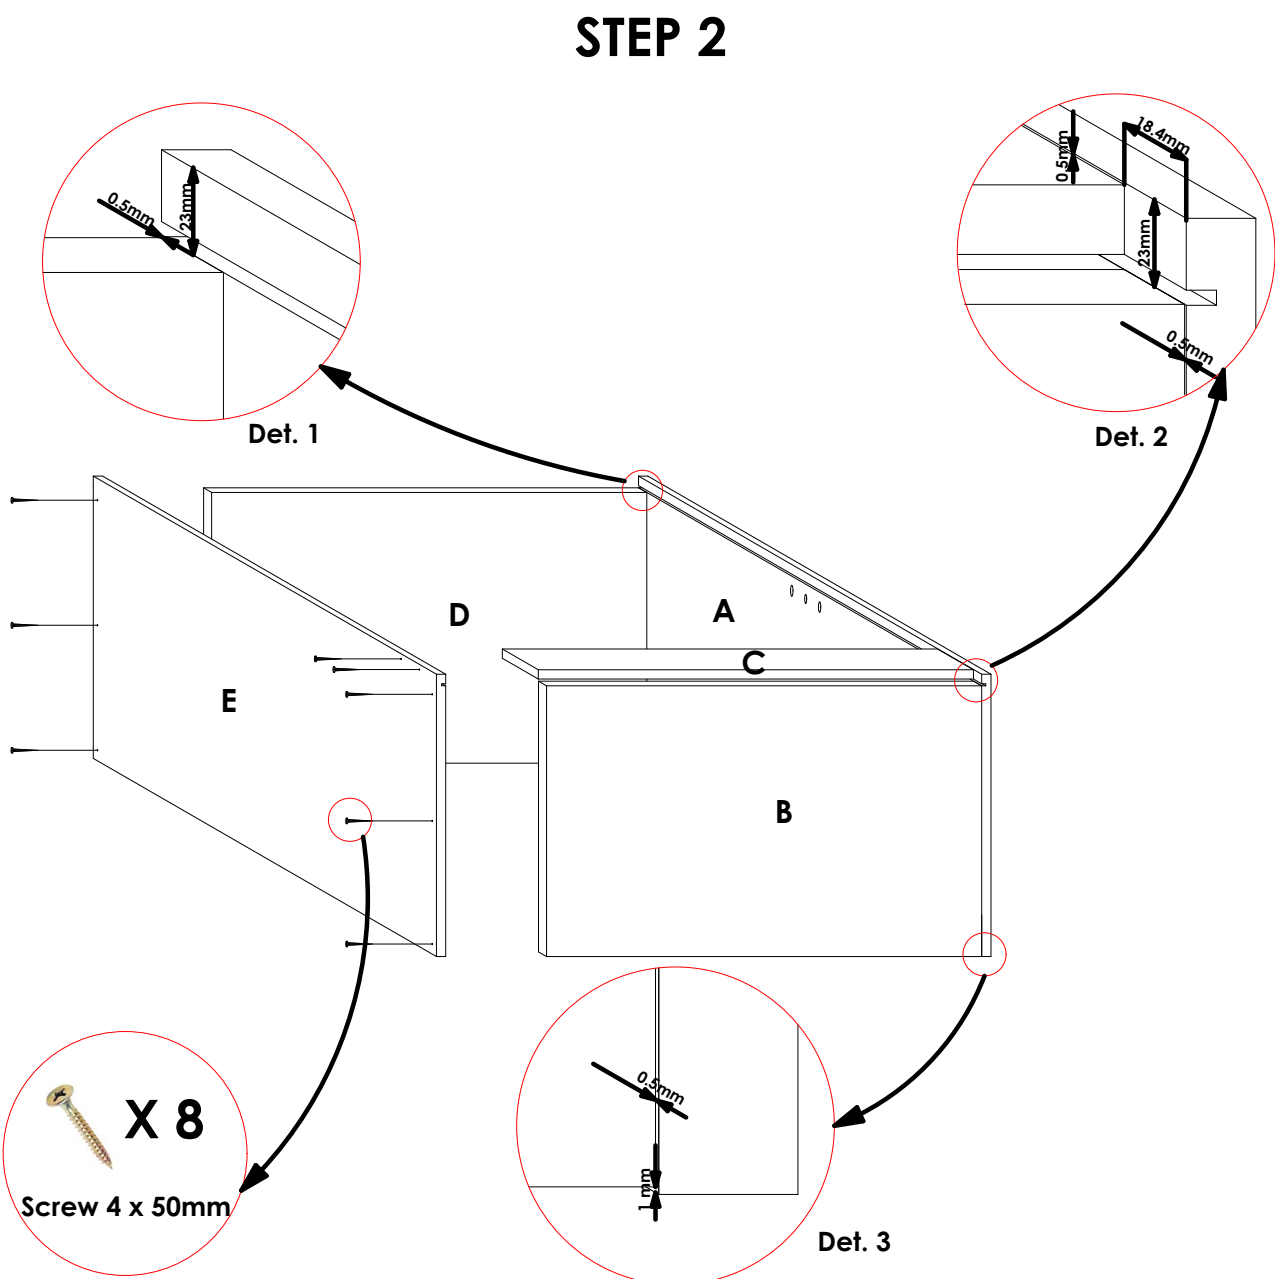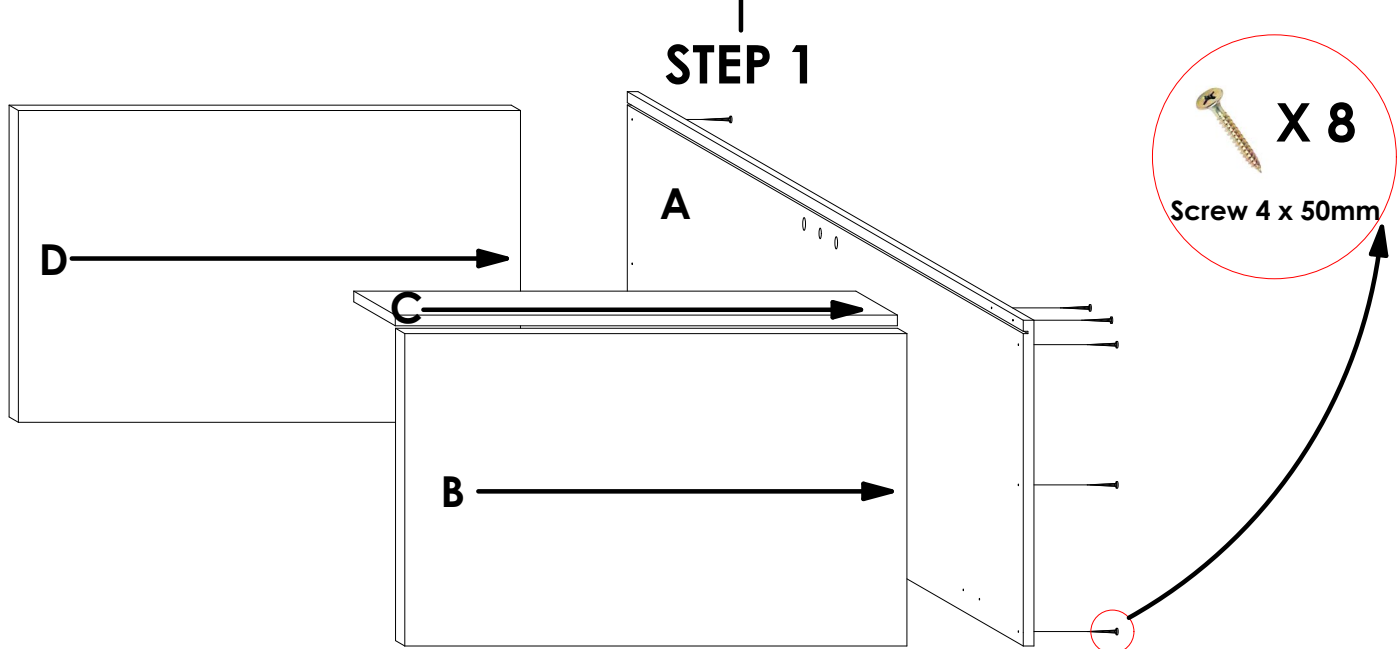


STEP 3

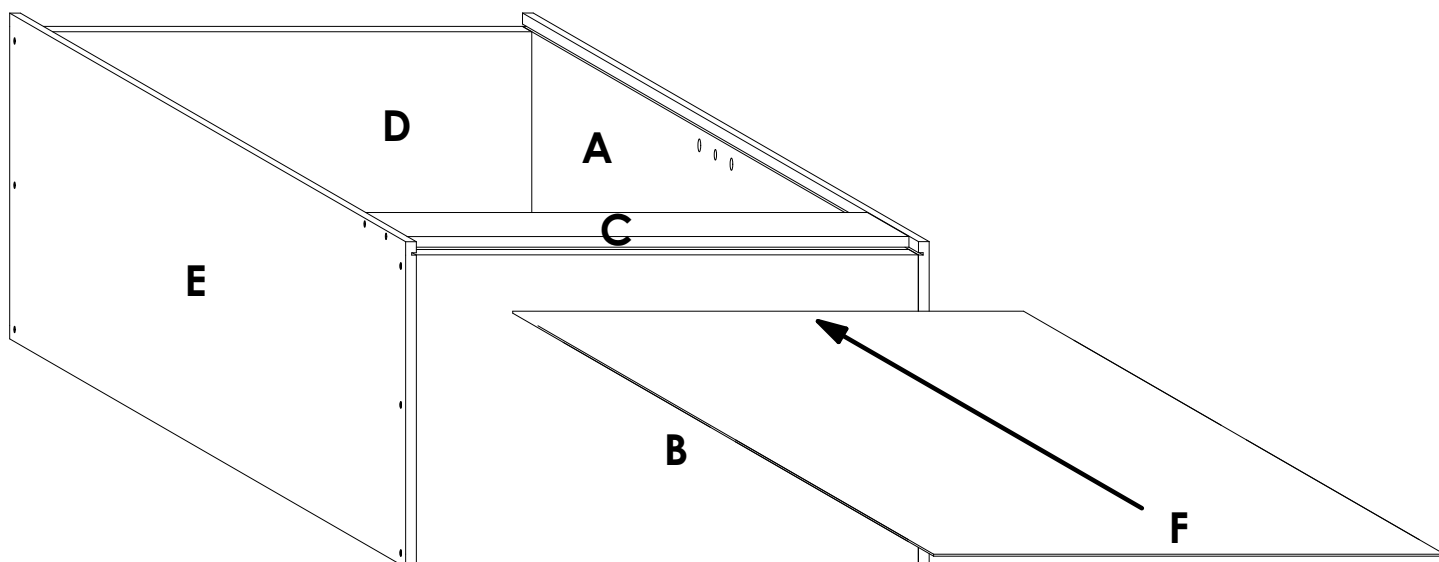


Slide the 3mm panel (F) into the groove on panels **A & E** with the finished side facing down.

STEP 4

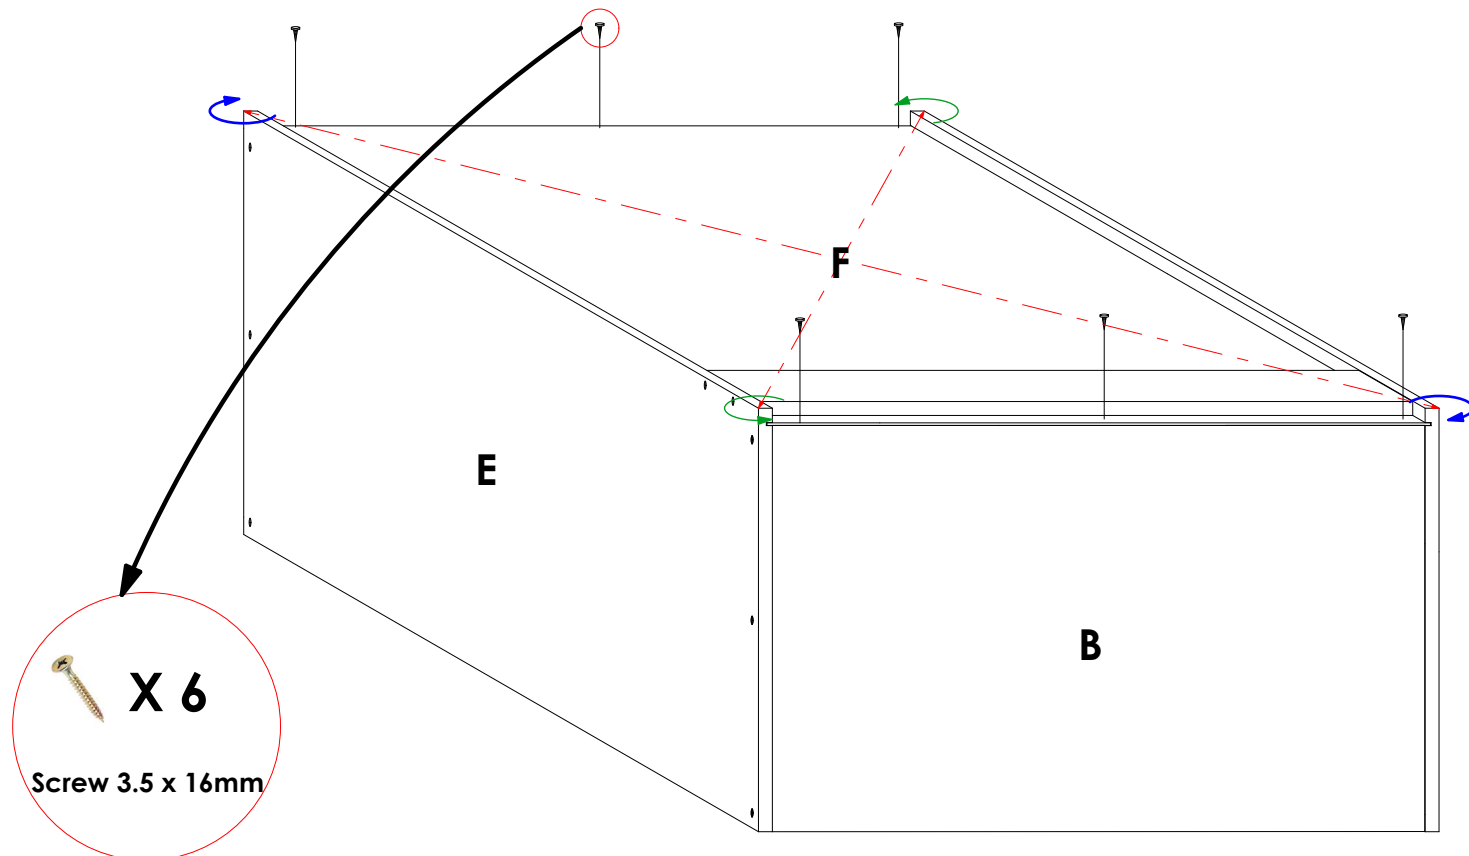


First, **check the diagonal** of the cabinet by measuring the two distances indicated by the red, broken lines. They should be equal. If not, twist the cabinet accordingly in the diagonal corners as shown until an equal value is achieved. After, secure panel **F** to panels **B & D** as shown using **Screw 3.5 X 16mm**.

STEP 5

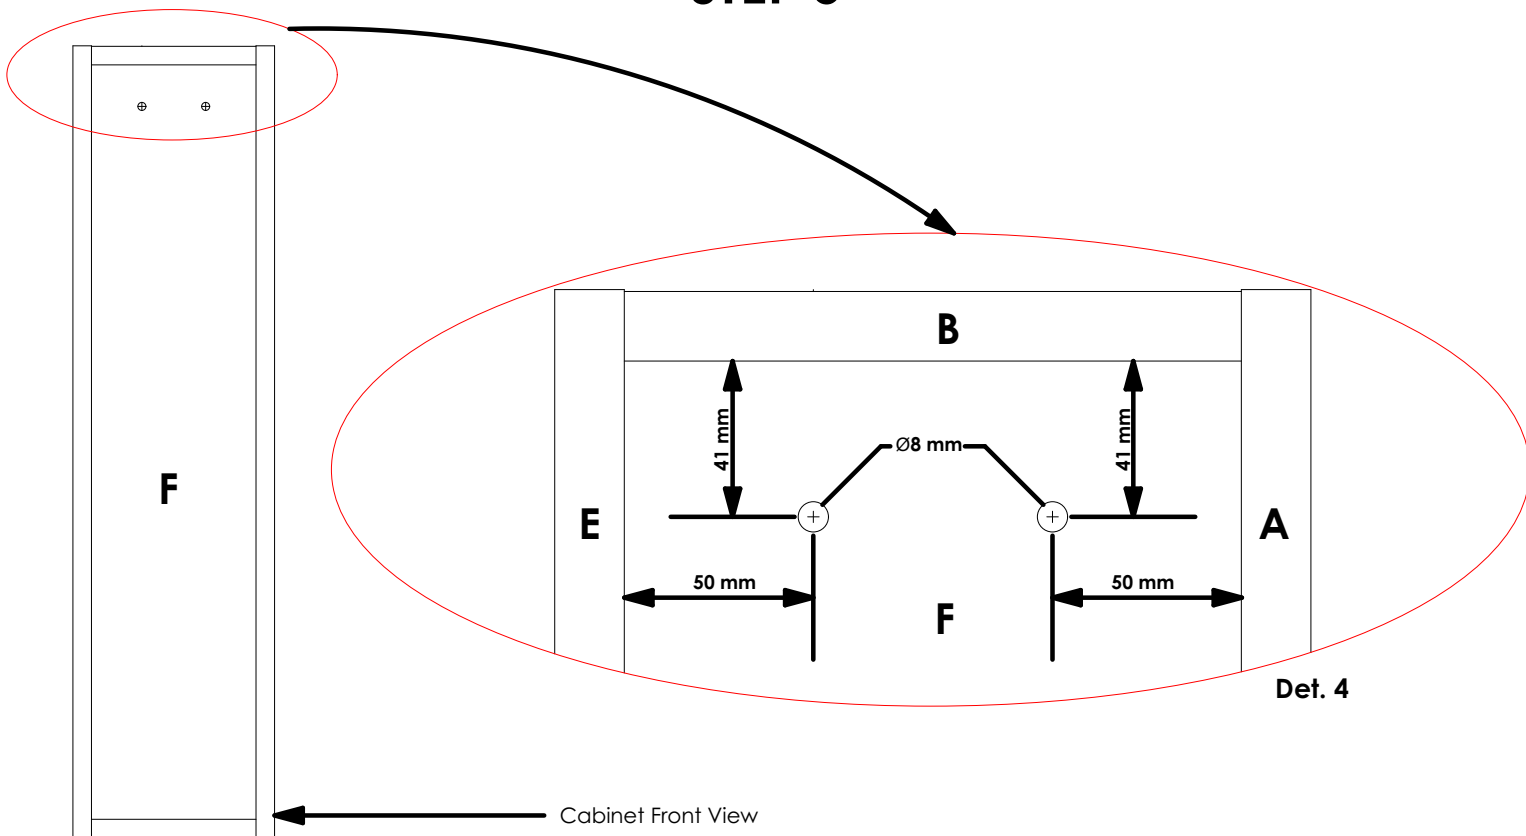


Using an **8mm** Drill Bit, gently drill two holes **through** panels **F & C** in the positions shown in **Det. 4**. **Countersink** the holes such that the **Screw Head** will be **flush** with the surface of panel **F**.

STEP 6

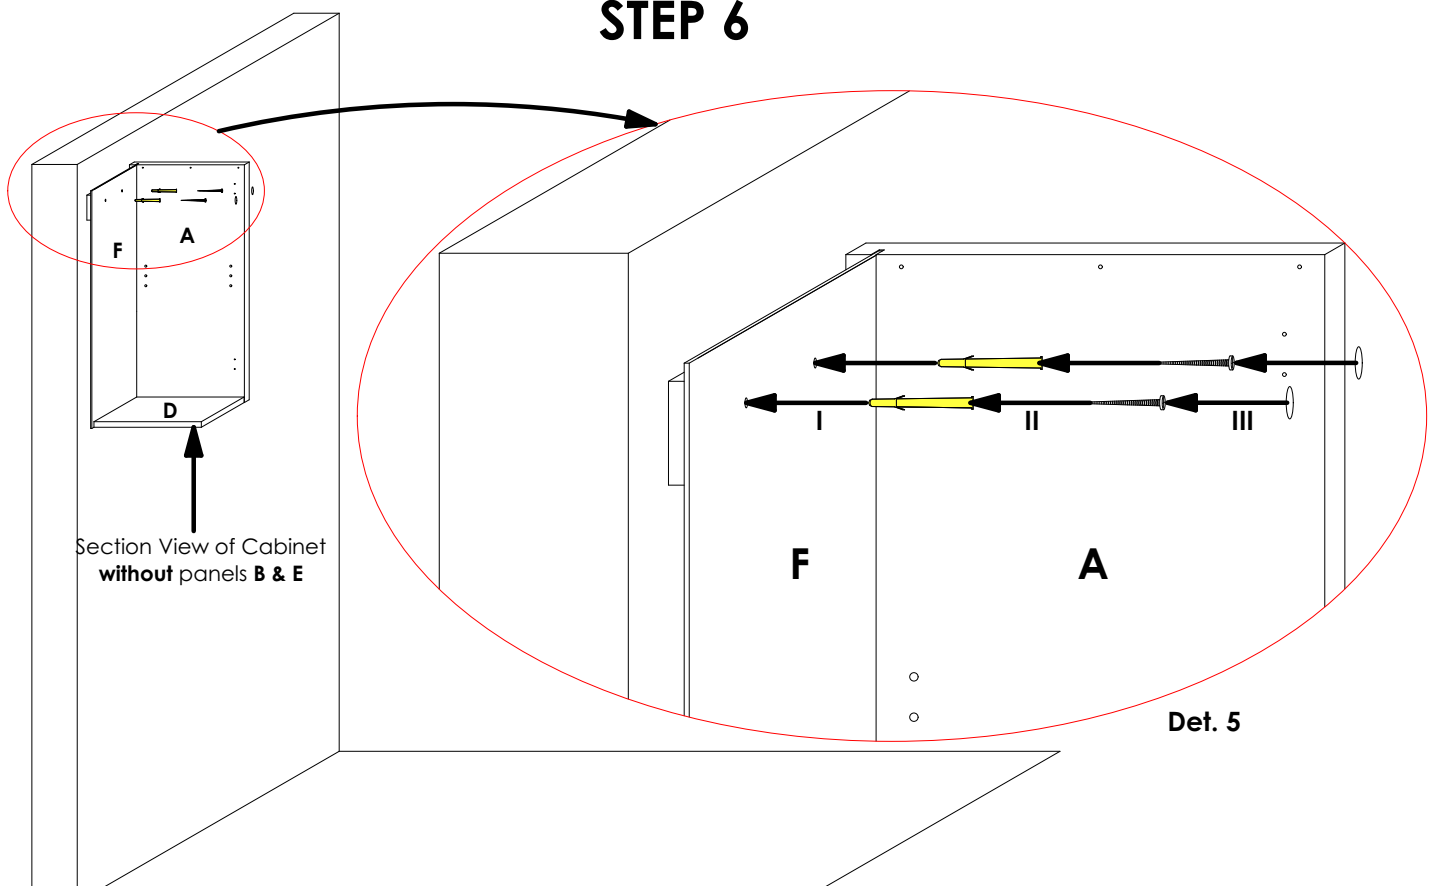


- Raise the cabinet on the wall up to the desired level. Mark the drill points on the wall through the holes drilled in **Step 4** ensuring that the cabinet is both **upright** and **level**.
- Lower the cabinet and using an **8mm drill bit**, drill **80mm deep** holes on the wall, through the marked points.
- Separate the **yellow plug** from the nail in anchor.
- Raise the cabinet and using a **rubber mallet**, gently knock in the plug through panels **F & C** and into the **wall** (See **Det. 5**).
- Screw the **nail in anchor** into the **yellow plug** ensuring that the **screw head** is **flush** with the surface of panel **F** (See **Det. 5**).
- Stick the **Screw Caps** onto the **screw heads** to conceal them (See **Det. 5**).

STEP 7

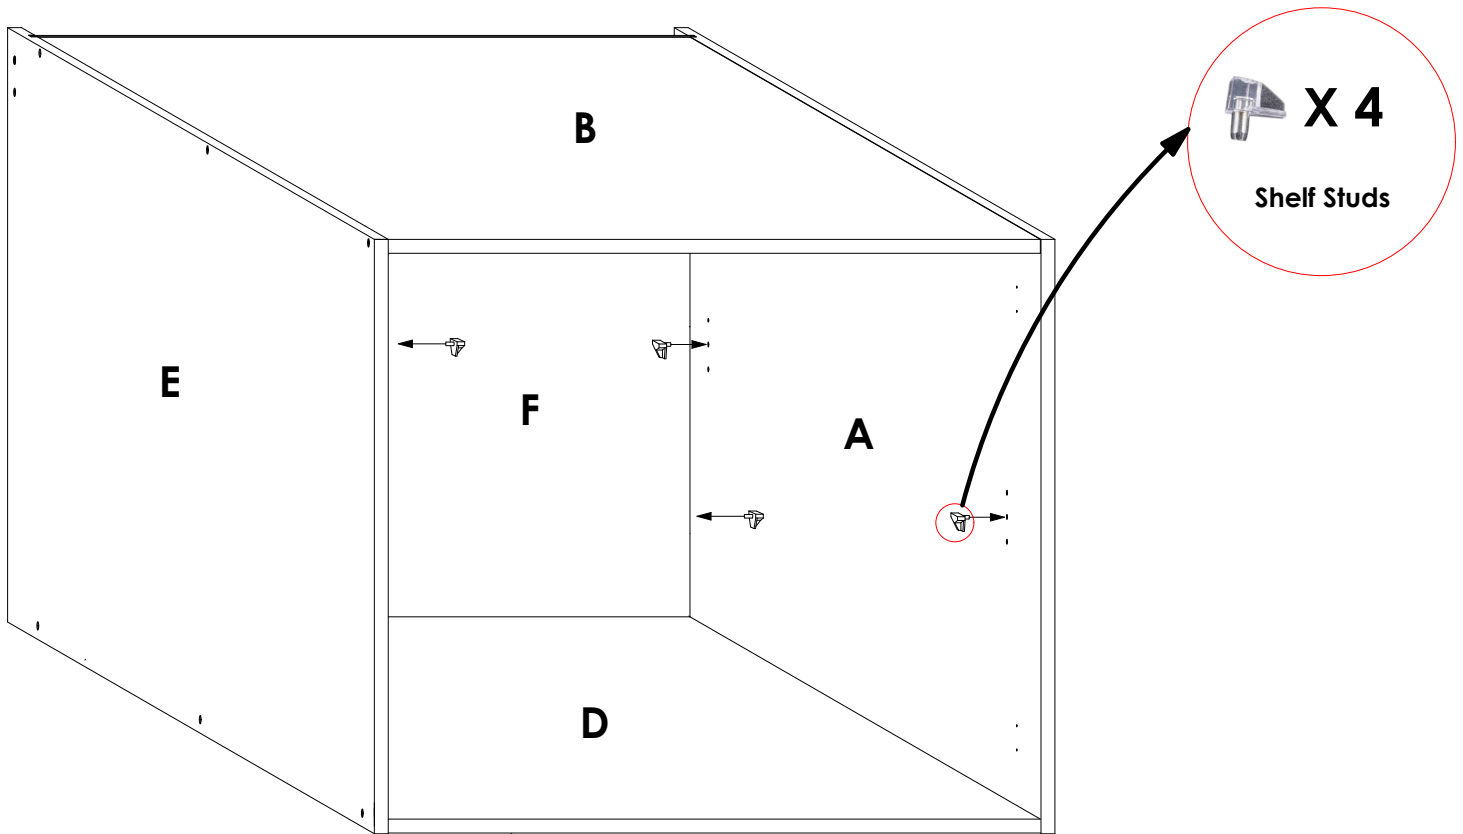

With the cabinet hanged on the wall, insert the **Shelf Studs** in the shown positions.

STEP 8

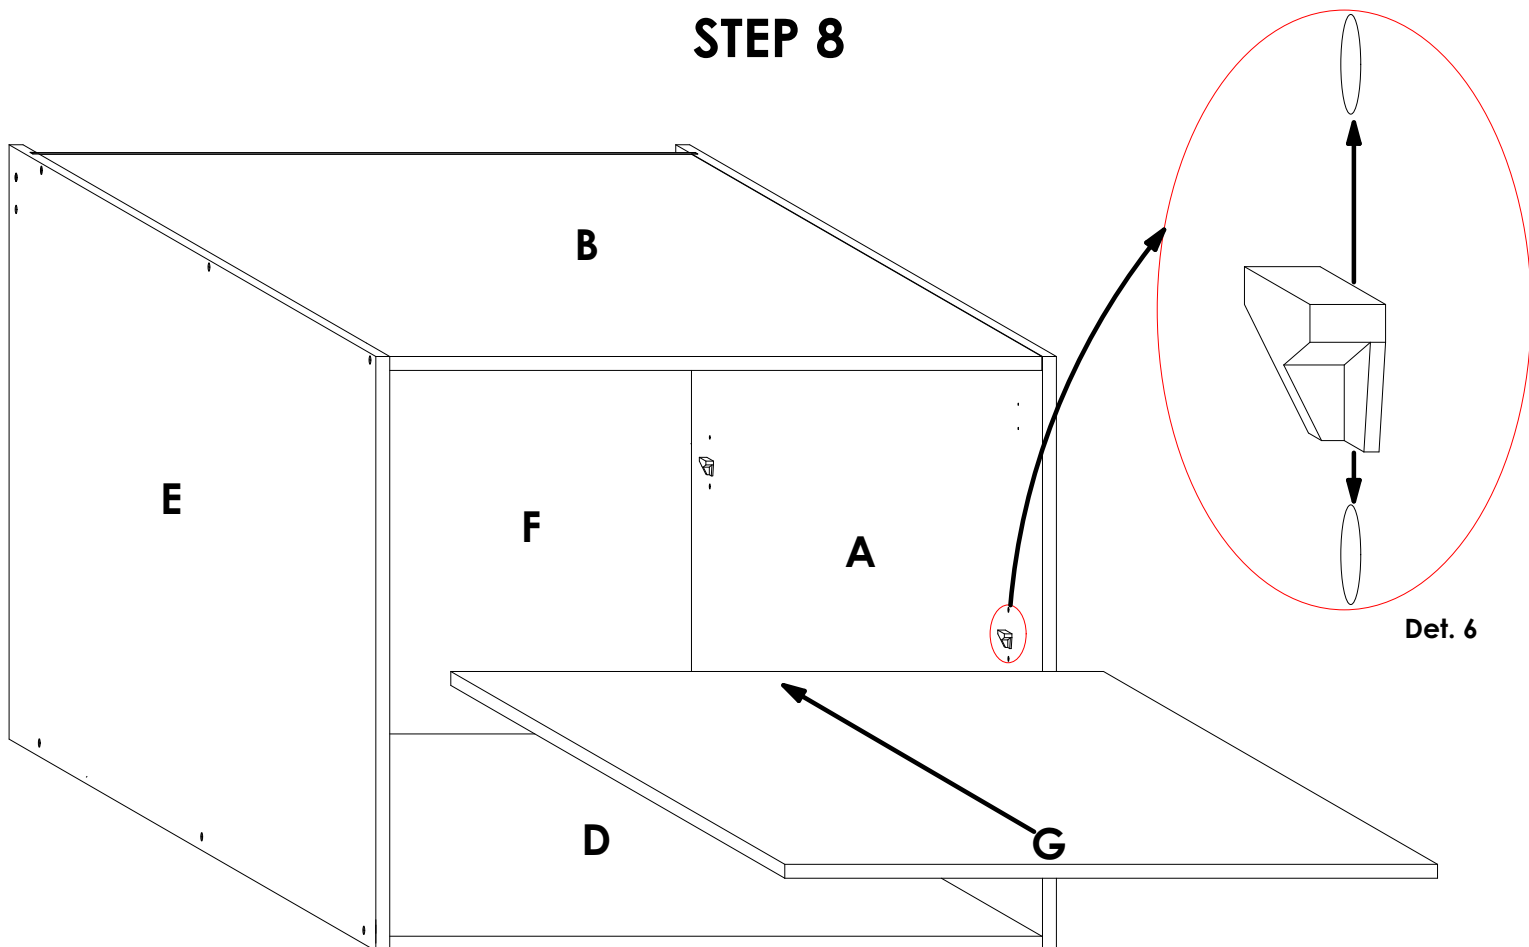

Slide in panel **G** as shown, such that it sits on the four shelf studs. The level of the shelf is adjustable by shifting the position of the shelf studs as shown in **Det. 6**. See Door Installation Guide for further instructions.