






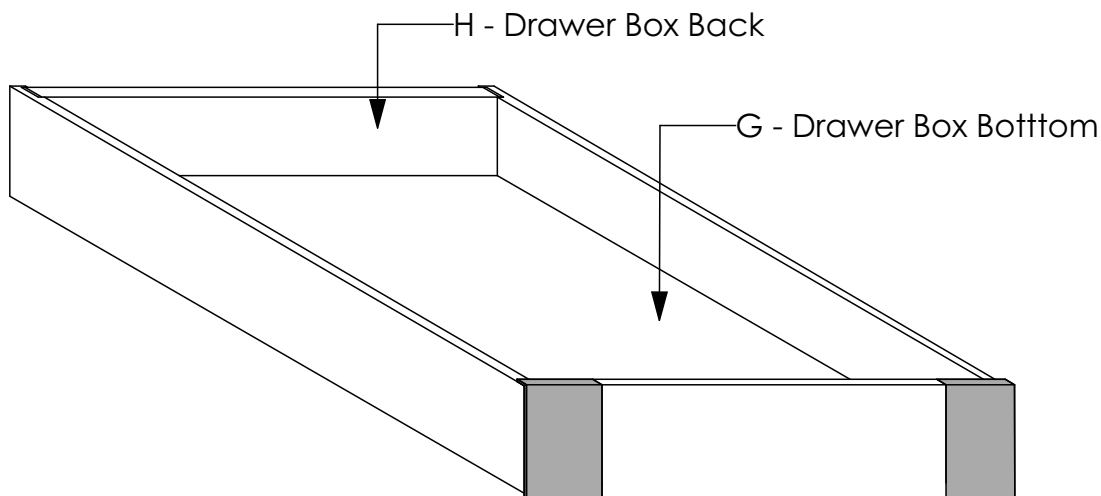


QUICKLOC FLATPAX KITCHEN RANGE ASSEMBLY GUIDE

DTC MAGIC STAR INNER DRAWER BOX HEIGHT 1







TOTAL NUMBER OF PANELS: 2


HARDWARE

| PRODUCT | QTY | IMAGE |
|---------------------------------|-----------|---|
| Back Fixing Bracket Left /Right | 1 Pair |  |
| Drawer Sides Left/Right | 1 Pair |  |
| Screw 3.5 x 16mm | 24 |  |
| Front Fixing Bracket | 2 |  |
| Runners Left/Right | 1 Pair |  |
| Cover Cap for Drawer Sides | 2 of each |  |
| Front section for inner Draw | 1 |  |

TOOLS REQUIRED

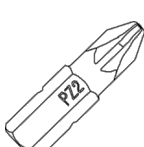
| | | | | |
|---|---|---|---|--|
|  |  |  |  | 1. Confirm that all panels (2) and hardware are in the package before assembling. 2. Check the white sticker on each panel for the labelling (G & H). 3. Ensure that the panels are laid on a non-abrasive surface when assembling. |
| Screw Driver (Pozi driv Head) | Cordless Drill | Pozi Bit (PZ2) | Rubber Mallet | |

STEP 1

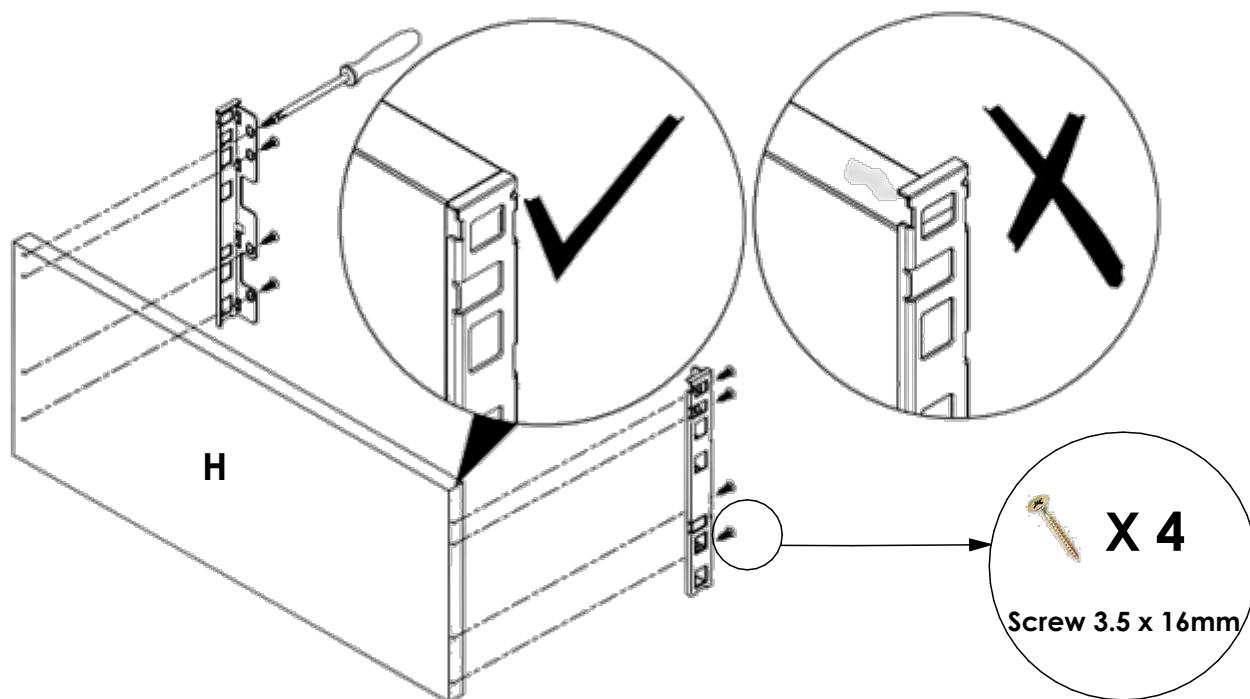

Place the Back Fixing Brackets in the shown positions on Panel **H**.

STEP 2

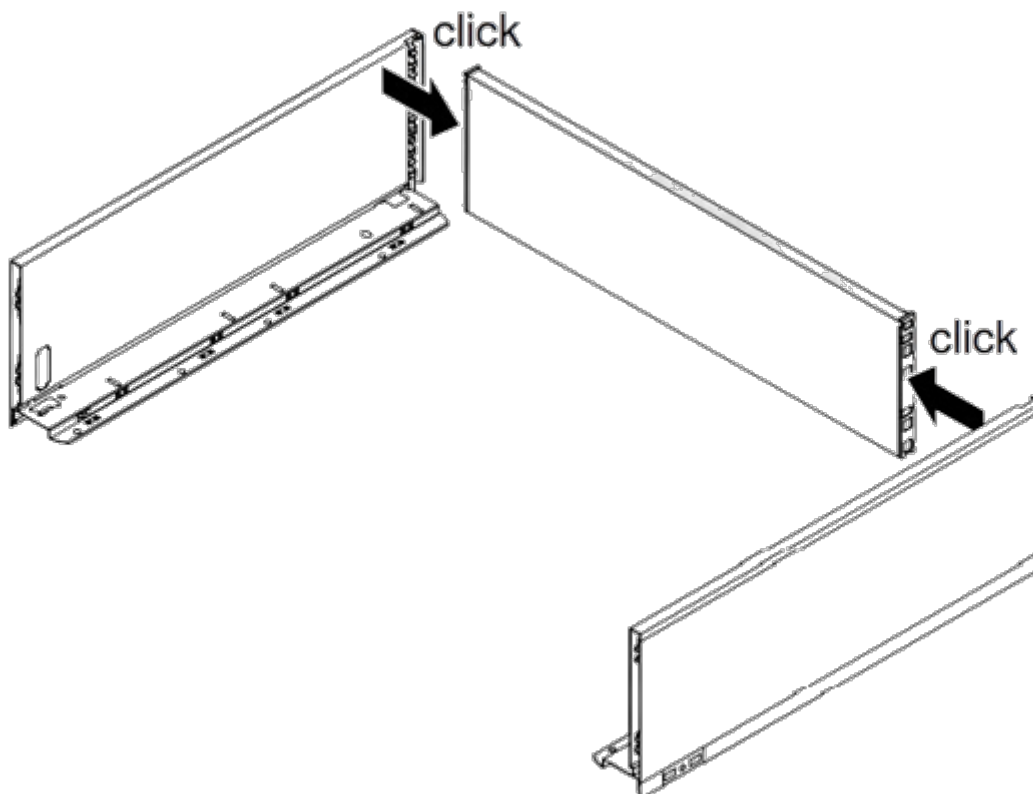

Connect the **Legrabox Drawer Sides** with panel **H** as shown. Do this by snapping the **Back Fixing plates** into the **protrusions** at the back of the **Drawer Sides**.

STEP 3

Follow step by step to fix the front section and cross gallery for inner draw as illustrated below.

