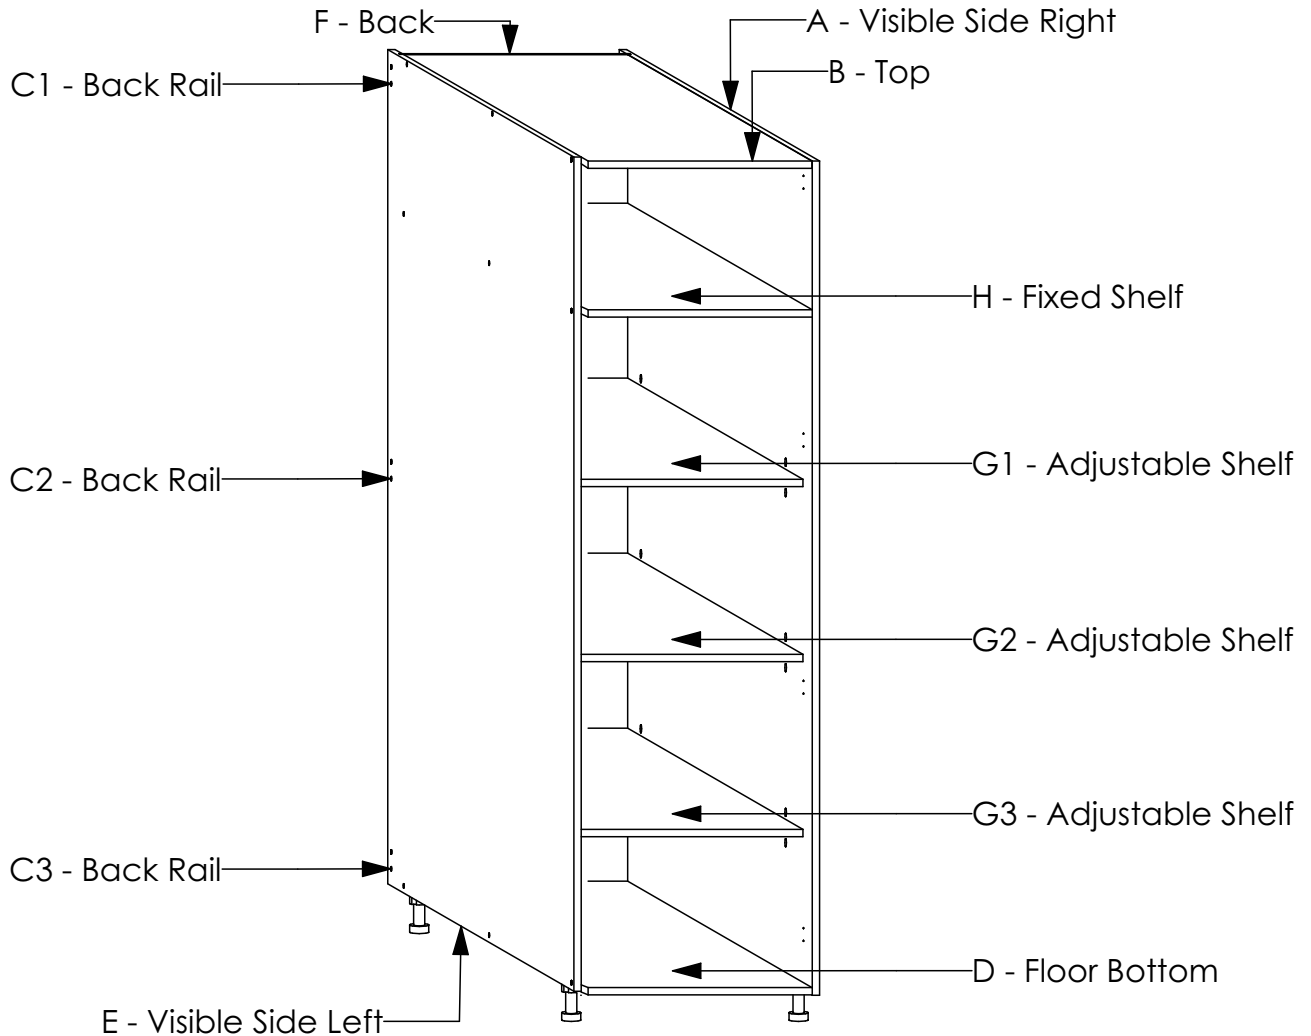


ALULINE SCEWLOC FLATPAX KITCHEN RANGE





ASSEMBLY GUIDE

TALL CABINET 300mm



TOTAL NUMBER OF PANELS: 12

HARDWARE

PRODUCT	QTY	IMAGE
Screw 4.0 x 50mm	30	
Screw 3.5 x 16mm	22	
Plinth Leg With Base H100mm Kit	4	
Shelf Studs	12	

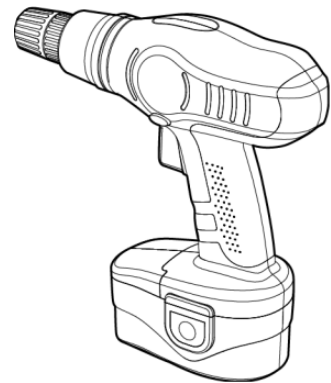
GENERAL INSTRUCTIONS

1. Confirm that all panels (12) are in the package before assembling.
2. Check the white sticker on each panel for the labelling (A, B, C1, C2, C3, D, E, F, G1, G2, G3 & H).
3. Ensure that the panels are laid on a non-abrasive surface when assembling.
4. Countersink the holes on the side panels before inserting the screws.
5. Ensure that the screw is perpendicular to the surface being drilled for a clean and strong joint.


TOOLS REQUIRED



Screw Driver
(Pozidriv Head)




Cordless Drill

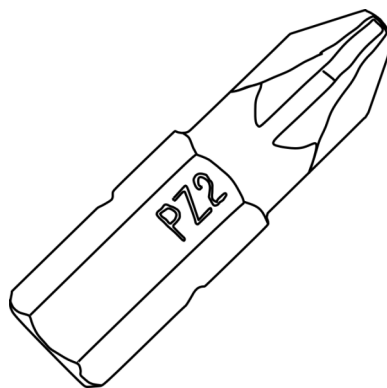


Pozi Bit (PZ2)

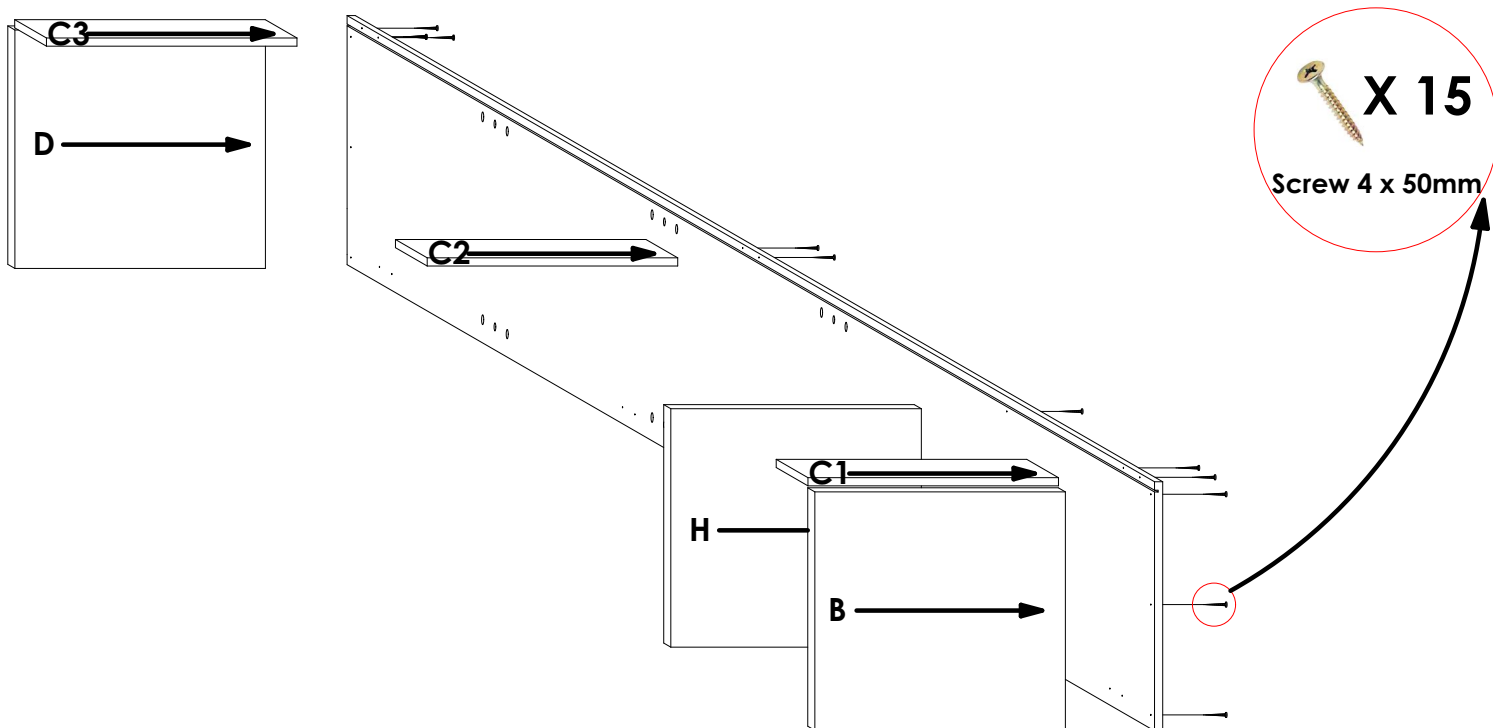STEP 1




Connect panels **B, C1, H, C2, C3 & D** to panel **A** using **Screw 4.0 X 50mm** in the pre-drilled pilot holes as shown. Refer to **Det 1 - 4** below before fastening the screws.

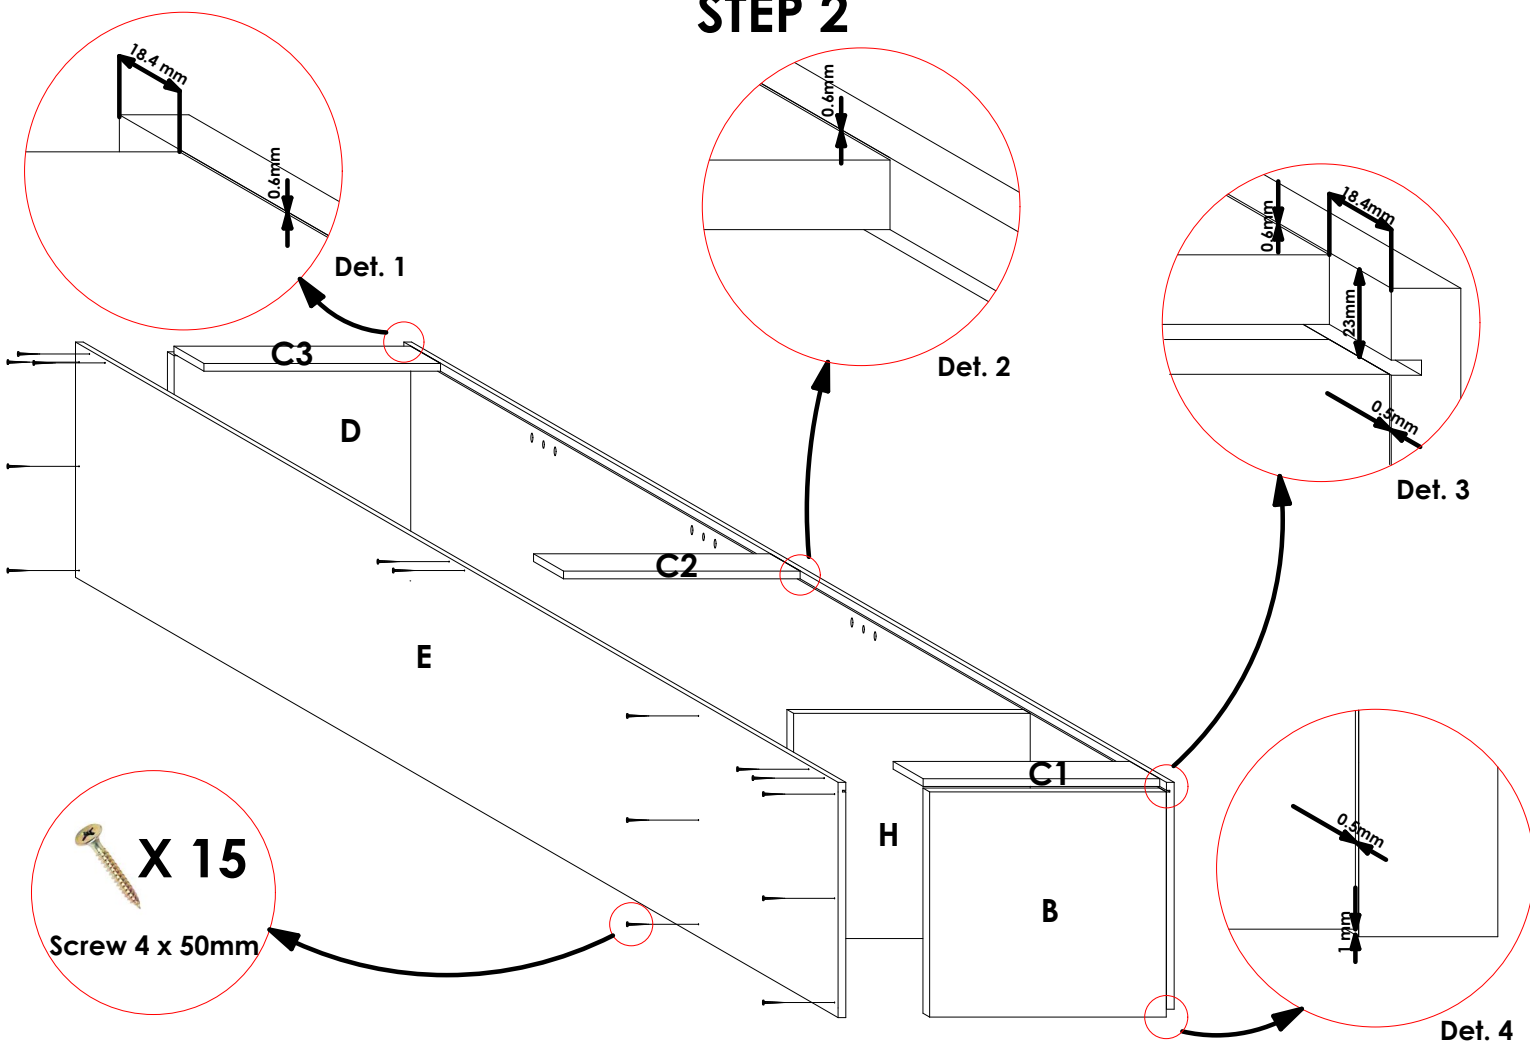STEP 2




Connect panel **E** to panels **B, C1, H, C2, C3 & D** using **Screw 4.0 X 50mm** in the pre-drilled pilot holes as shown. Ensure that the **symmetry** between panel **E** and panel **A** is maintained. Refer to **Det 1 - 4**.

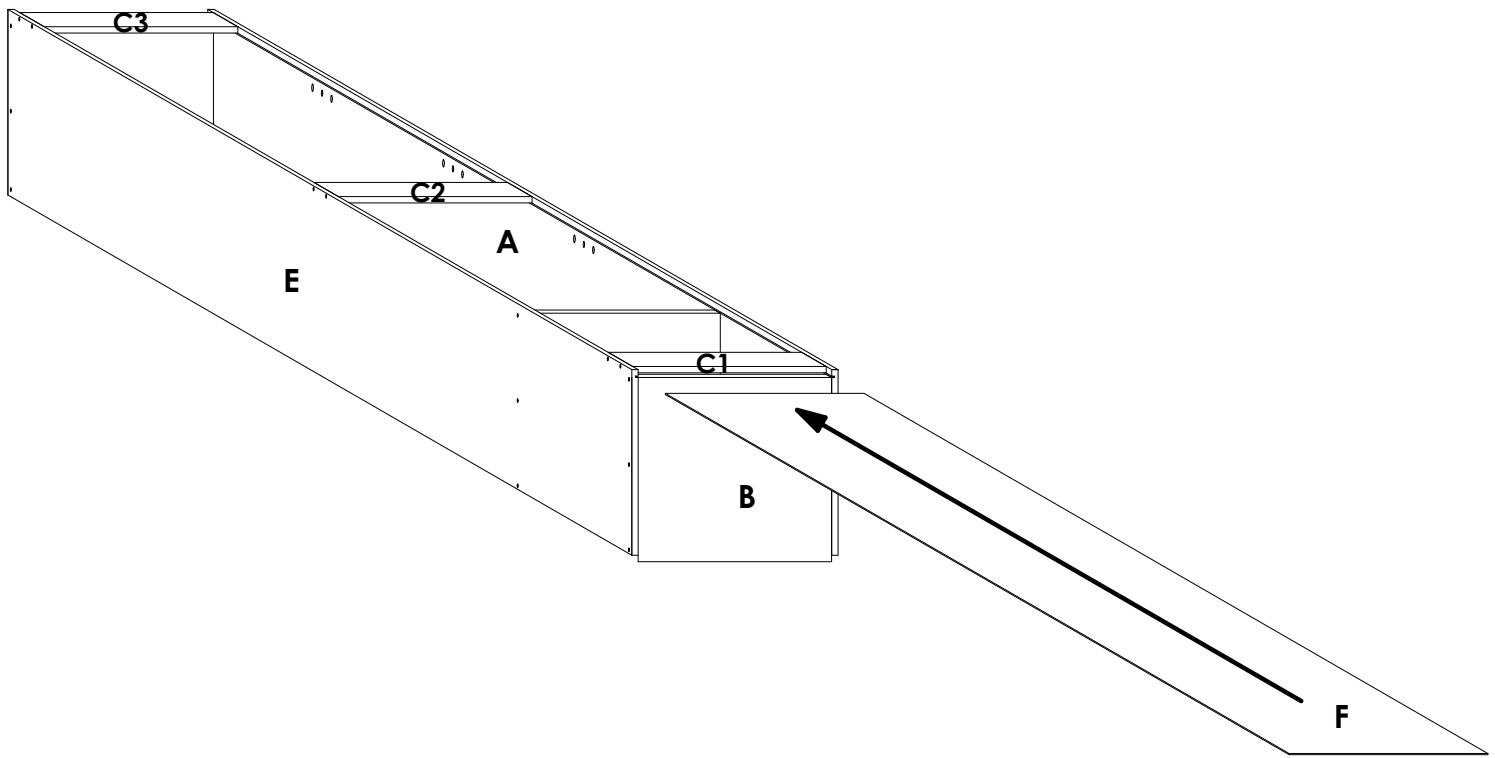STEP 3




Slide the 3mm panel (F) into the groove on panels **A & E** with the finished side facing down.

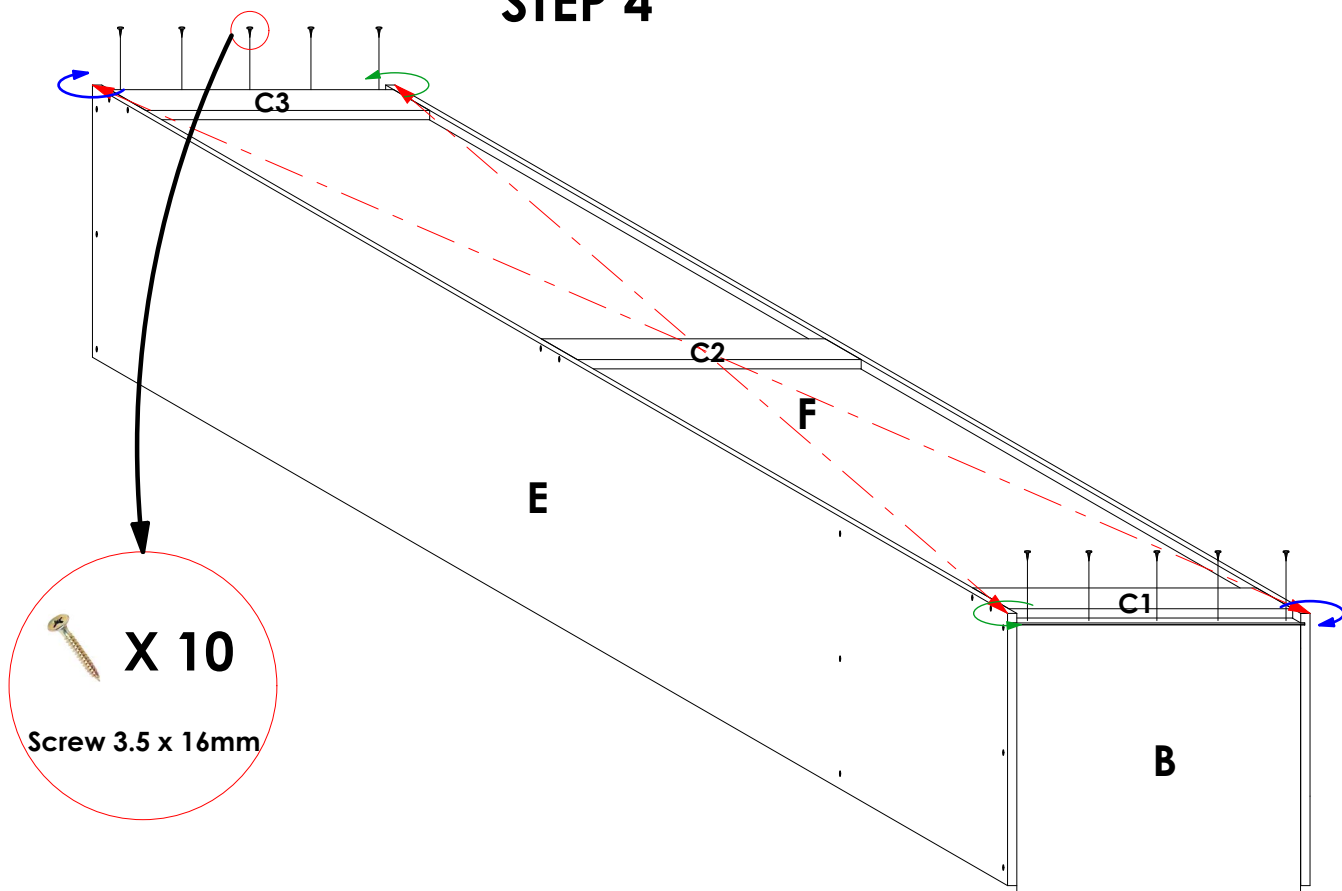STEP 4




First, **check the diagonal** of the cabinet by measuring the two distances indicated by the red, broken lines. They should be equal. If not, twist the cabinet accordingly in the diagonal corners as shown until an equal value is achieved. After, secure panel **F** to panels **B & D** as shown using **Screw 3.5 X 16mm**.

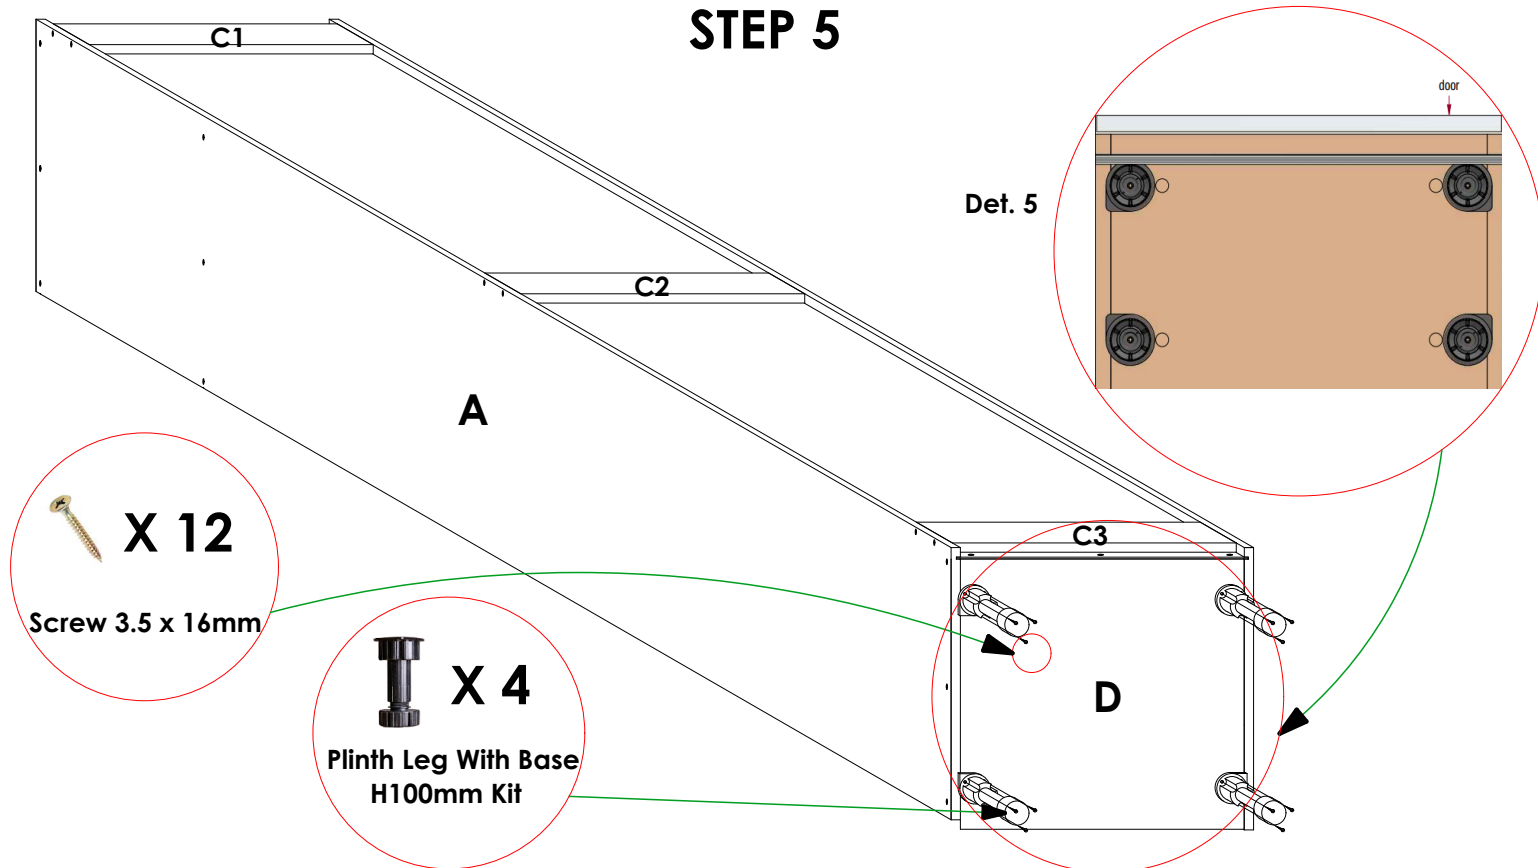STEP 5




Flip the cabinet up-side down as shown. Place the four units of **Leg Adjustable Base 100mm** in the shown positions, aligning with the pre-drilled pilot holes on panel **D**. Ensure that the orientation is as shown in **Det. 5**. Using **Screw 3.5 X 16mm**, secure the legs onto panel **D**.

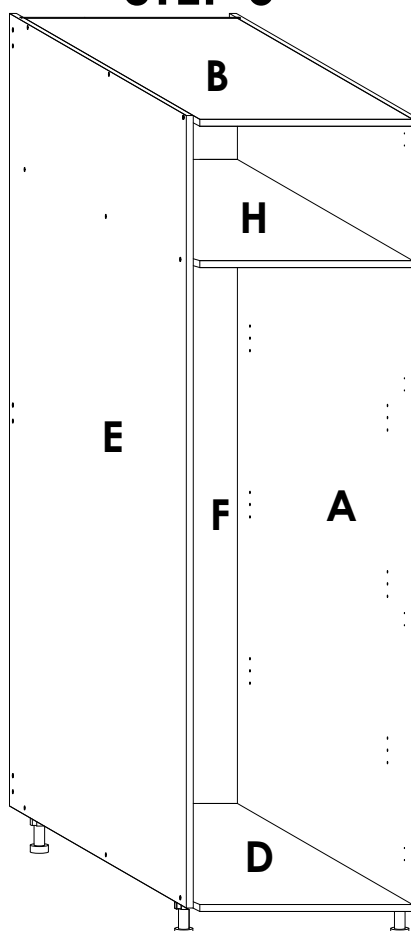STEP 6



Flip the cabinet upright down as shown and confirm that the legs are secured firmly.

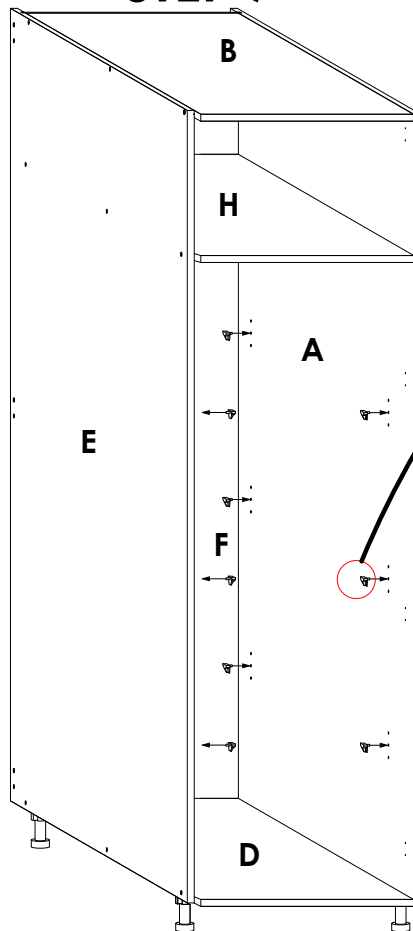STEP 7





X 12

Shelf Studs

Insert the **Shelf Studs** in the shown positions.

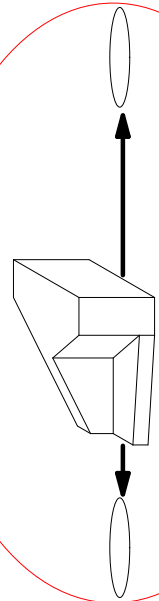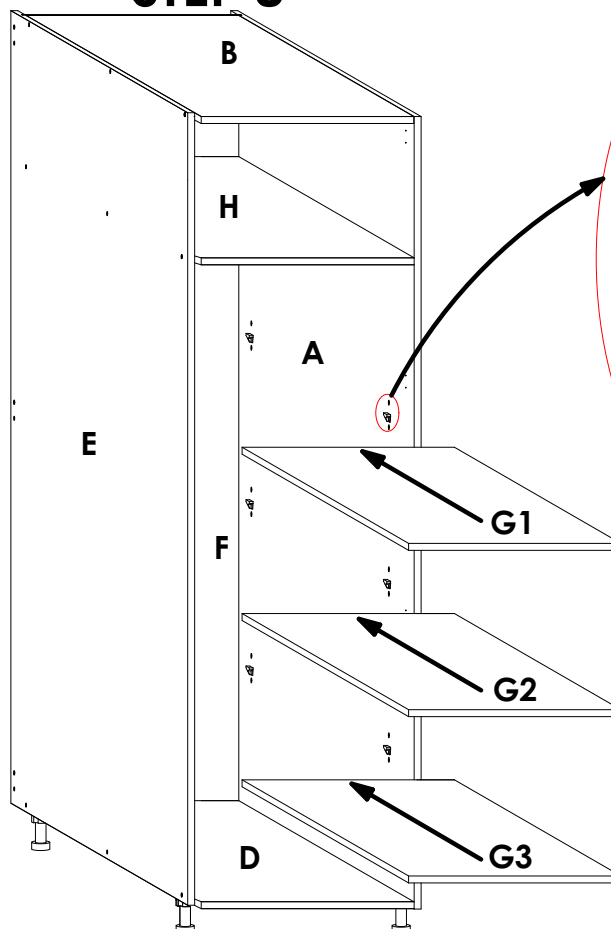STEP 8




Det. 7

Slide in panels **G1**, **G2** & **G3** as shown, such that it sits on the four shelf studs. The level of the shelf is adjustable by shifting the position of the shelf studs as shown in **Det. 7**. See **Door Installation Guide** for further instructions.

GOLA INSTALLATION GUIDE

DOUBLE VERTICAL GOLA

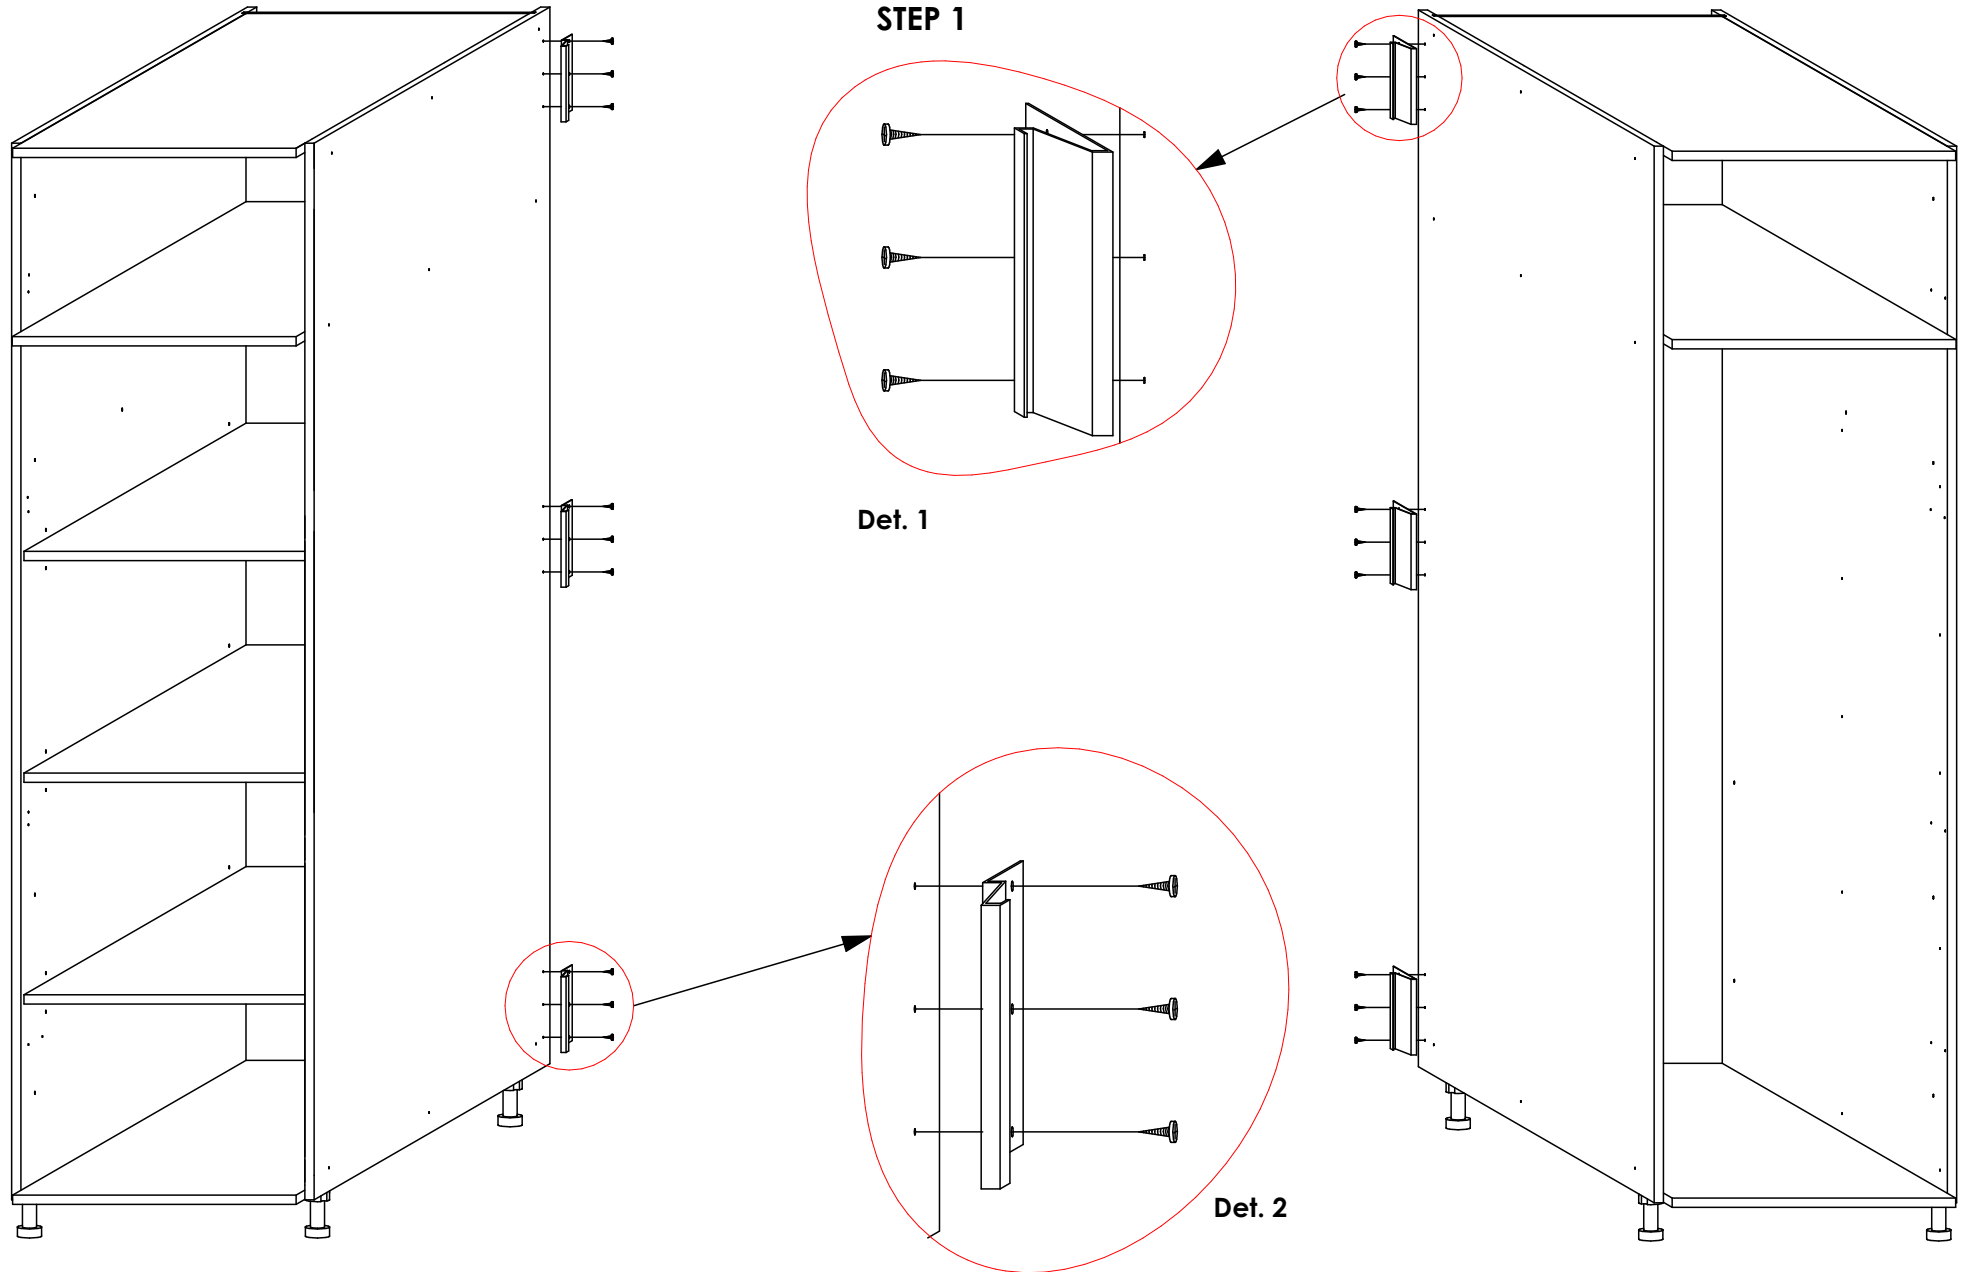STEP 1




For two adjoining Tall Cabinets, connect the provided steel brackets in the shown positions using the provided screws. Use the pre-drilled pilot holes as a guide. See **Det. 1 & Det. 2**.

GOLA INSTALLATION GUIDE

DOUBLE VERTICAL GOLA

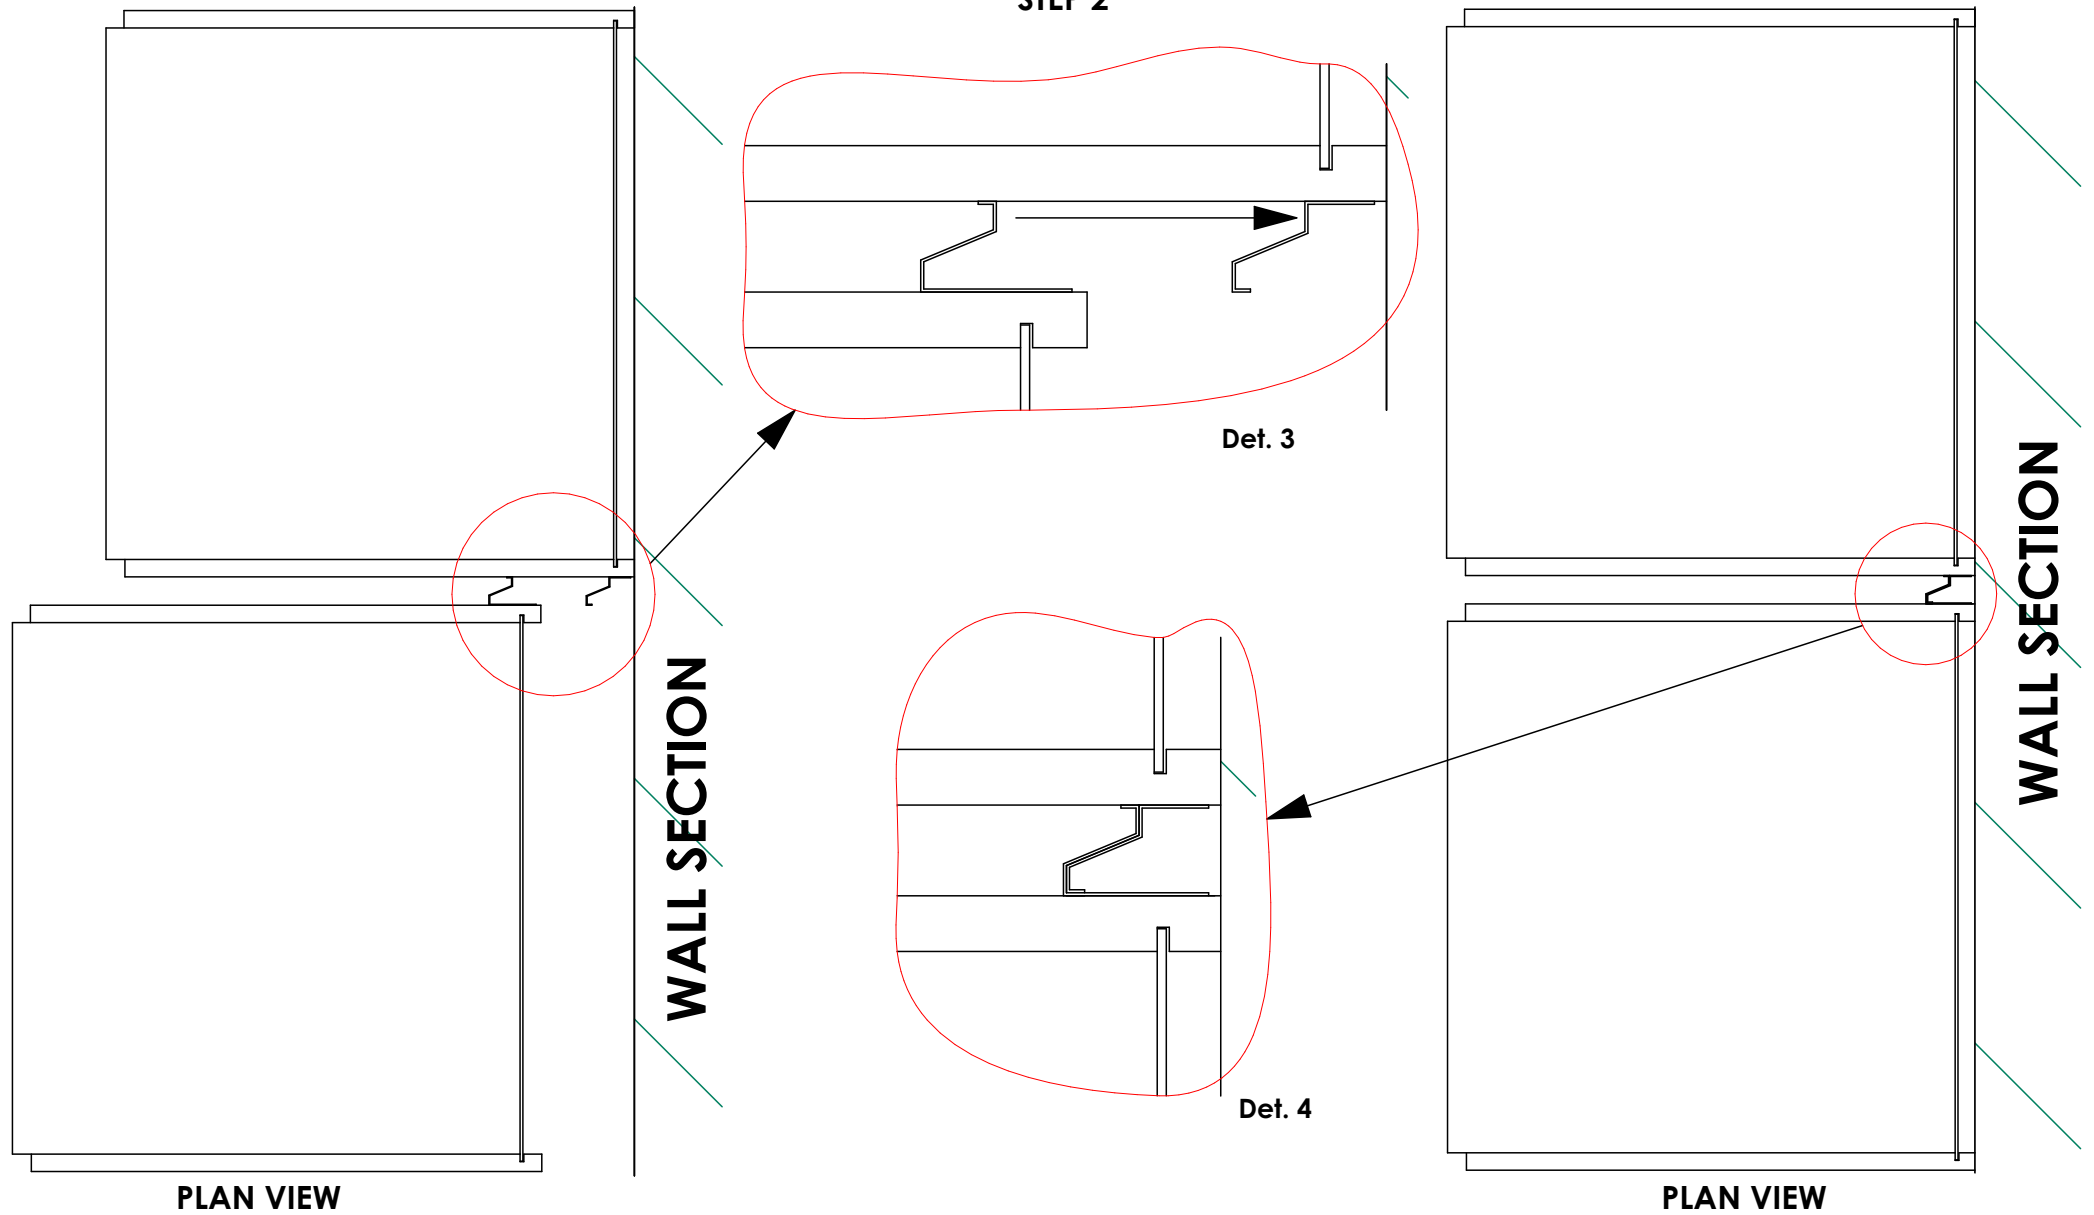STEP 2




Connect the adjoining cabinets such that the steel brackets interlock. See **Det. 3** & **Det. 4**.

GOLA INSTALLATION GUIDE

DOUBLE VERTICAL GOLA

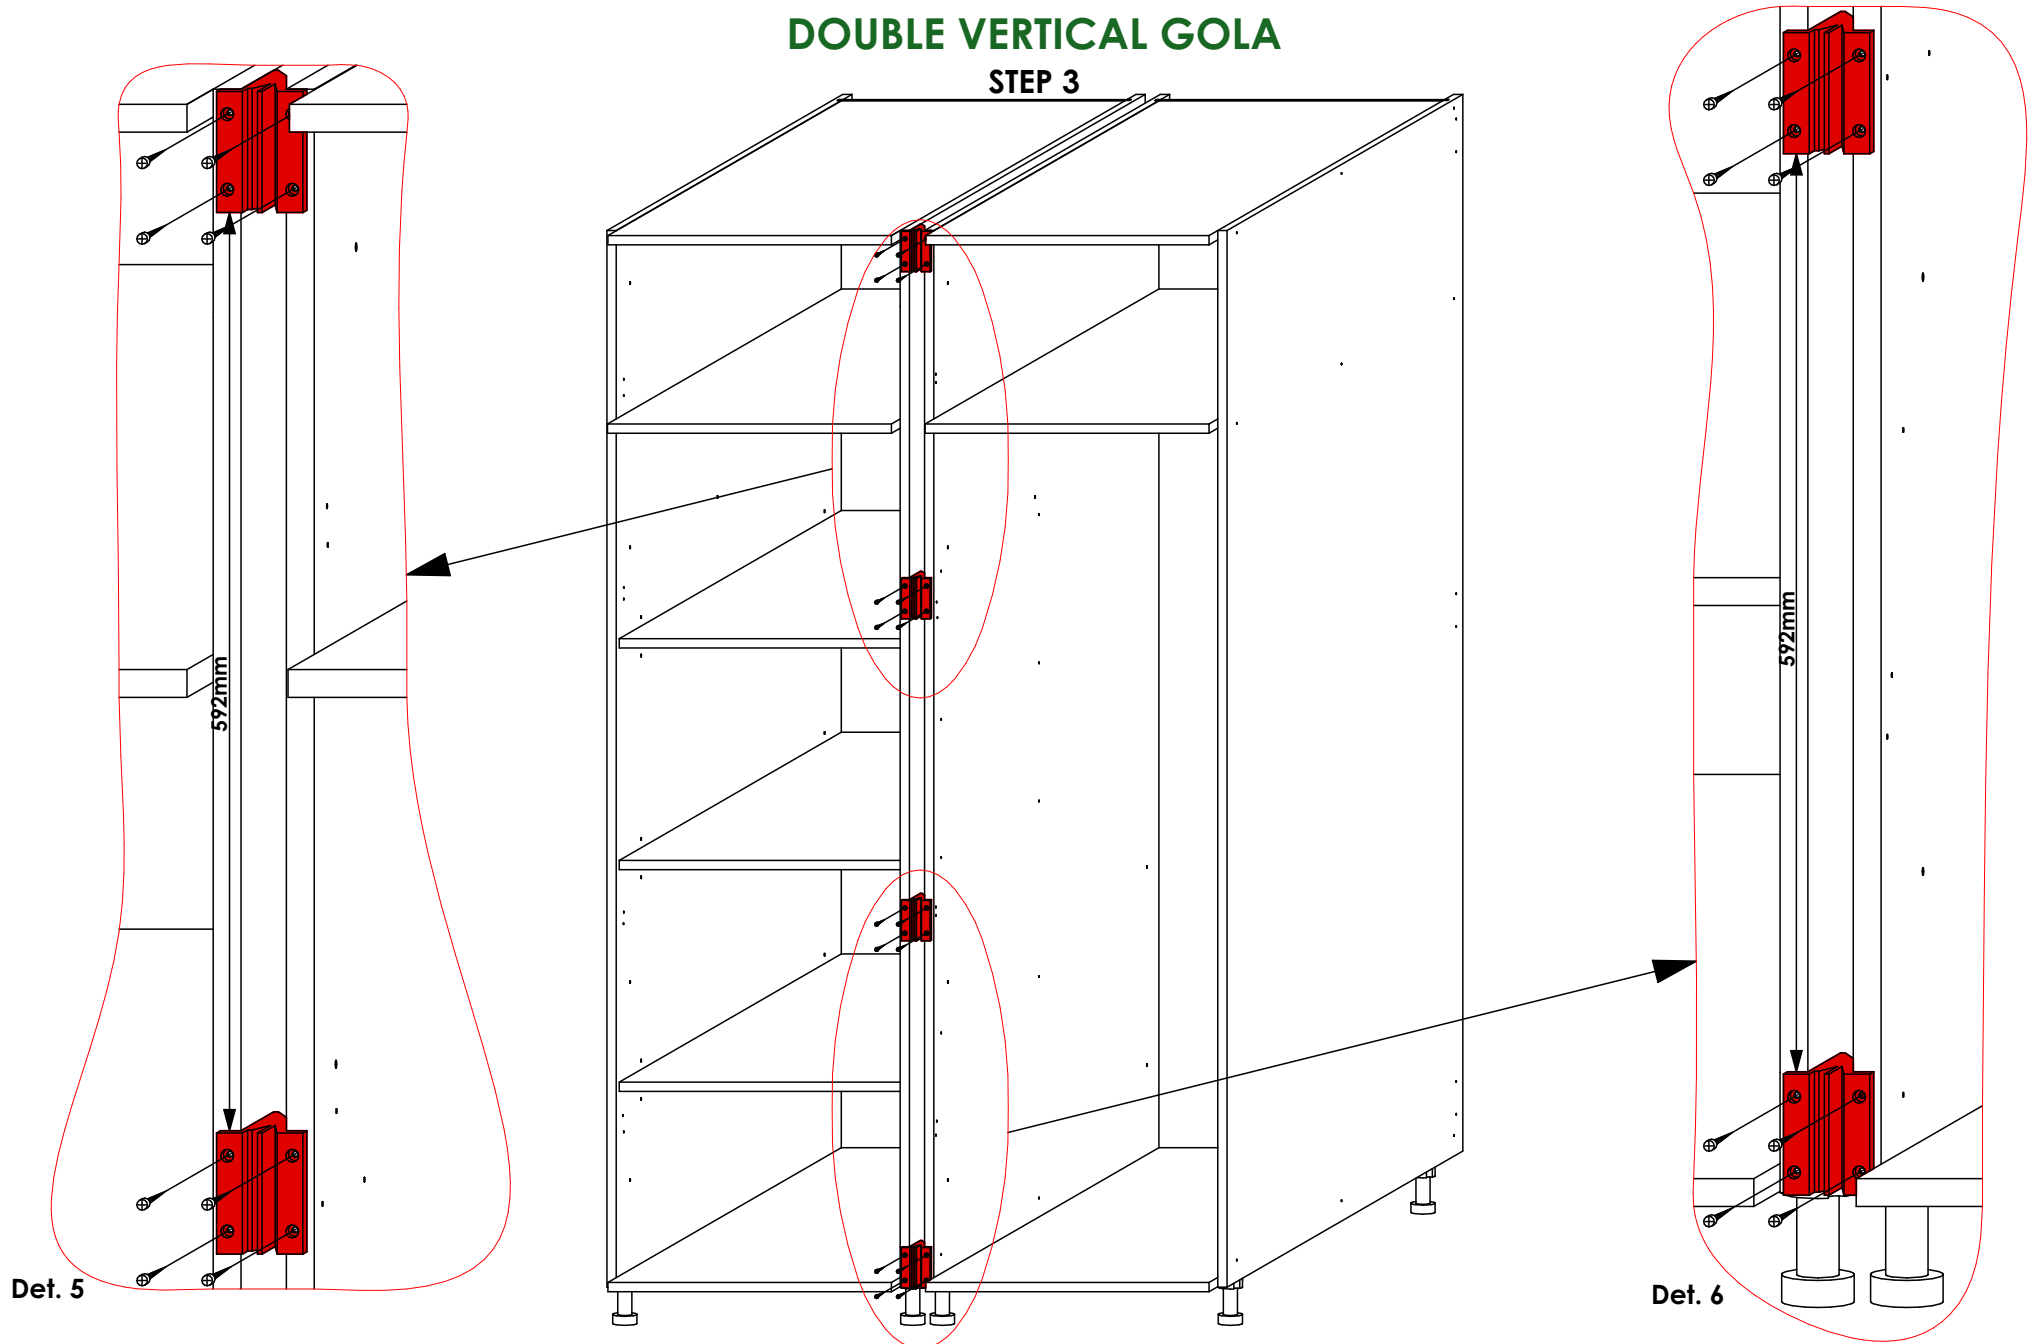STEP 3





With the steel brackets interlocked, connect the **Double Vertical Gola Snap-on brackets** in the shown positions using the provided screws. See **Det. 5 & Det. 6** for measurements.

GOLA INSTALLATION GUIDE

DOUBLE VERTICAL GOLA

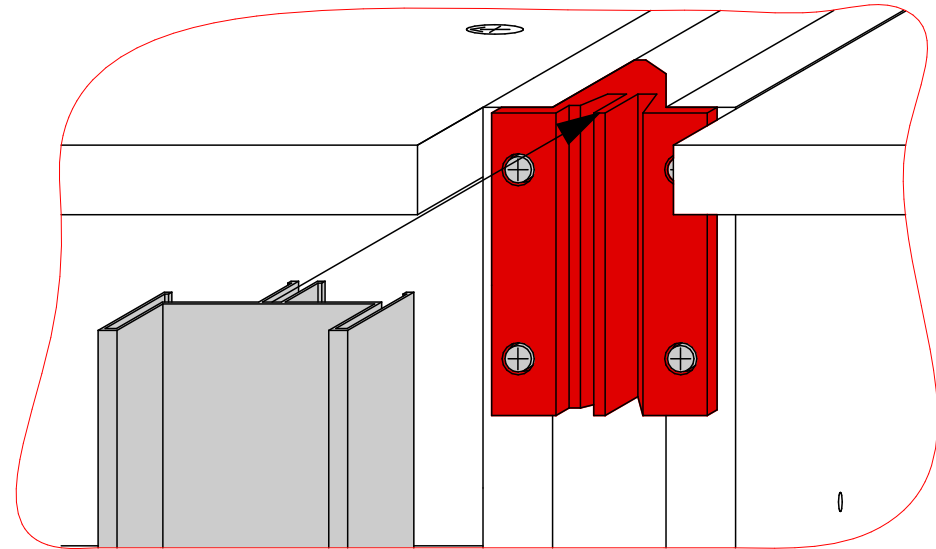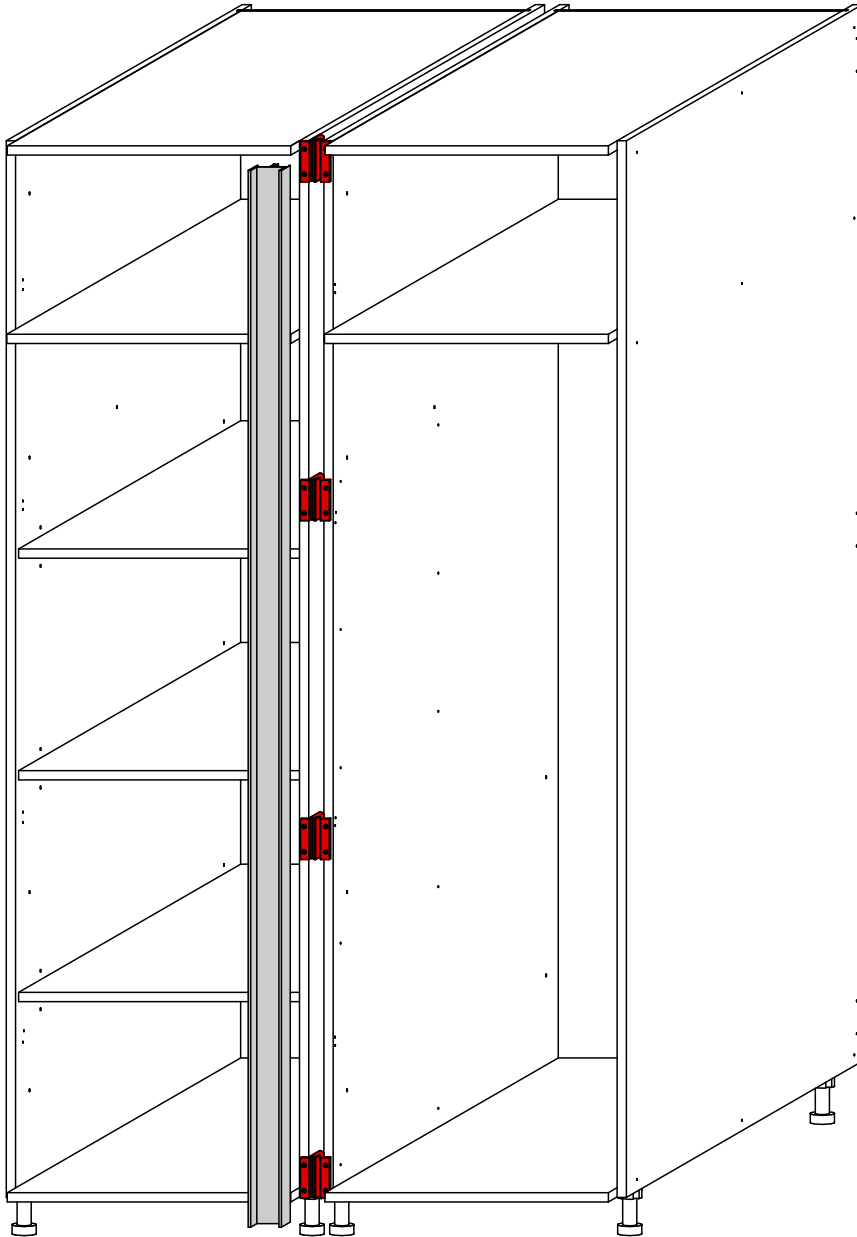STEP 4



Det. 7


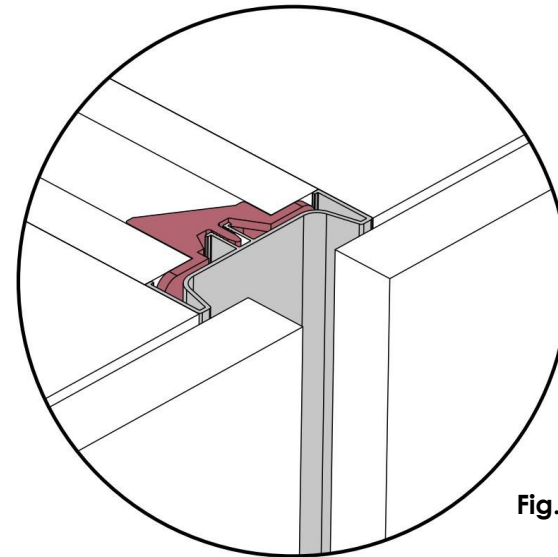


Fig. 1

Snap the **Double Vertical Gola Profile** into the **Double Vertical Gola Snap-on brackets**. See **Det. 7 & Fig. 1**.

GOLA INSTALLATION GUIDE

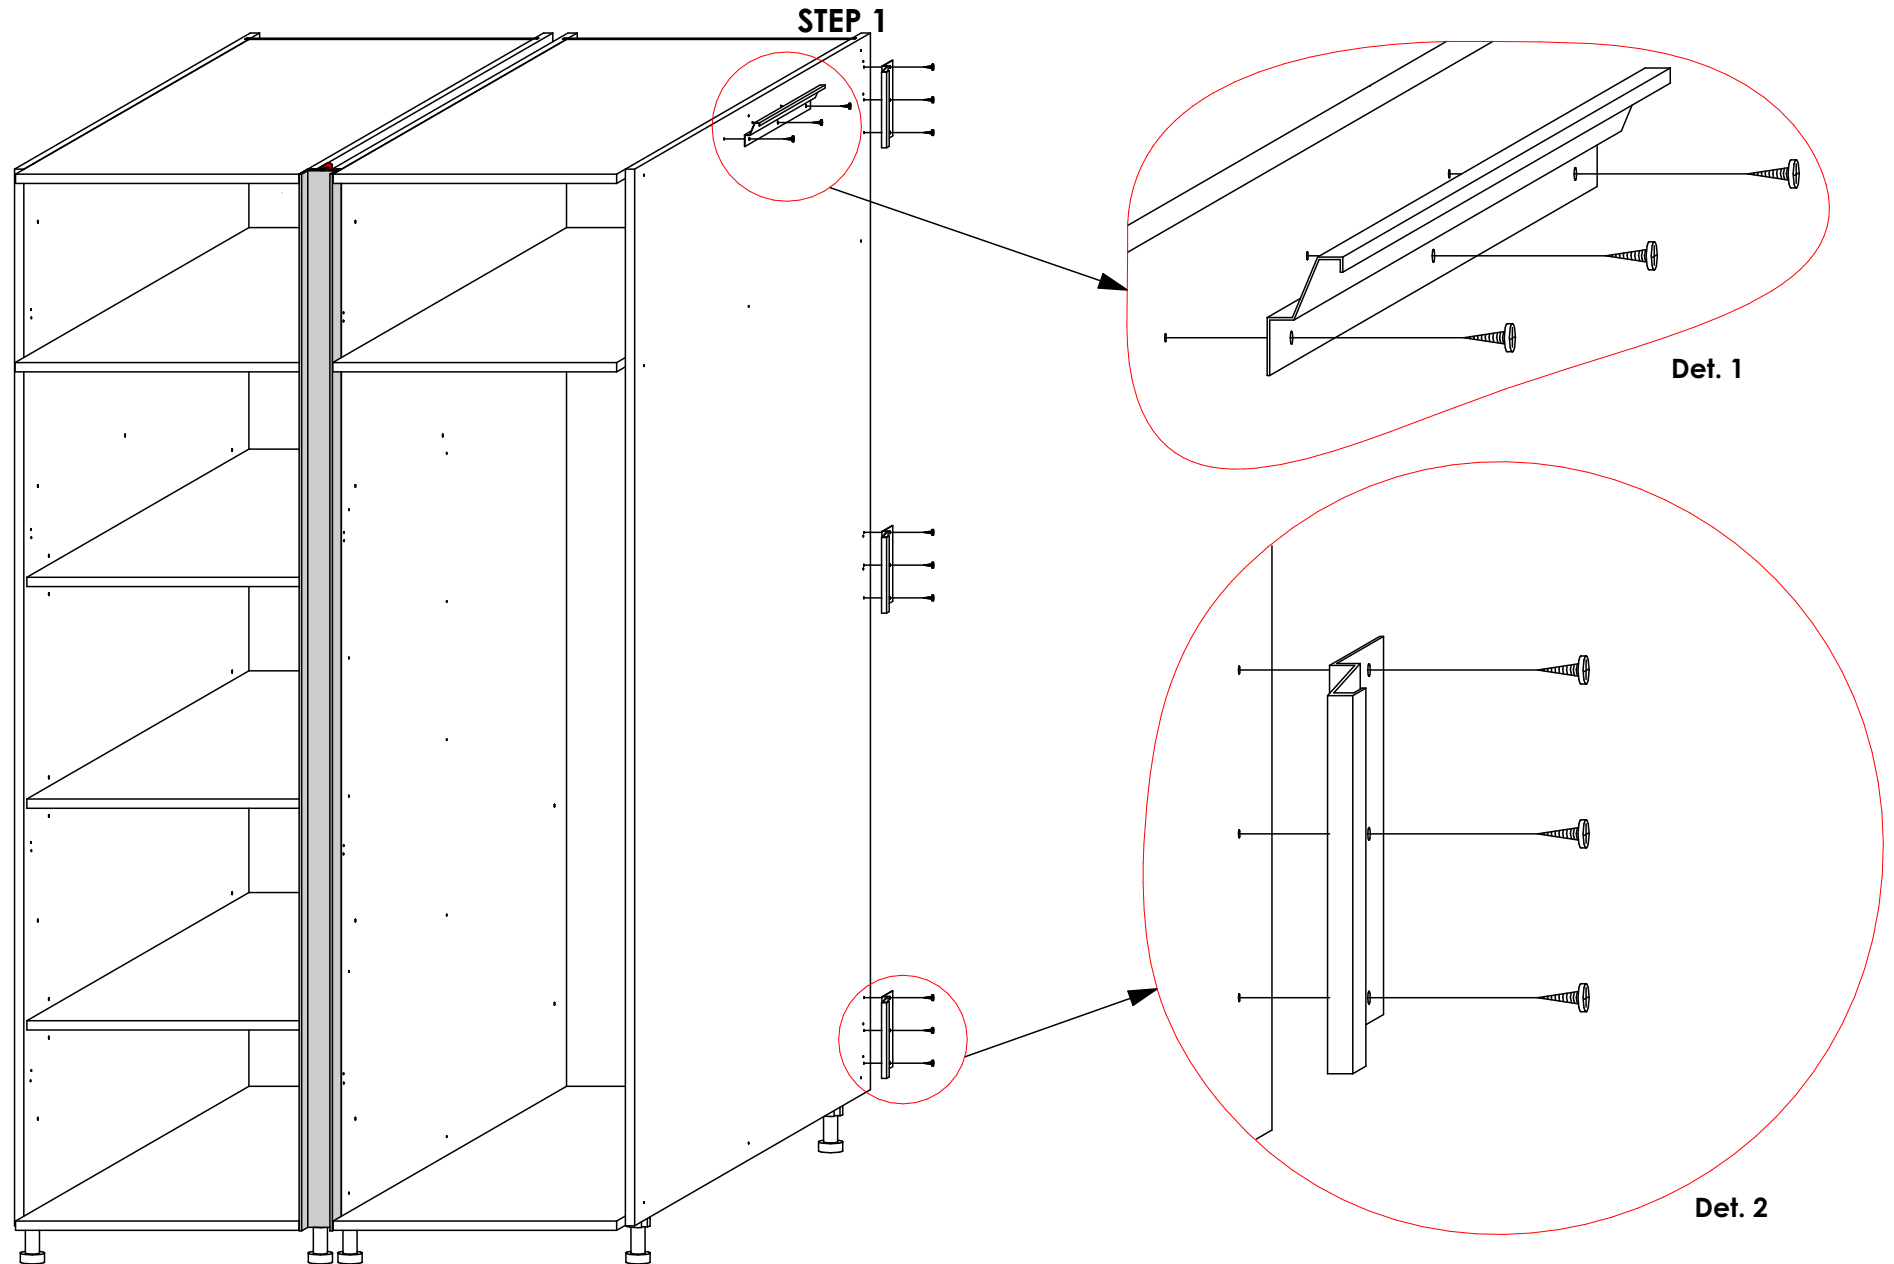SINGLE VERTICAL GOLA




For an end panel connecting to a Tall Cabinet, connect the provided steel brackets in the shown positions using the provided screws.
Use the pre-drilled pilot holes as a guide. See **Det. 1** & **Det. 2**.

GOLA INSTALLATION GUIDE

SINGLE VERTICAL GOLA

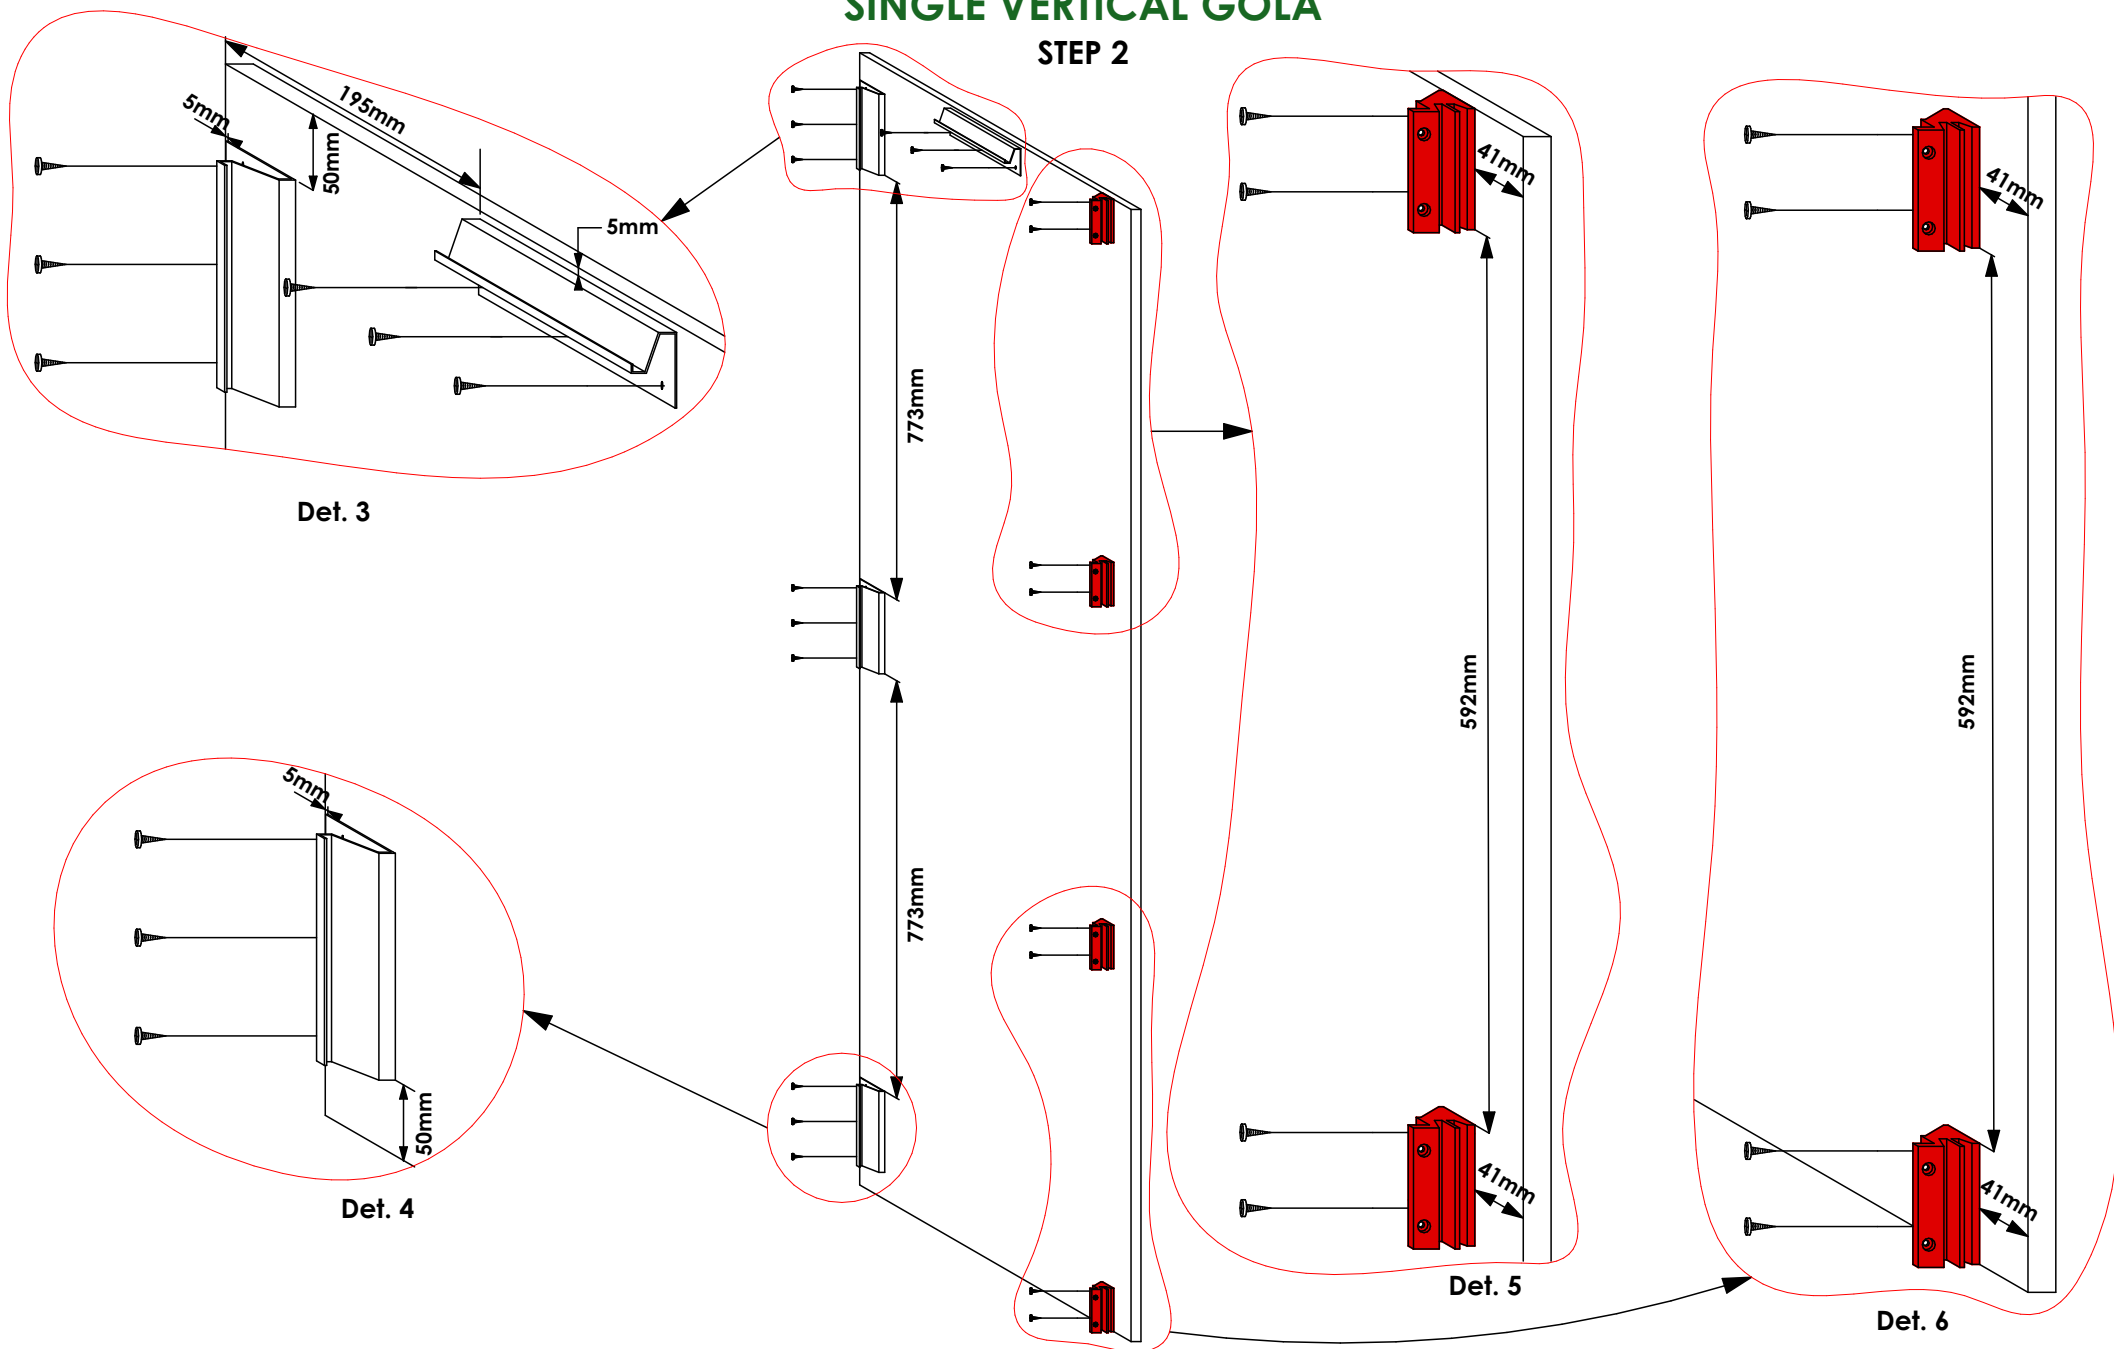STEP 2



On the end panel, connect the provided **steel brackets** and **Single Vertical Gola Snap-on brackets** in the shown positions using the provided screws. See **Det. 3 - Det. 6** for measurements.

GOLA INSTALLATION GUIDE

SINGLE VERTICAL GOLA

STEP 3

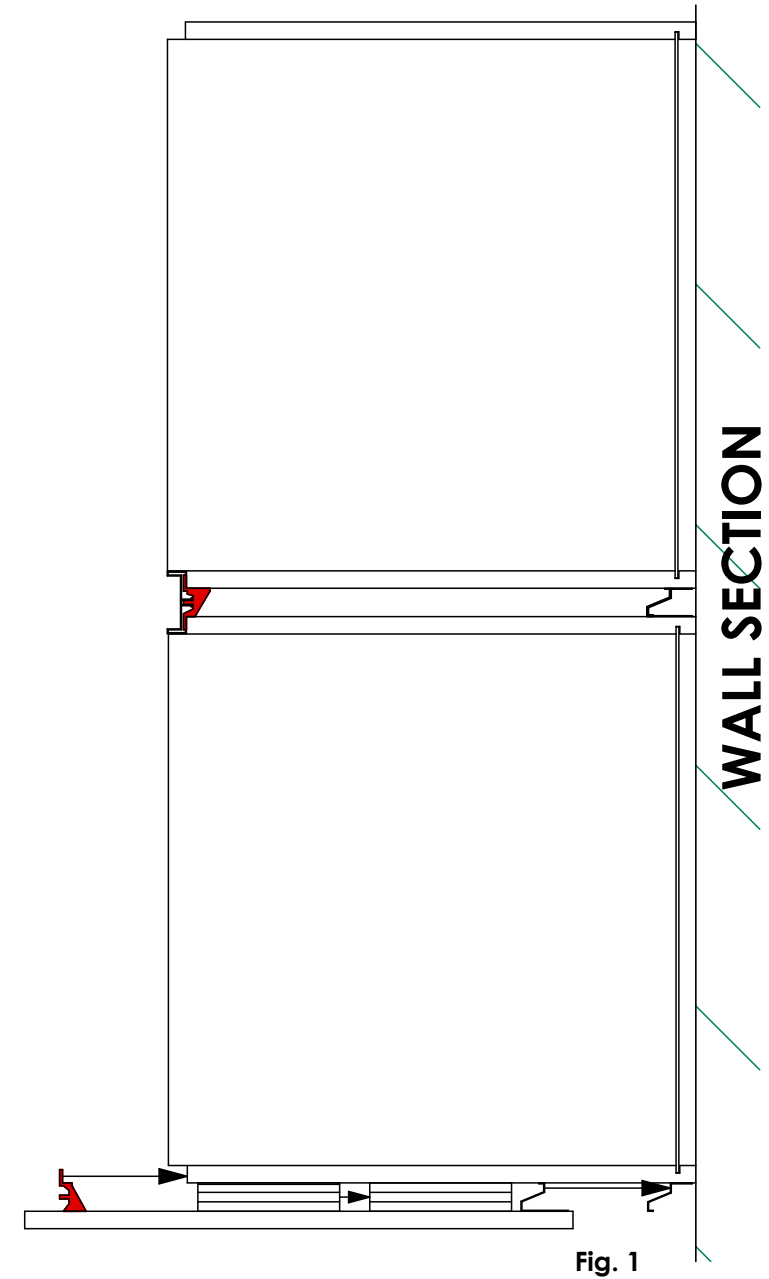
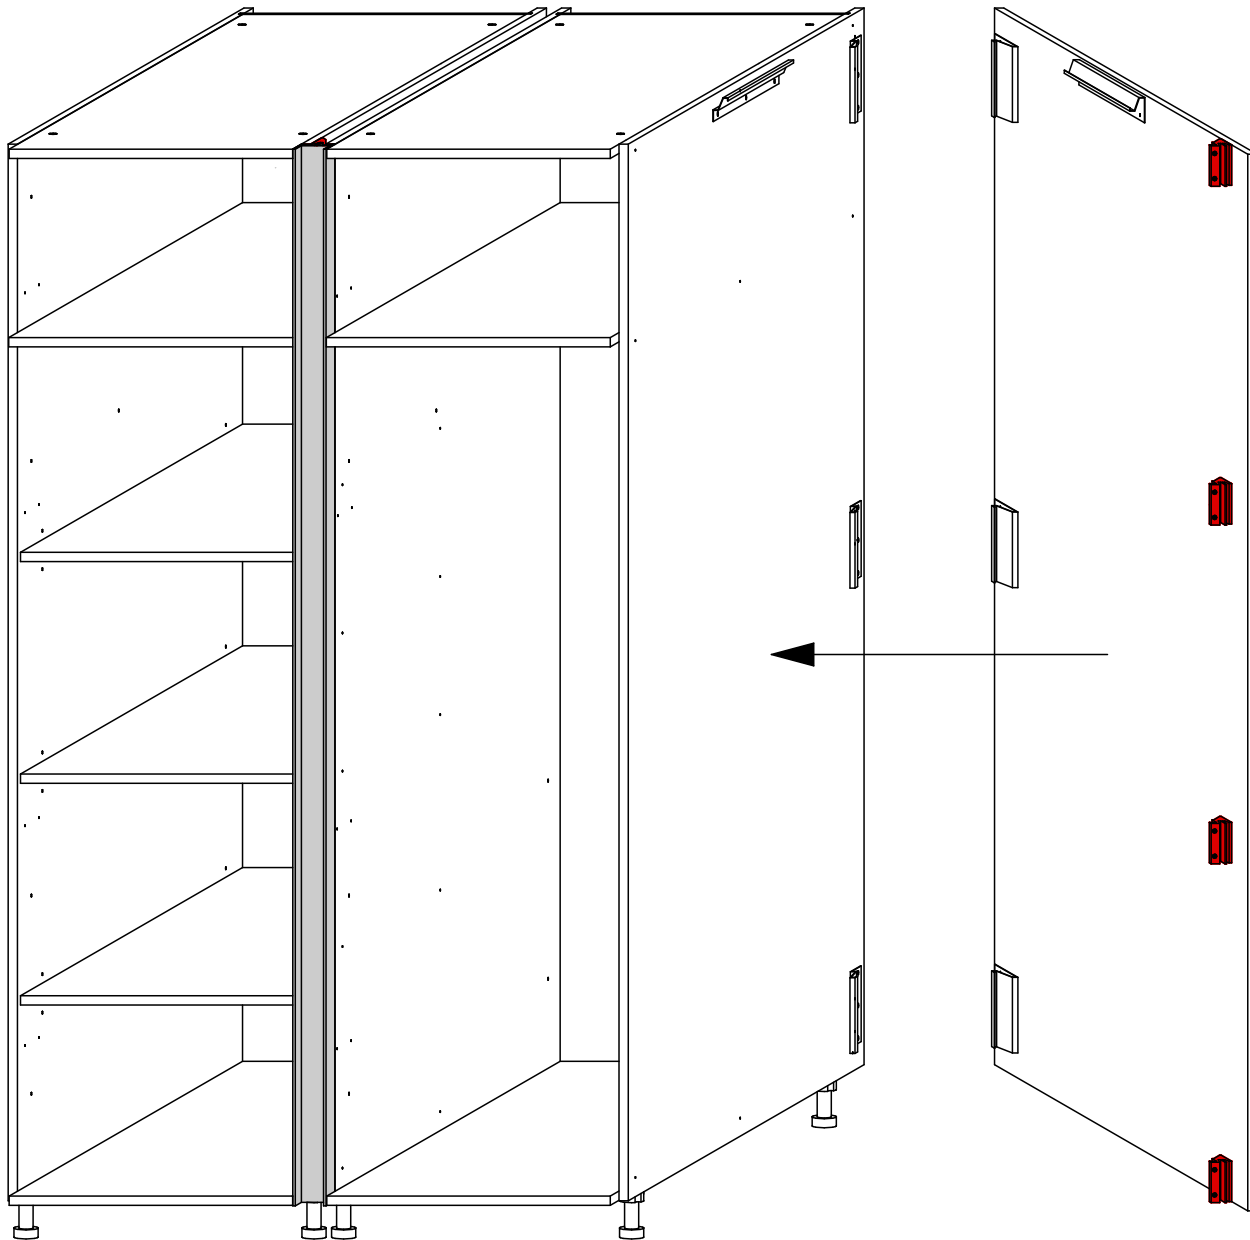


Fig. 1

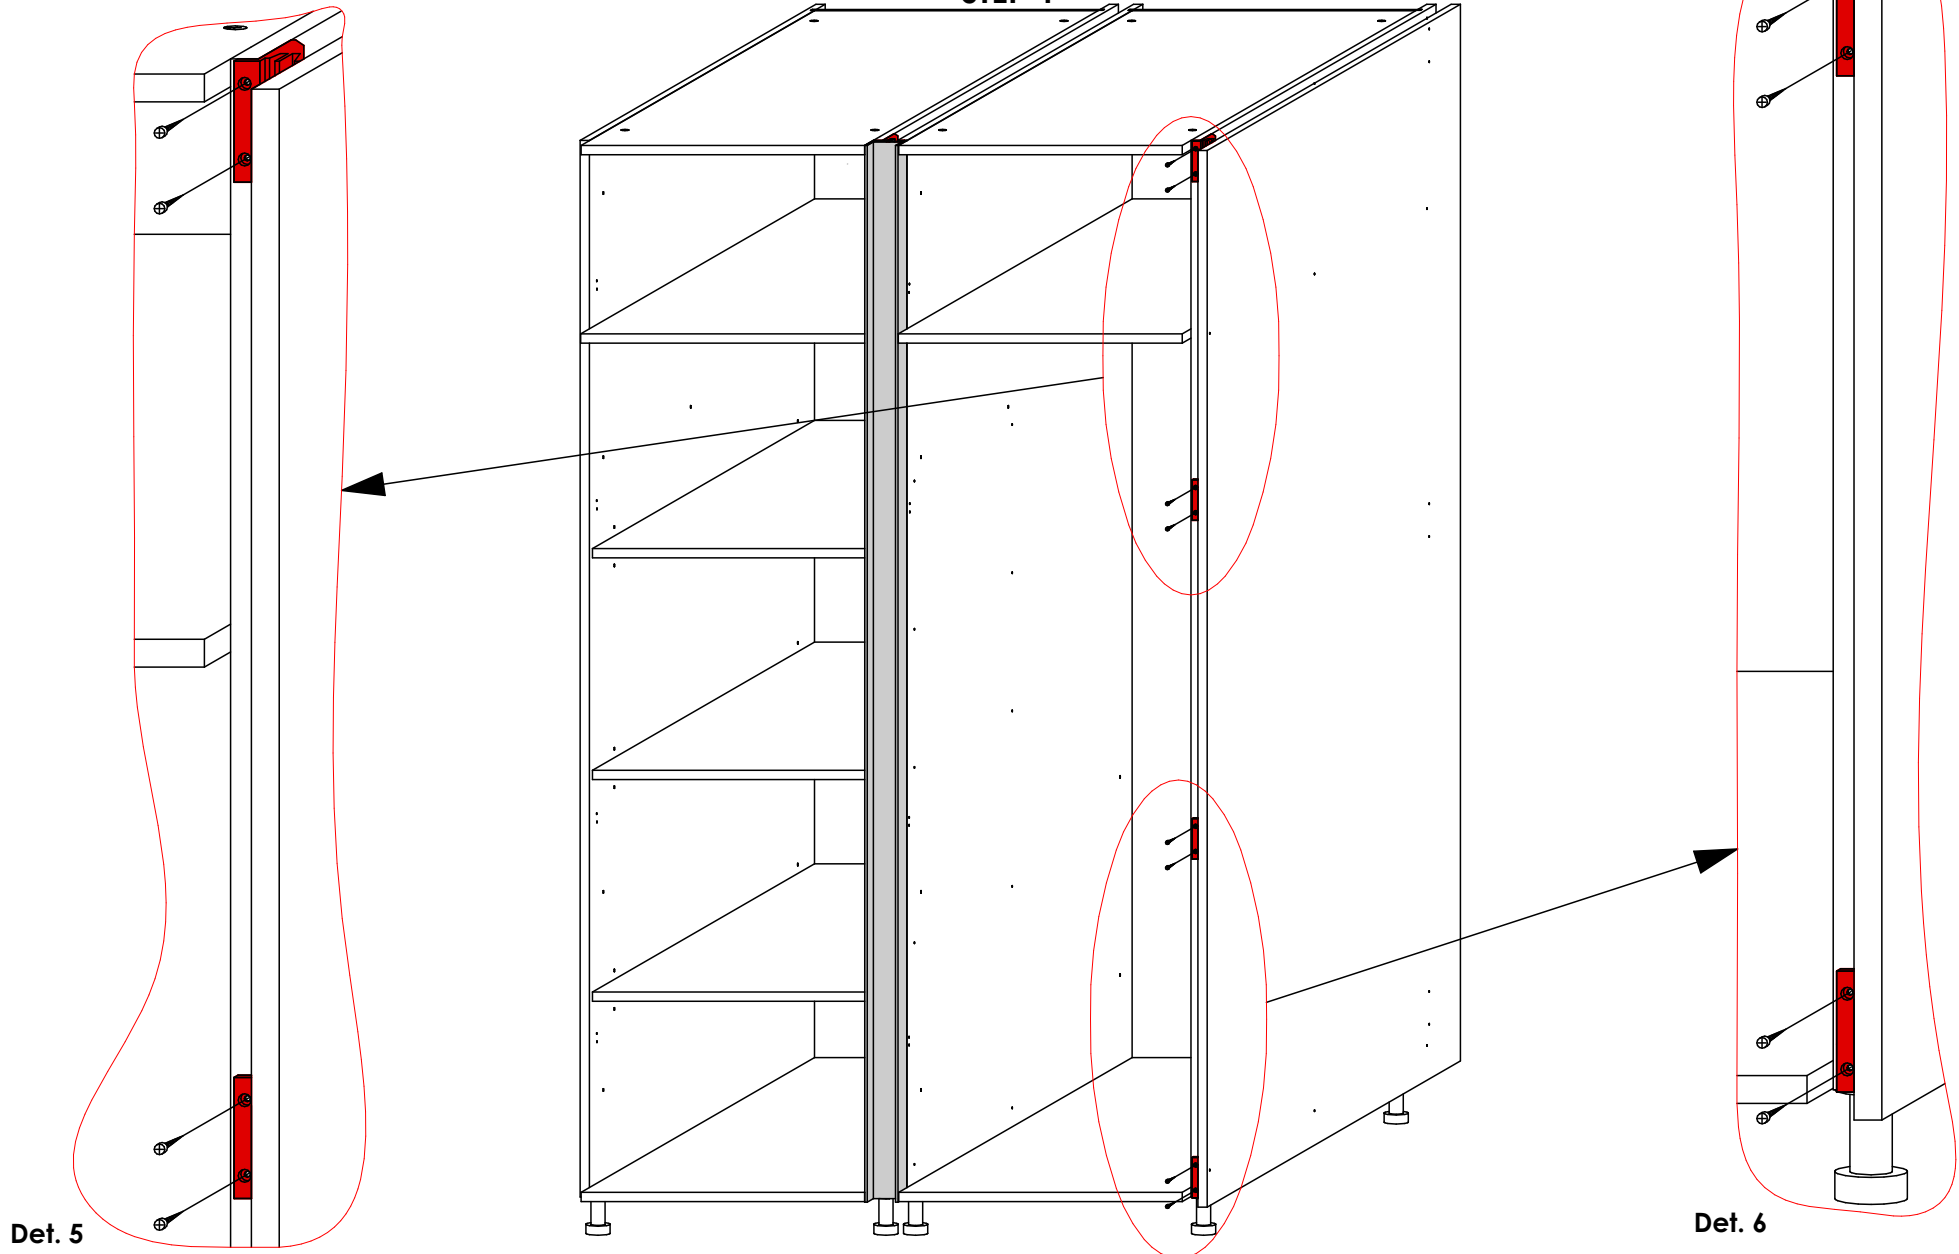
PLAN VIEW

Connect the end panel to the tall cabinet as shown. See **Fig. 1** for details.

GOLA INSTALLATION GUIDE

SINGLE VERTICAL GOLA

STEP 4





With the **steel brackets interlocked** and the **Single Vertical Gola Snap-on brackets in position**, add the provided screws for the **Single Vertical Gola Snap-on brackets** in the shown positions. See **Det. 5 & Det. 6**.

GOLA INSTALLATION GUIDE

SINGLE VERTICAL GOLA

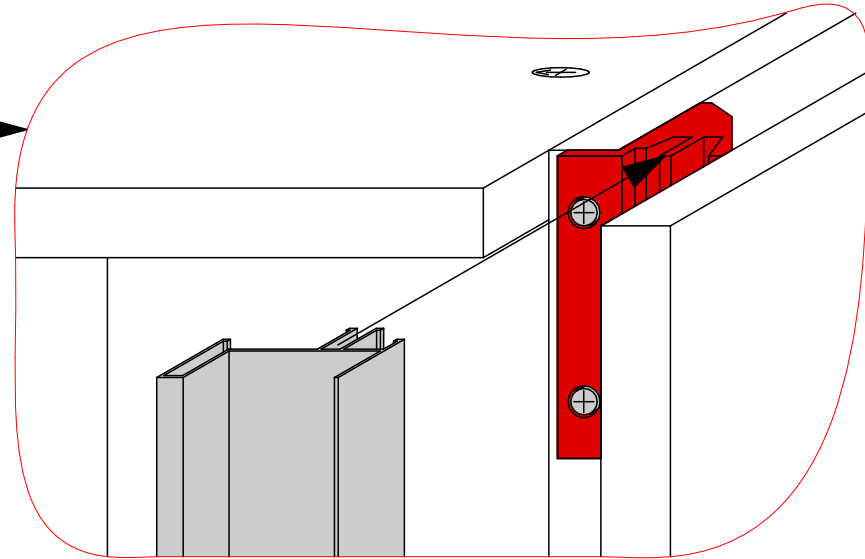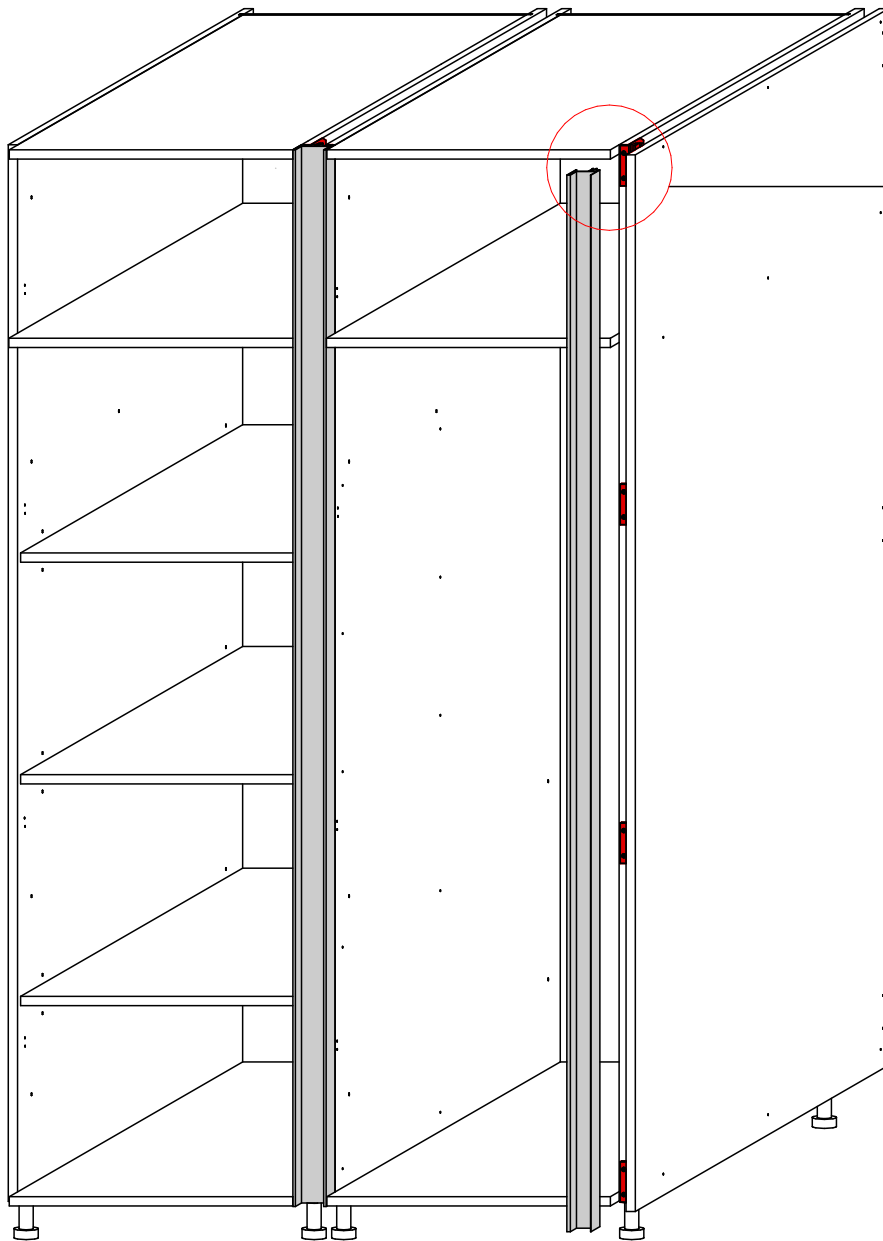STEP 5



Det. 7

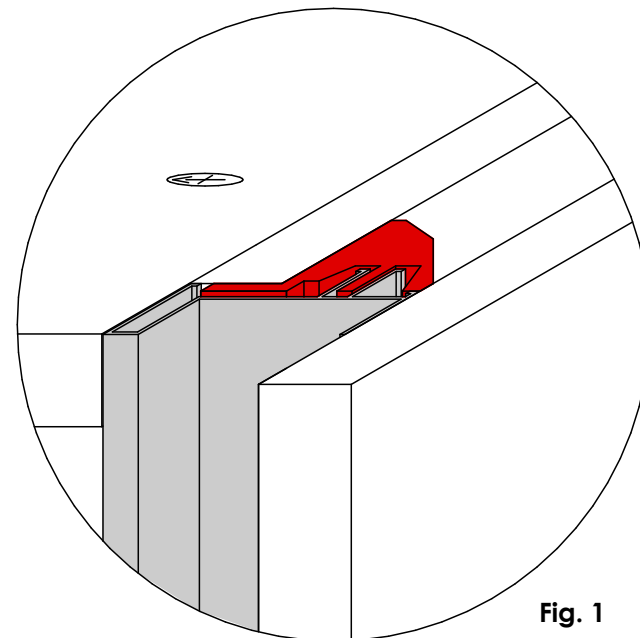
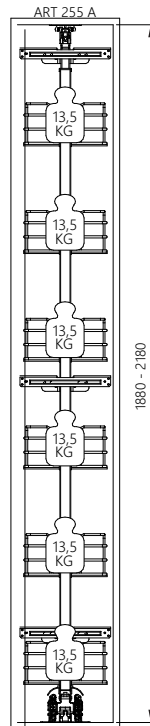








Fig. 1

Snap the **Single Vertical Gola Profile** into the **Single Vertical Gola Snap-on brackets**. See **Det. 7 & Fig. 1**.

PULL OUT TRAY - 300mm Tall ASSEMBLY GUIDE



HARDWARE

PRODUCT	QTY	IMAGE
Upper Frame(A)	1	
Lower Frame(B)	1	
Shallow Bottom Runner(C)	1	
Upper Runner(D)	1	
Door bracket(E)	1	
Door bracket frame(F)	1	
Fixing Support(G)	1	

GENERAL INSTRUCTIONS

Always read the full instructions prior to installation.

- Consider possible obstructions to your parts & accessories, like hinges inside the cabinet or adjacent cabinet doors and handles, prior to installation.
 - Make sure you leave plumbing and electrical work to qualified trades people. Never try this yourself.
 - Make sure you always use safety gear like a mask, ear muffs and glasses when using tools.
- **Tip:** After marking out the pre-drill holes as per the instructions, take the part that is to be installed and align the appropriate holes with the markings to ensure they match up prior to pre-drilling the holes.

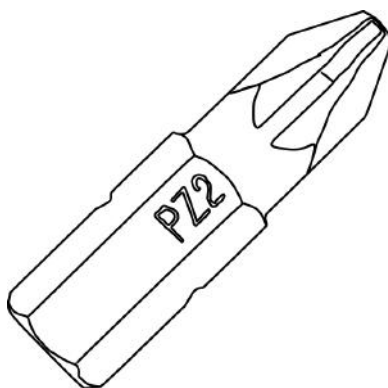
TOOLS REQUIRED






Screw Driver
(Pozidriv Head)




Cordless Drill




Pozi Bit (PZ2)

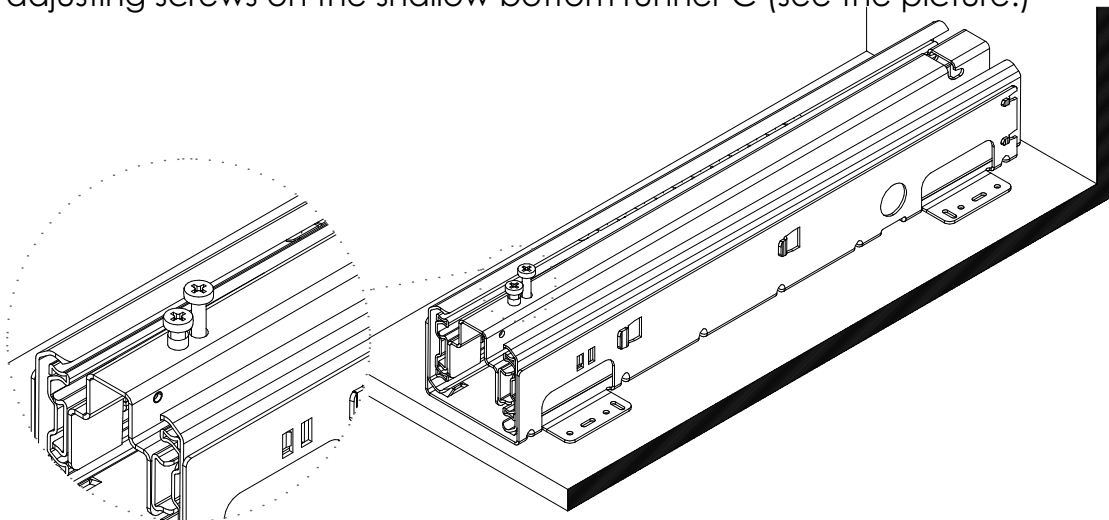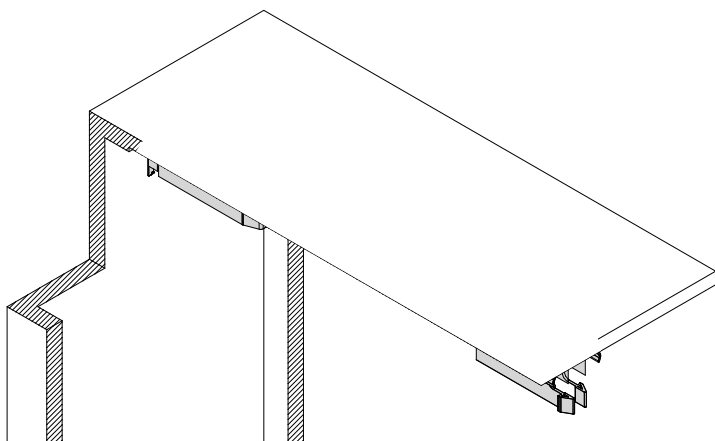

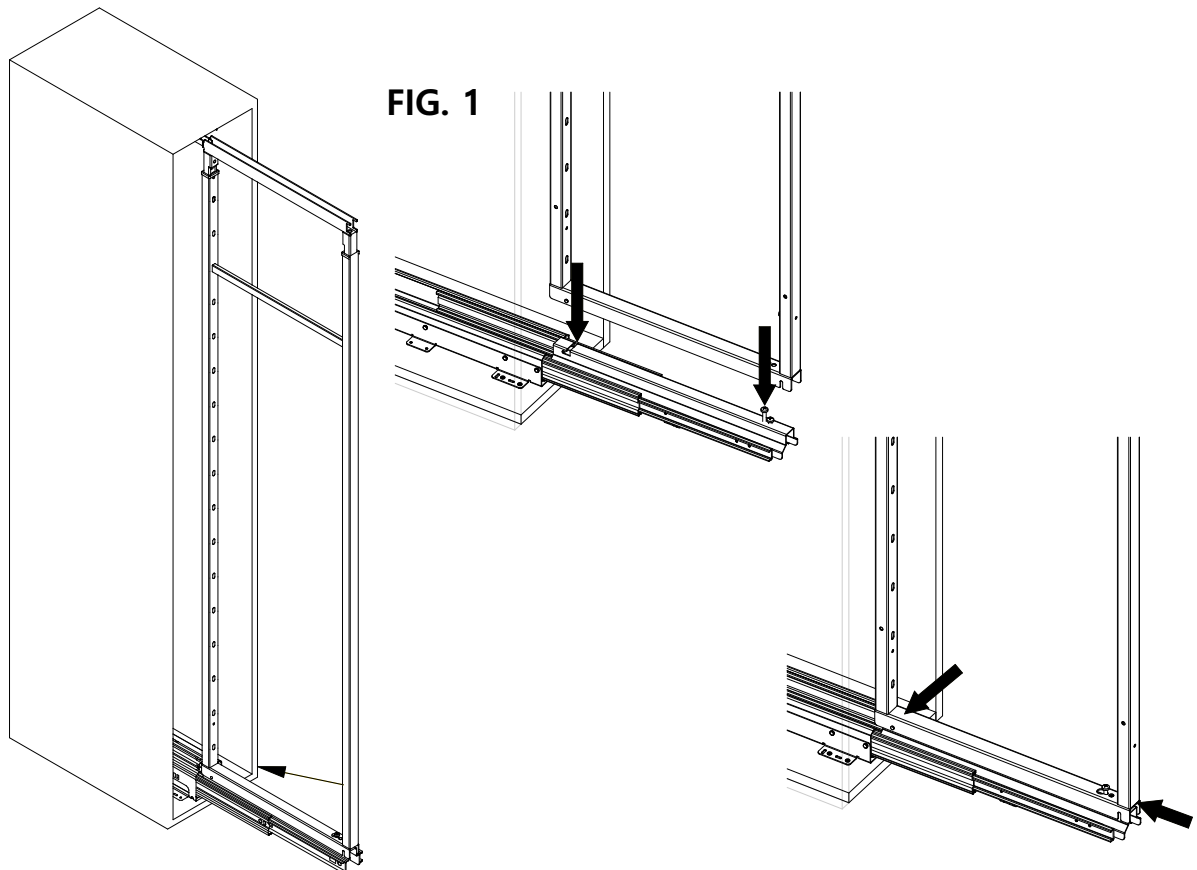
STEP 4: Fix the frame A in the shallow bottom runner C open and tighten the screws.
(see the picture 1)



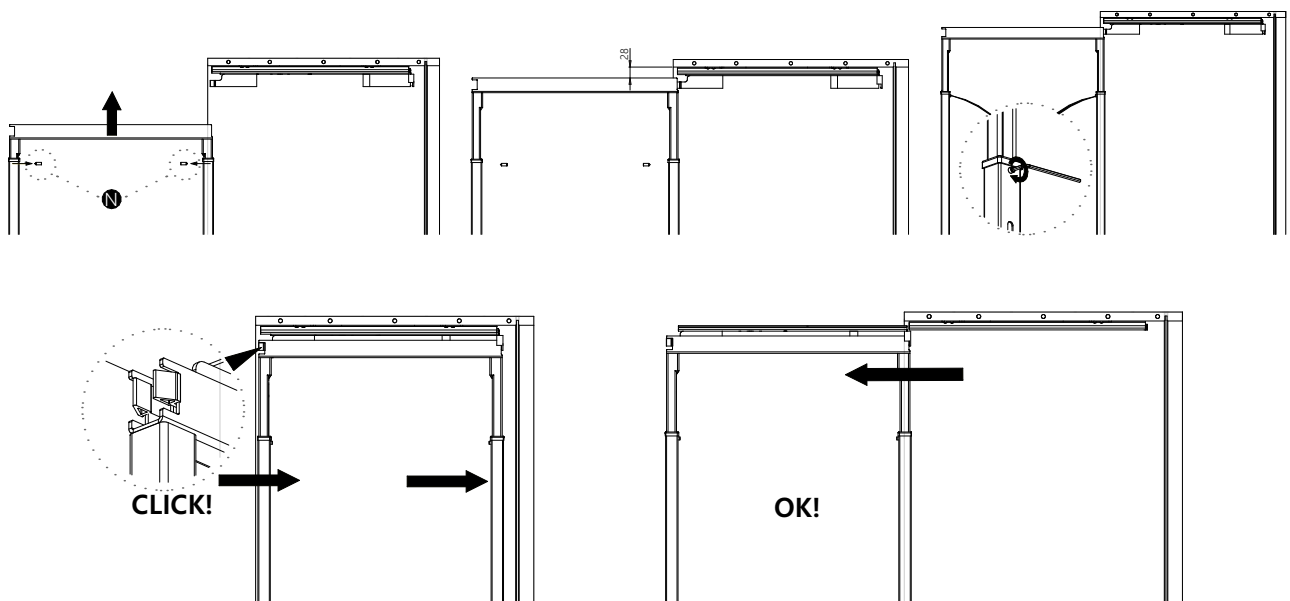
STEP 5: Loosen the grains "N" (on the frame A) and slide up the frame B. Block the frame B at the indicated measure by tightening the grains "N". Slide the frame A, B into the top slide D until "Click!" to install.




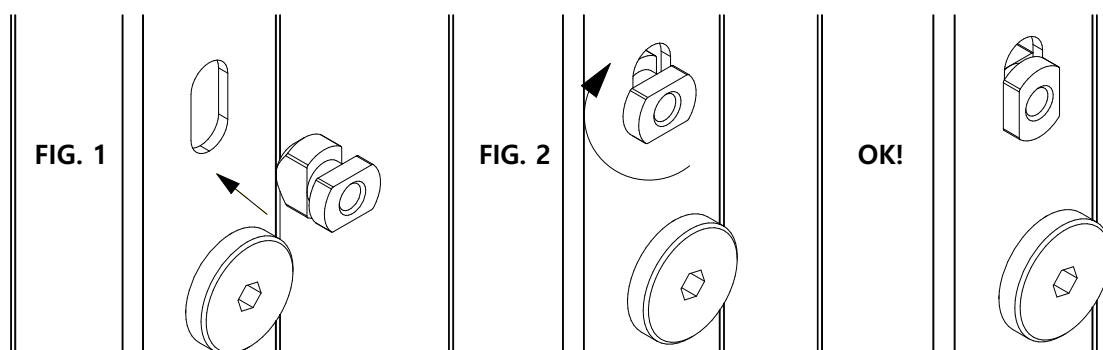
STEP 6: Set the special fixing support G in the frame hole A.(see the picture sequence.)



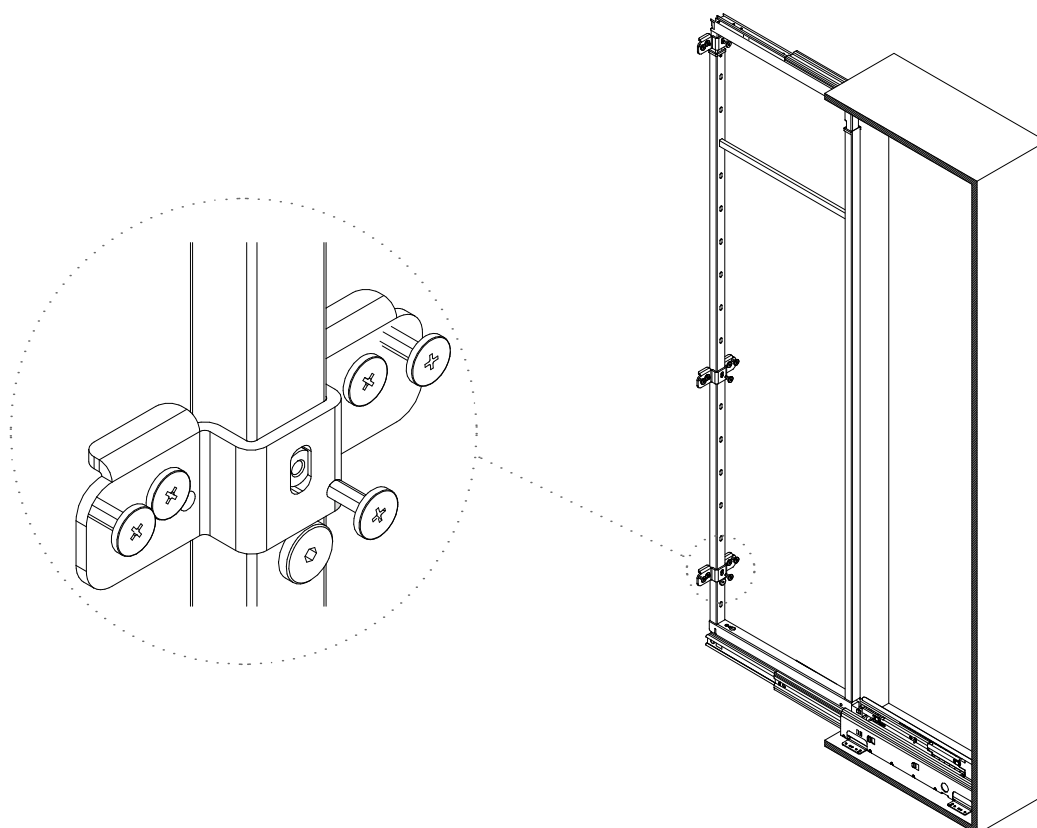
STEP 7: Set the door brackets frames F and fix with the special screw.



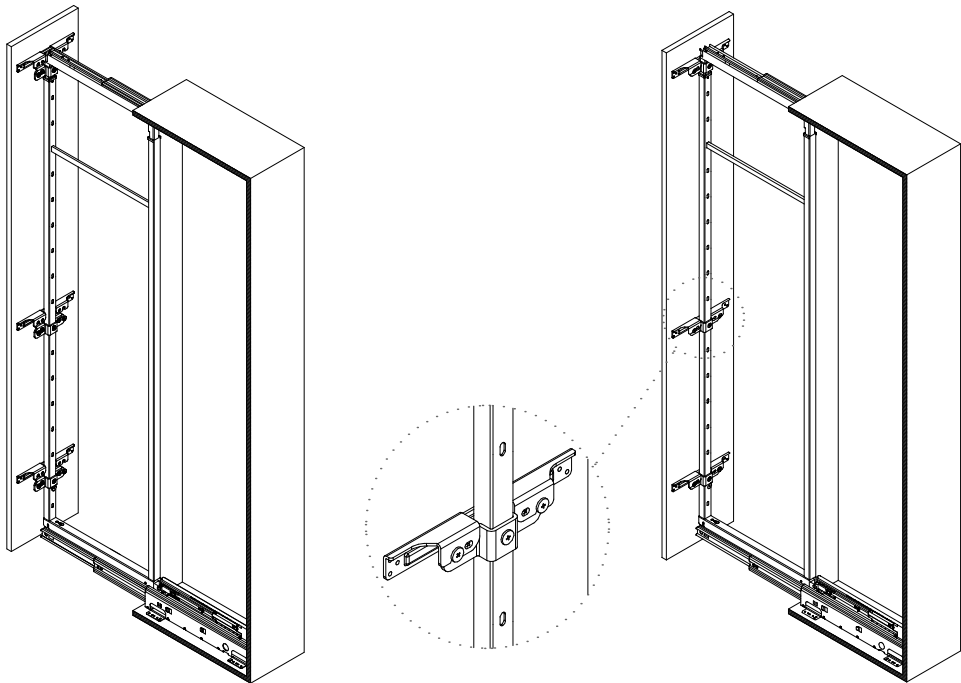
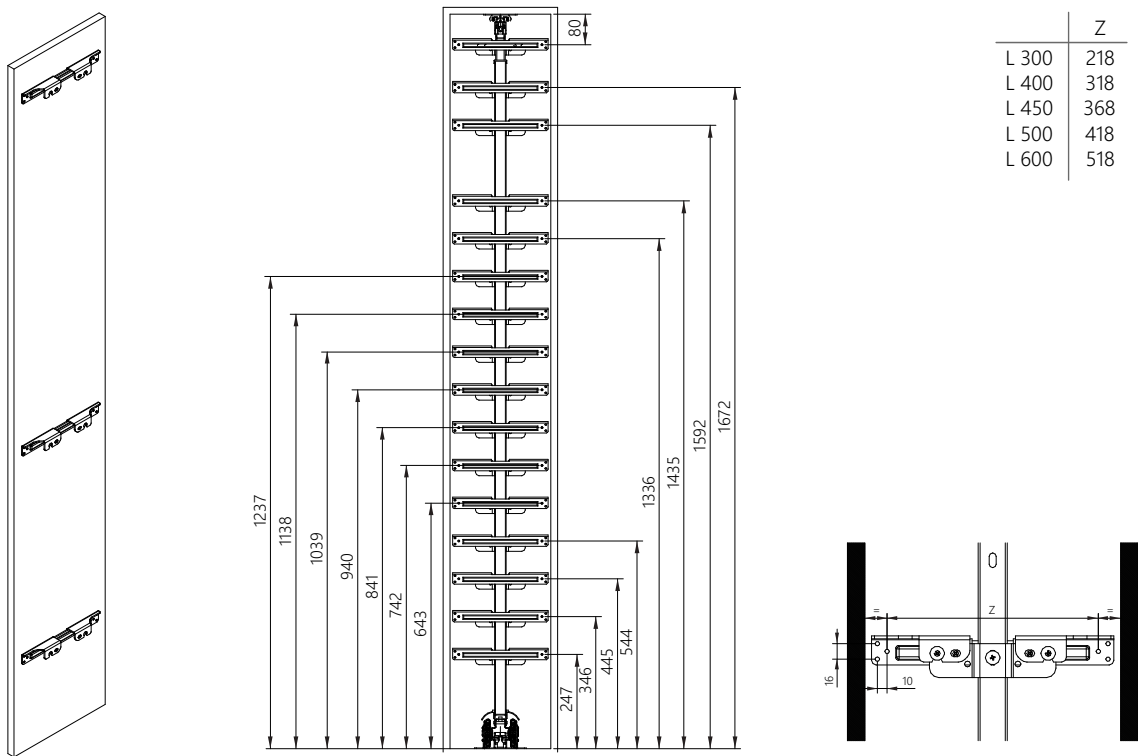
STEP 8: Assemble the door bracket E on the door respecting the distances and set it on the door bracket frame F, already assembled.



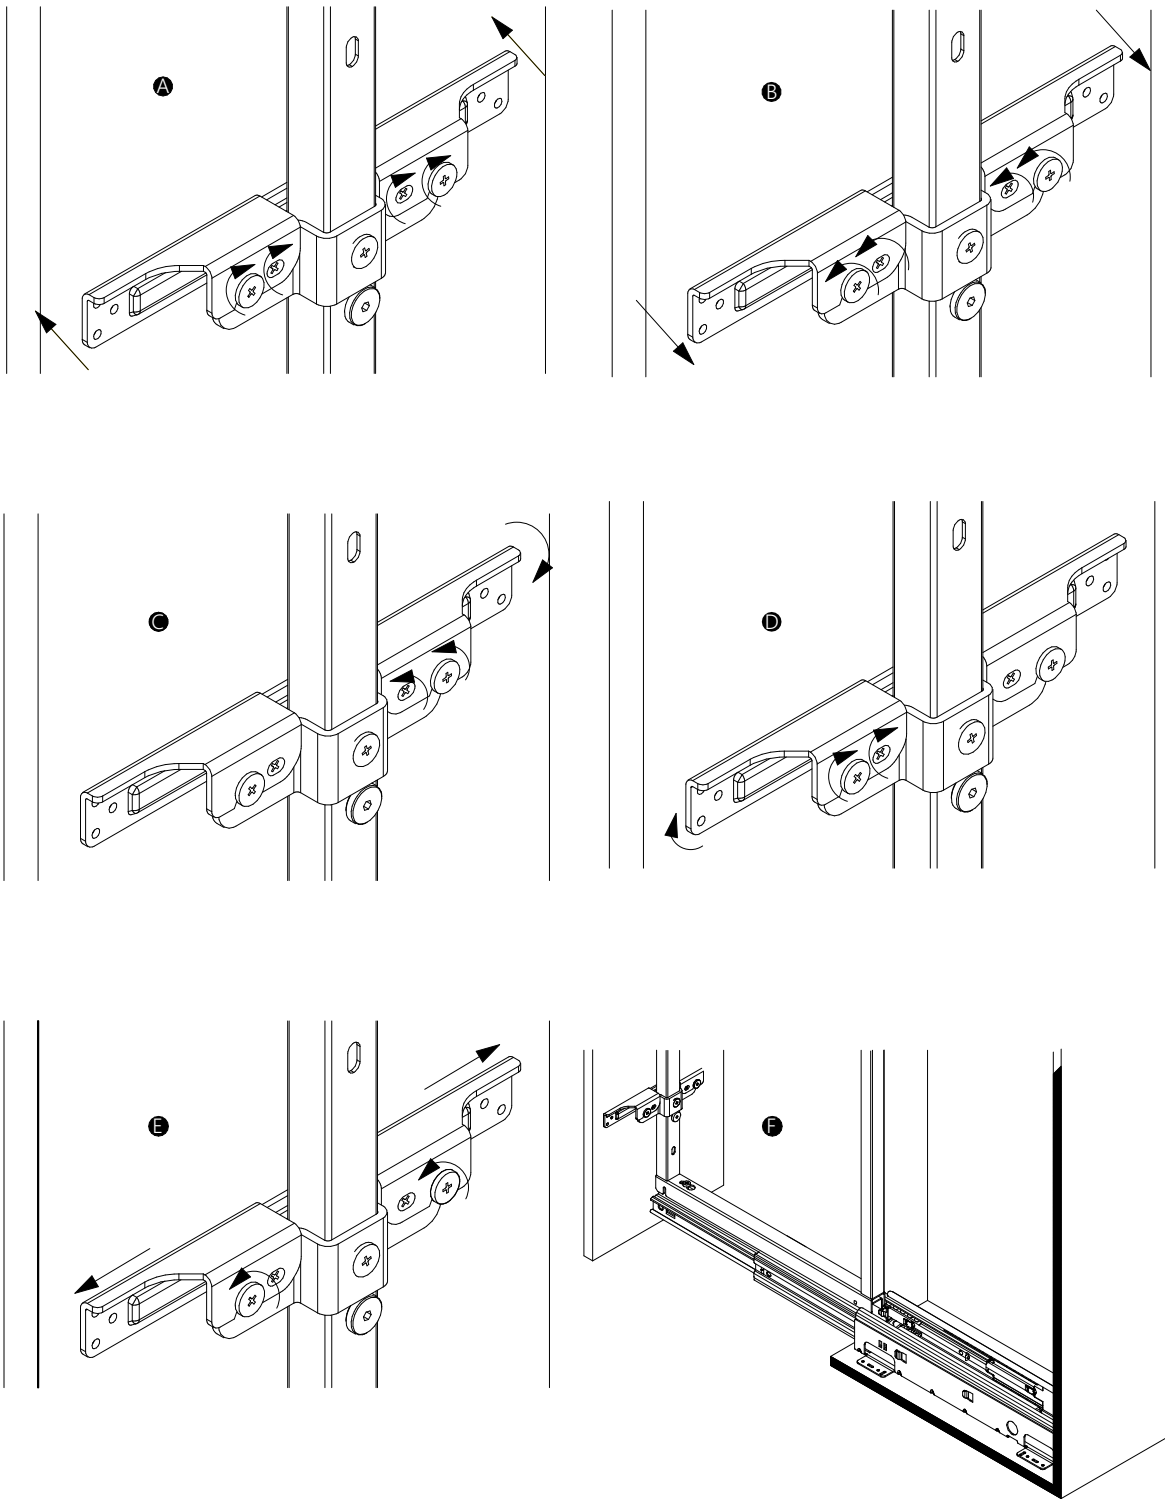STEP 9: Go on adjusting the door.





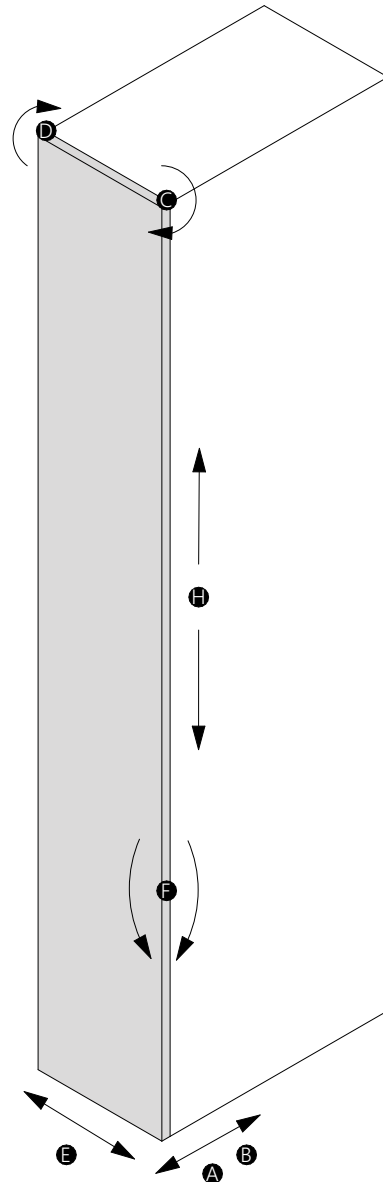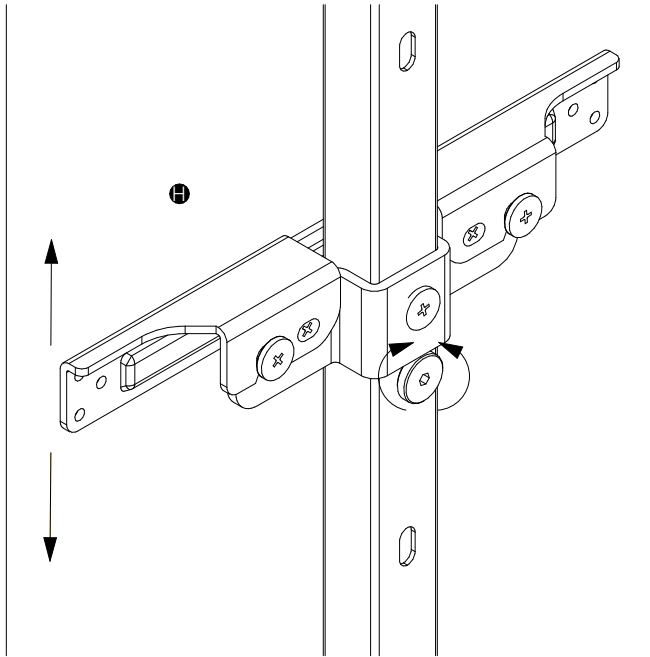To make the regulation H loosen all the screws of the fixing support F and work on the eccentric situated in the lower part.



A-B: Ahead/Back
 C-D: Rotation
 E: Right/Left
 H: High/Low
 F: Regulation door inclination

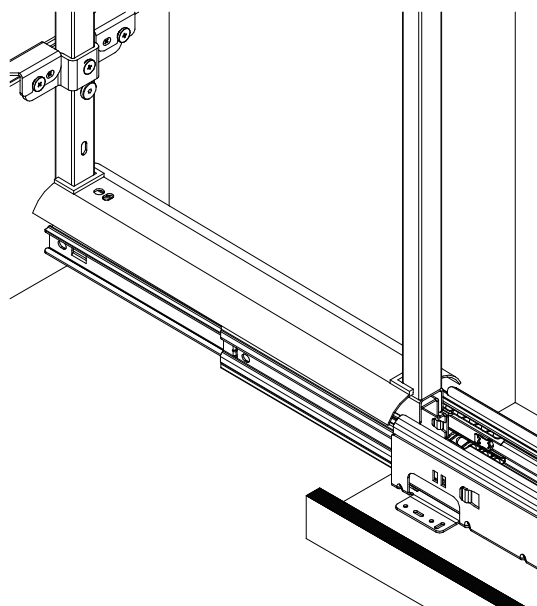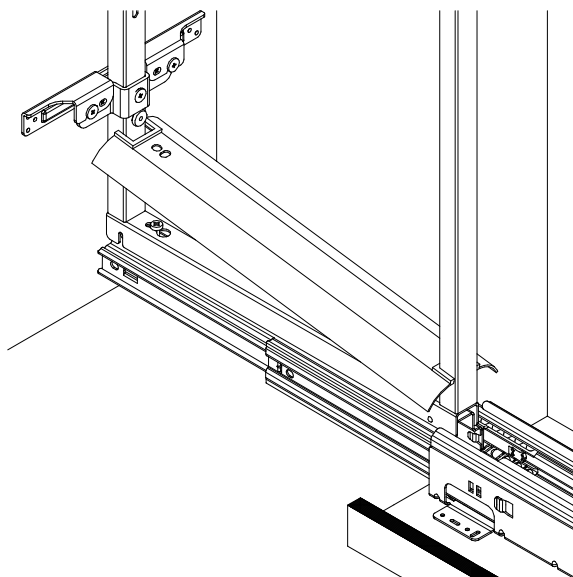STEP 10: Insert the cover on the slide.



ASSEMBLY

