


EDGLINE SCREWLOC FLATPAX RANGE



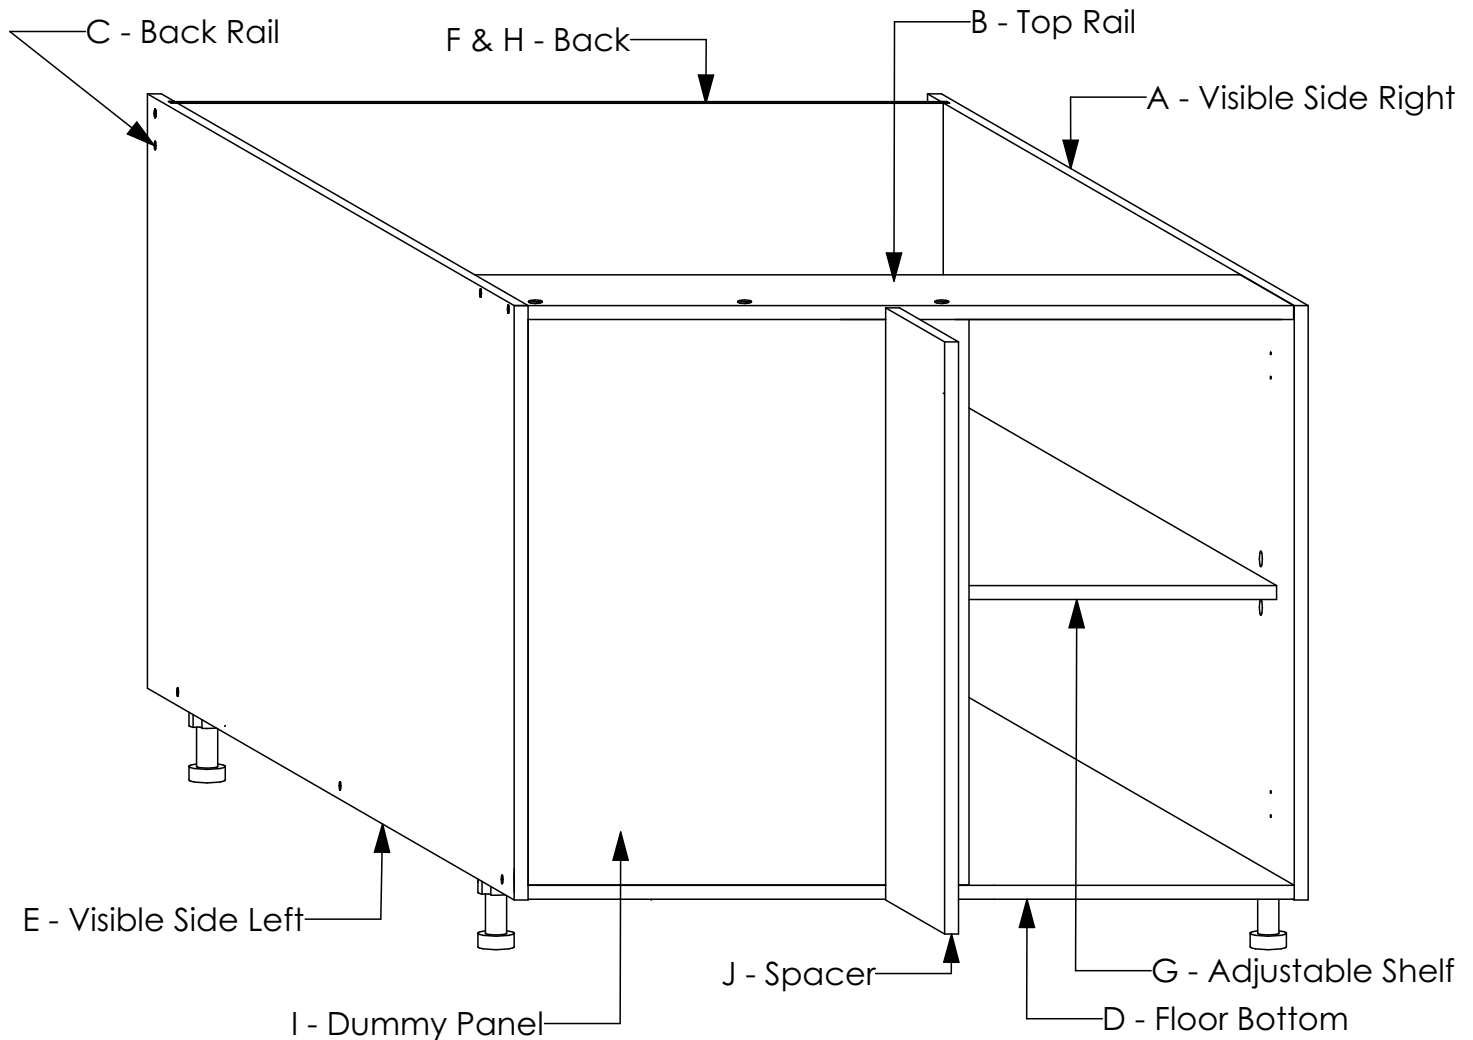


ASSEMBLY GUIDE

BASE CABINET CORNER LEFT HINGE OPENING 1050mm



TOTAL NUMBER OF PANELS: 10

HARDWARE

PRODUCT	QTY	IMAGE
Screw 4.0 x 50mm	23	
Shelf Studs	4	
Screw 3.5 x 16mm	25	
Plinth Leg With Base H100mm Kit	5	
H Profile Backer Connector	1	

GENERAL INSTRUCTIONS

1. Confirm that all panels (10) are in the package before assembling.
2. Check the white sticker on each panel for the labelling (A, B, C, D, E, F, G, H, I & J).
3. Ensure that the panels are laid on a non-abrasive surface when assembling.
4. Countersink the holes on the side panels before inserting the screws.
5. Ensure that the screw is perpendicular to the surface being drilled for a clean and strong joint.

TOOLS REQUIRED



Screw Driver
(Pozidriv Head)




Cordless Drill




Pozi Bit (PZ2)

STEP 1

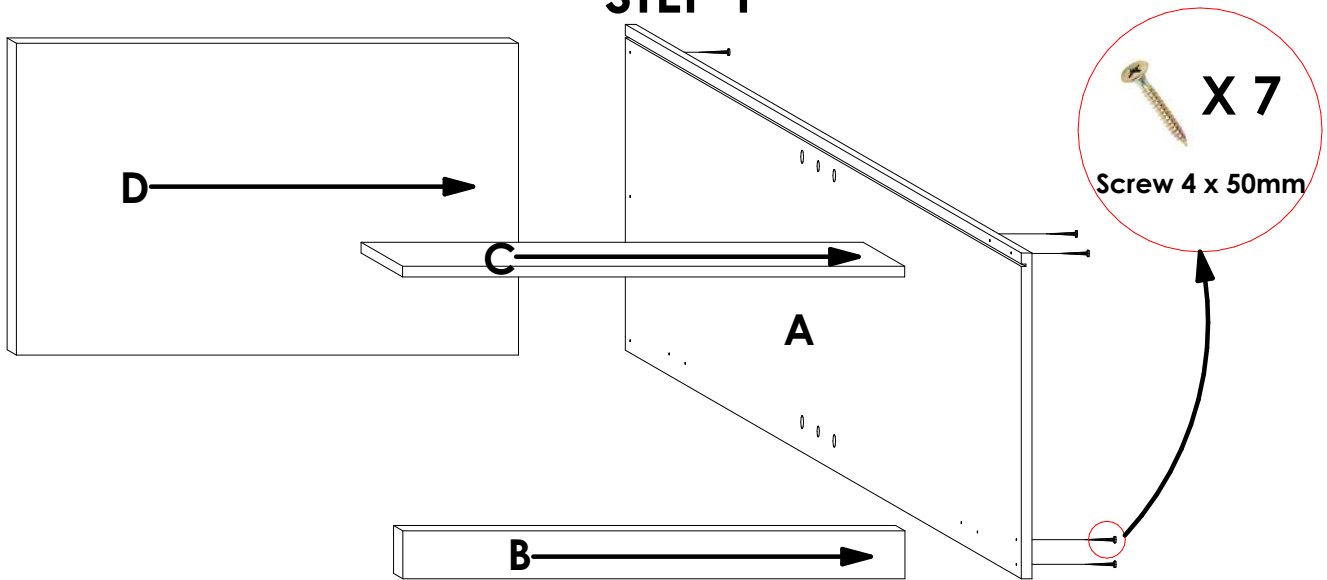


Connect panels **B, C & D** to panel **A** using **Screw 4.0 X 50mm** in the pre-drilled pilot holes as shown. Refer to **Det 1 - 3** below before fastening the screws.

STEP 2

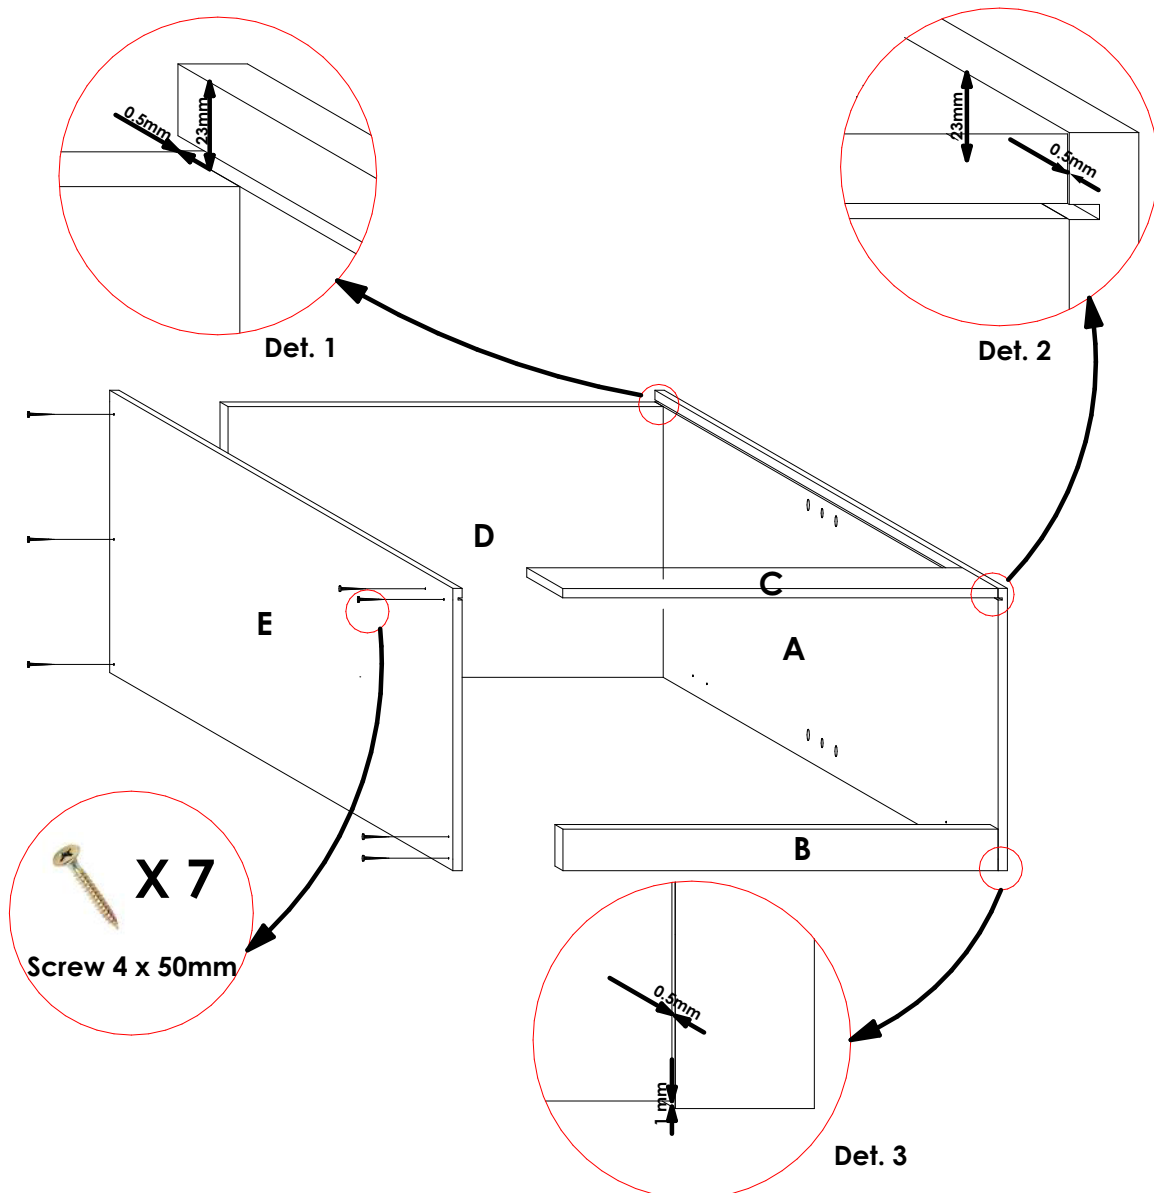


Connect panel **E** to panels **B, C & D** using **Screw 4.0 X 50mm** in the pre-drilled pilot holes as shown. Ensure that the **symmetry** between panel **E** and panel **A** is maintained. Refer to **Det 1 - 3**.

STEP 3

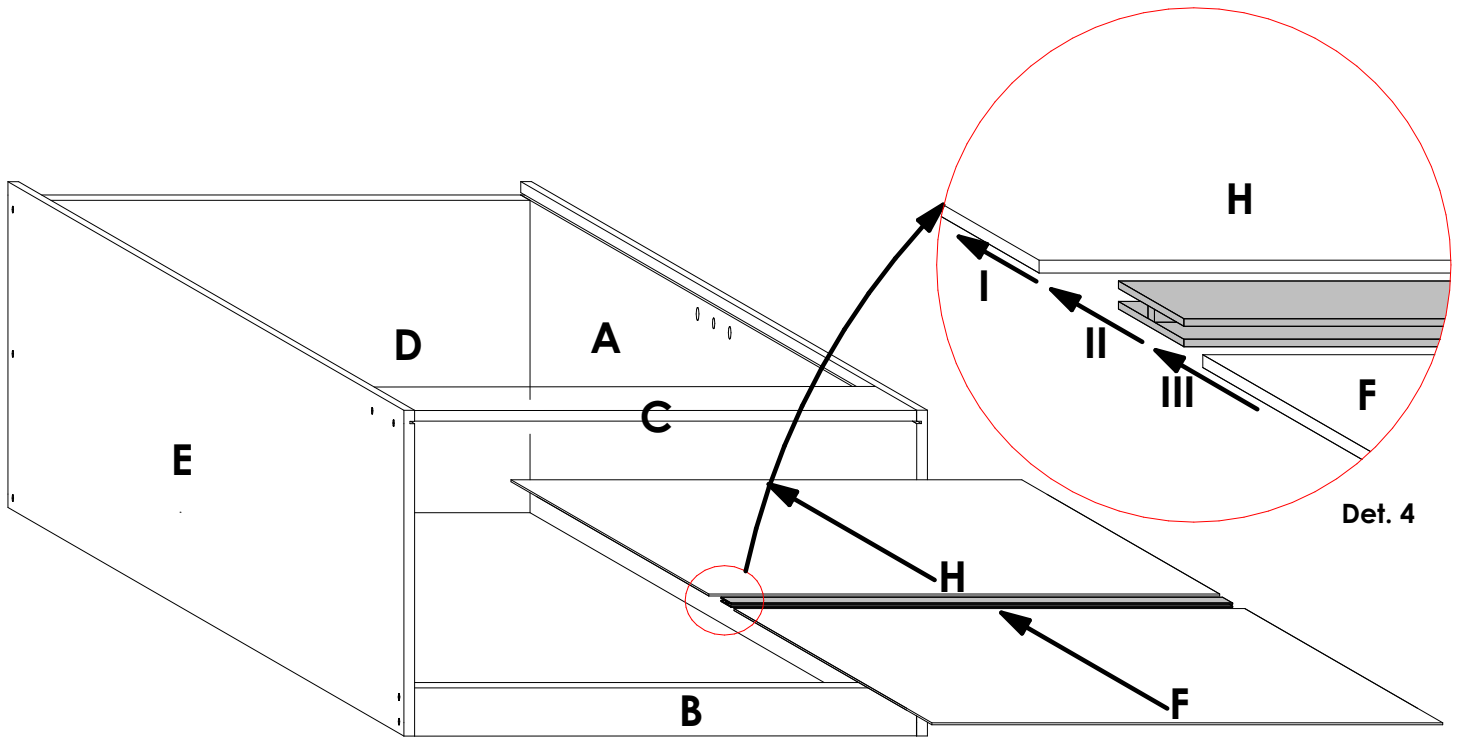


Slide panel **H** into the groove on panels **A & E** with the finished side facing inside the cabinet. After, insert the **H Profile Backer Connector** into panel **H** as shown (See **Det. 1**). To finish this step, slide panel **F** into the groove on panels **A & E** and into the **H Profile Backer Connector** as shown in **Det. 1**.

STEP 4

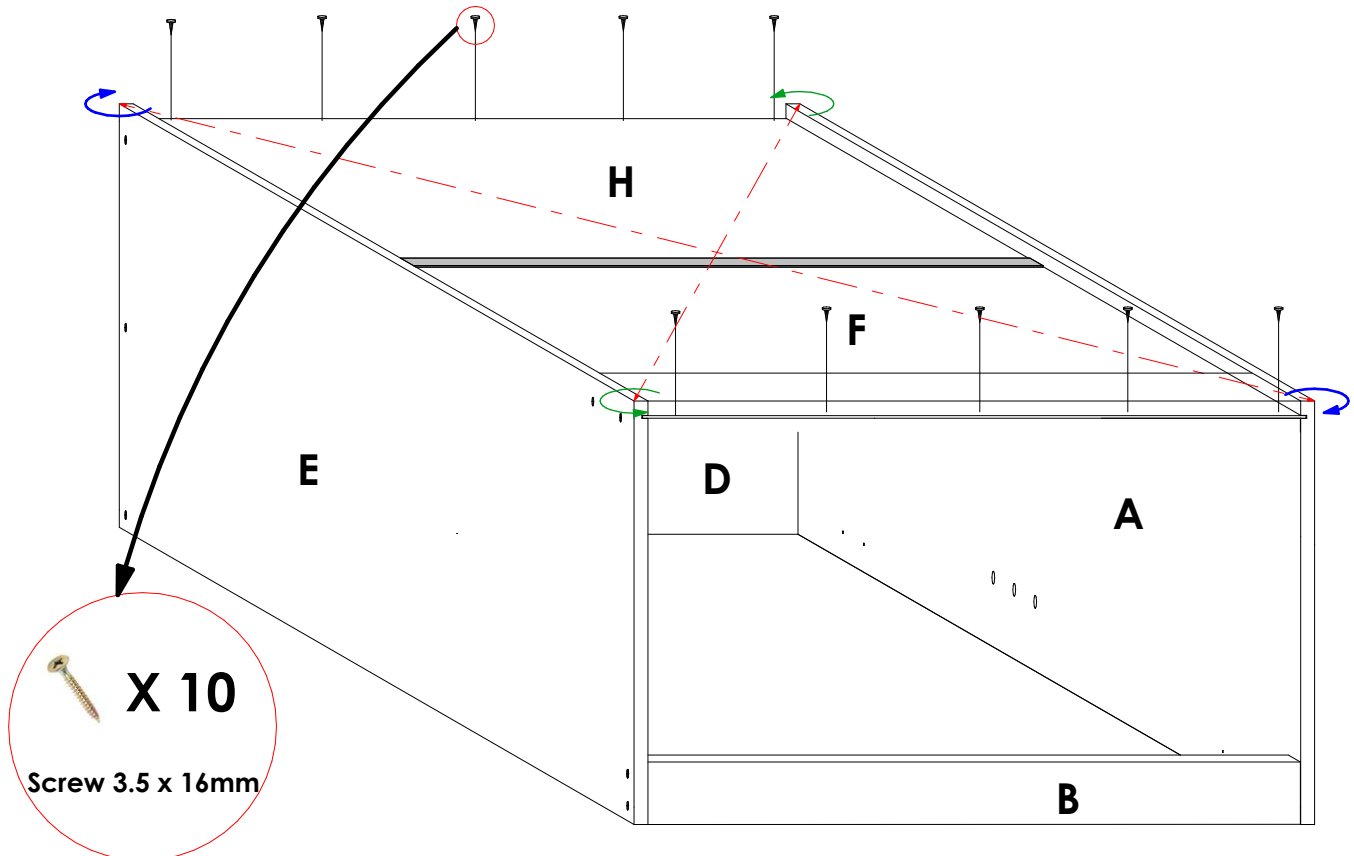


First, **check the diagonal** of the cabinet by measuring the two distances indicated by the red, broken lines. They should be equal. If not, twist the cabinet accordingly in the diagonal corners as shown until an equal value is achieved. After, secure panel **F** to panels **C & D** as shown using **Screw 3.5 X 16mm**.

STEP 5

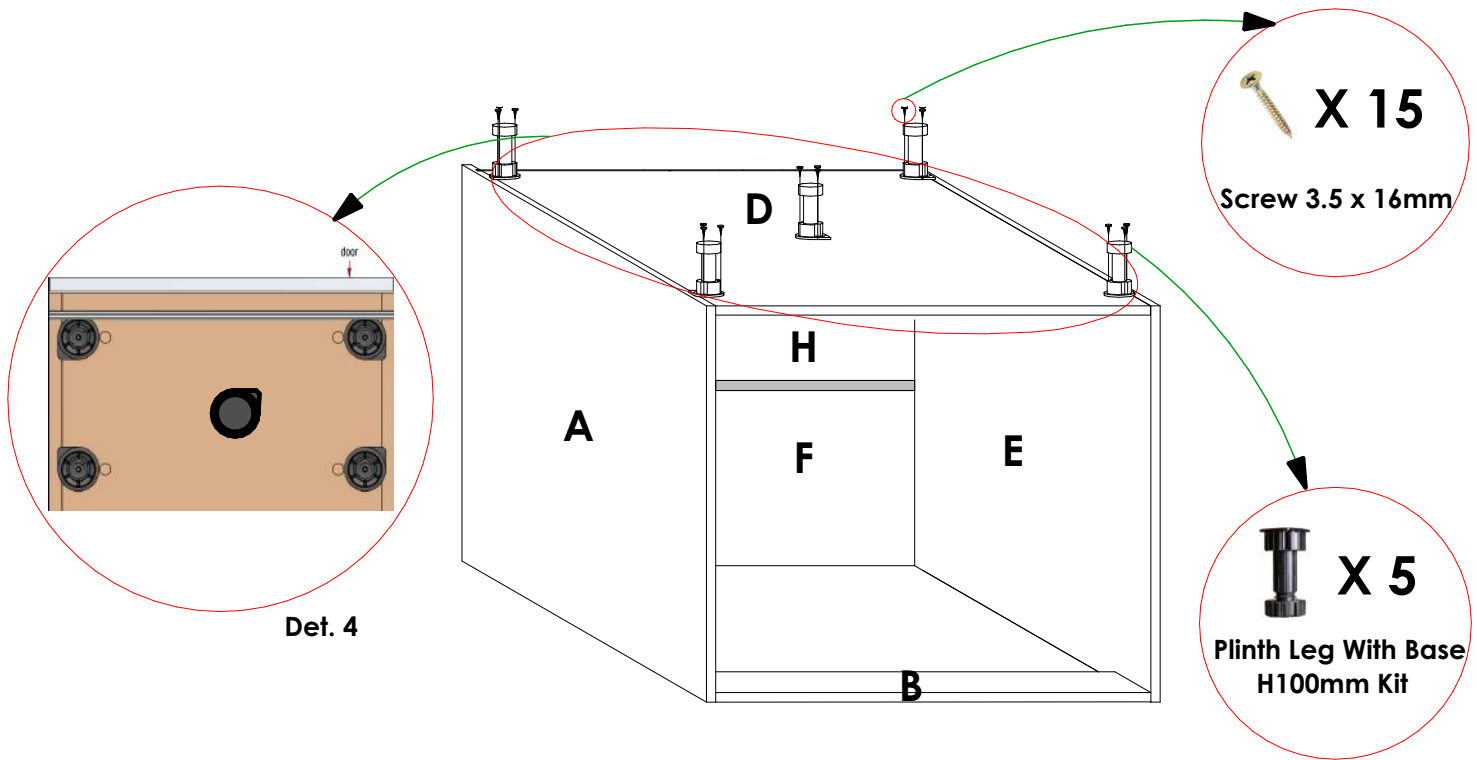


Flip the cabinet up-side down as shown. Place the four units of **Leg Adjustable Base 100mm** in the shown positions and aligning with the pre-drilled pilot holes on panel **D**. Ensure that the orientation is as shown in **Det. 2**. Using **Screw 3.5 X 16mm**, secure the legs onto panel **D**.

STEP 6

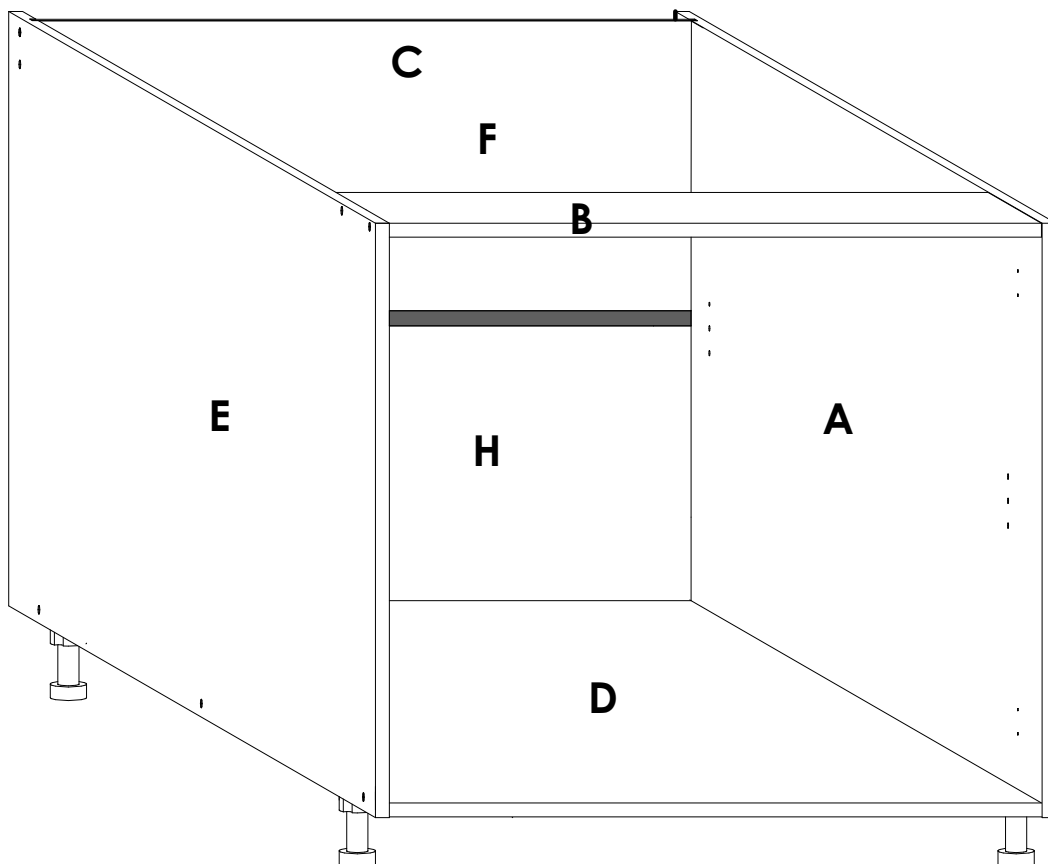


Flip the cabinet up right down as shown and confirm that the legs are secured firmly .

STEP 7

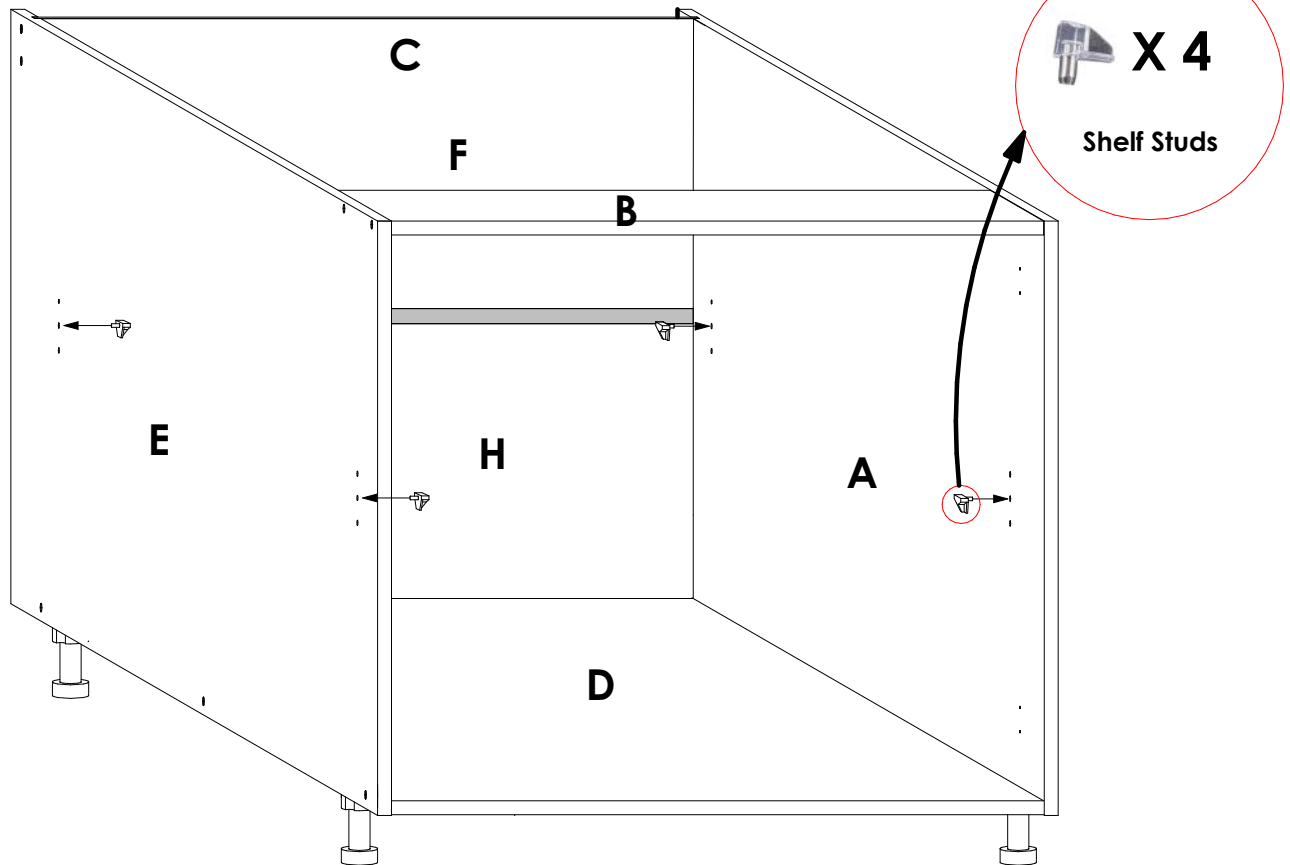


Insert the **Shelf Studs** in the shown positions.

STEP 8

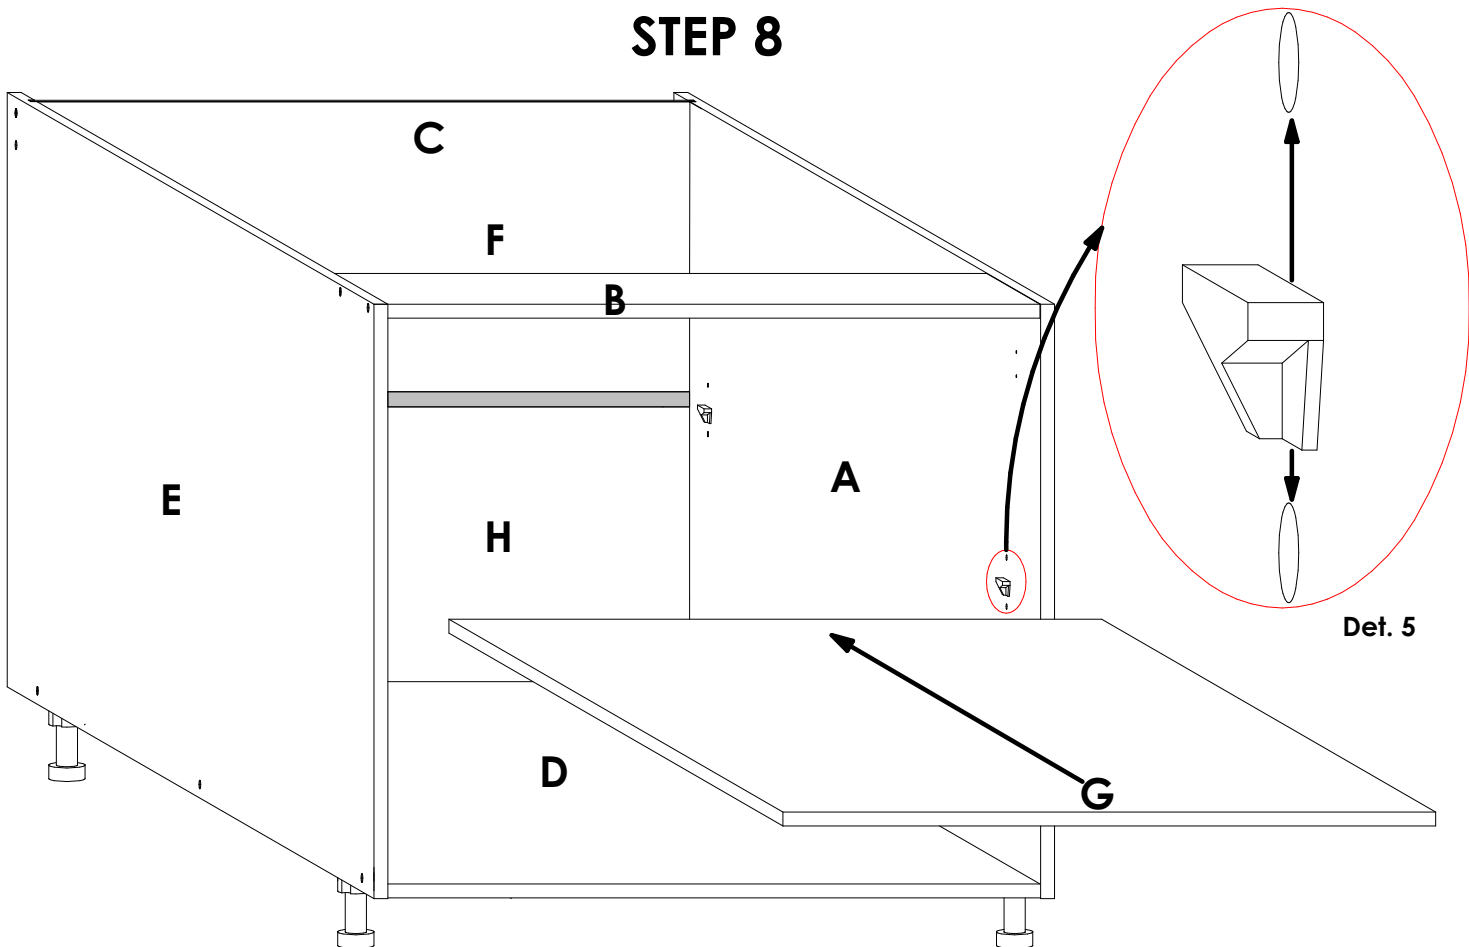


Slide in panel **G** as shown, such that it sits on the four shelf studs. The level of the shelf is adjustable by shifting the position of the shelf studs as shown in **Det. 5**. See Door Installation Guide for further instructions.

STEP 7

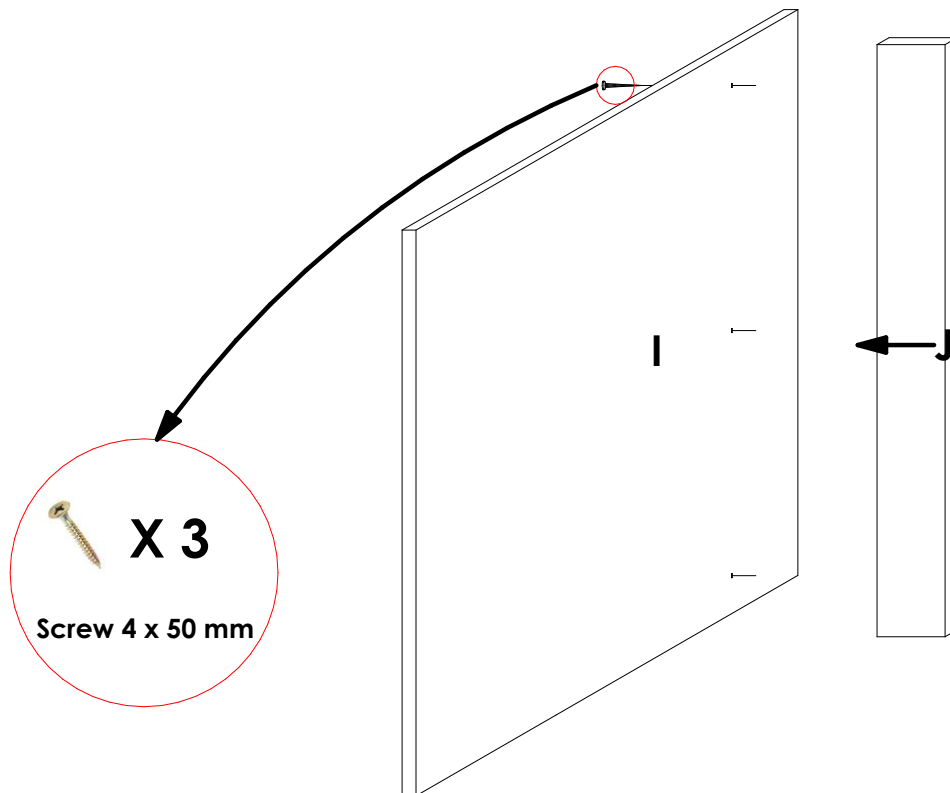

Connect panel **J** to panel **I** using **Screw 4.0 X 50mm** in the pre-drilled pilot holes as shown.

STEP 8







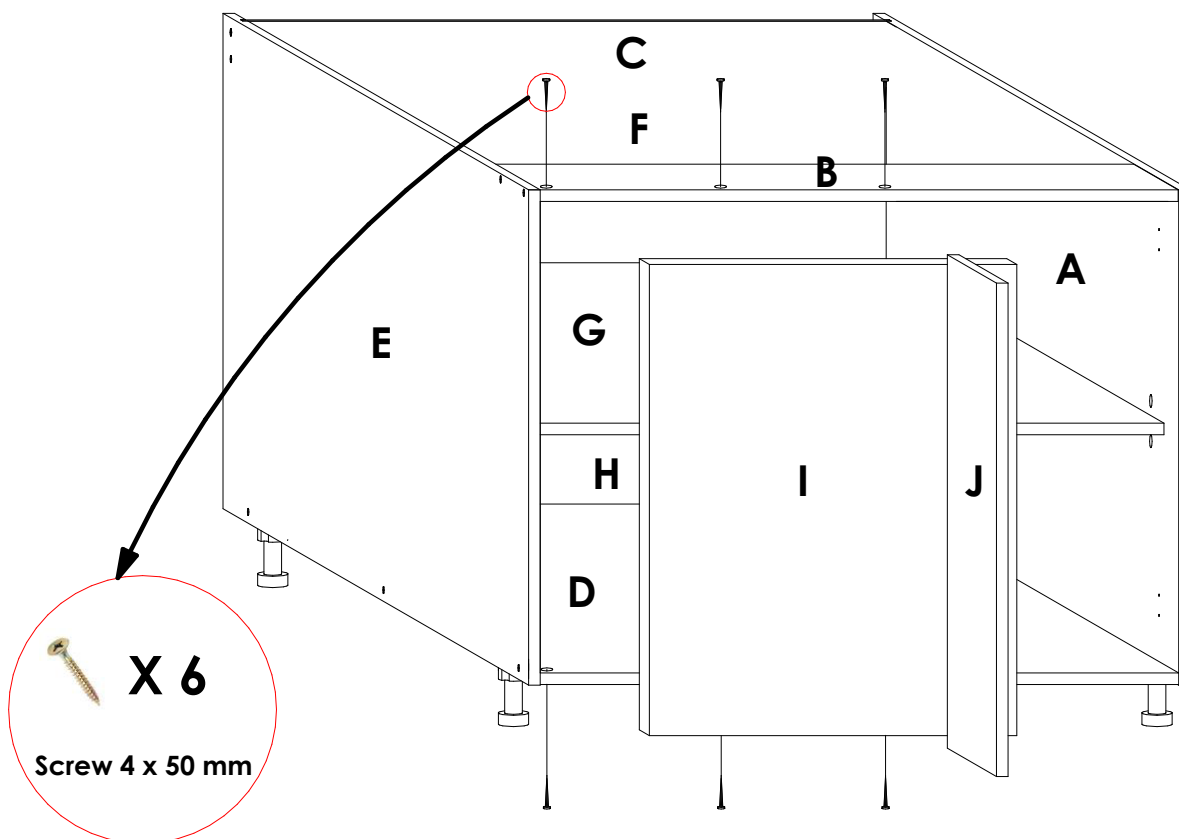





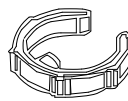

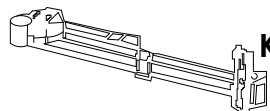


Connect panel **I** to panels **B** and **D** using **Screw 4.0 X 50mm** in the pre-drilled pilot holes as shown.


SWING TRAY RIGHT OPENING ASSEMBLY GUIDE

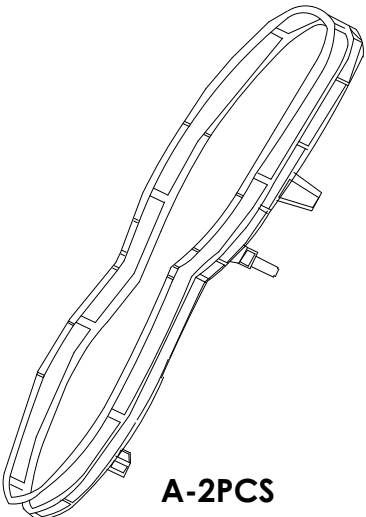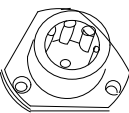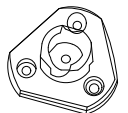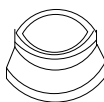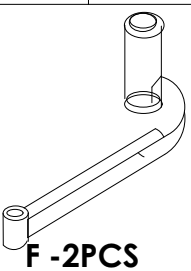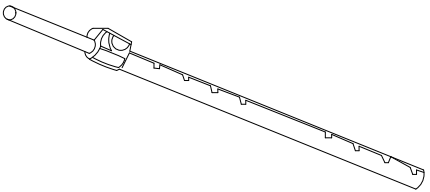

HARDWARE

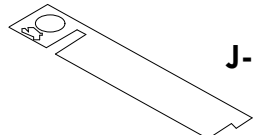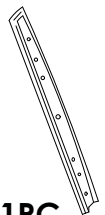
 <p>A-2PCS</p>	 <p>B-1PCS</p>	 <p>C-1PCS</p>	 <p>D-2PCS</p>	 <p>E-2PCS</p>
	 <p>F-2PCS</p>	 <p>G-1PCS</p>		
	 <p>H-5PCS(20MM)</p>	 <p>I-8PCS (16MM)</p>		
 <p>J-1PC</p>	 <p>L-1PC</p>	 <p>M-4PCS</p>	 <p>N-2PCS</p>	 <p>O-2PCS</p>
 <p>K-2PCS</p>				

STEP 1: Choose the correct cabinet.

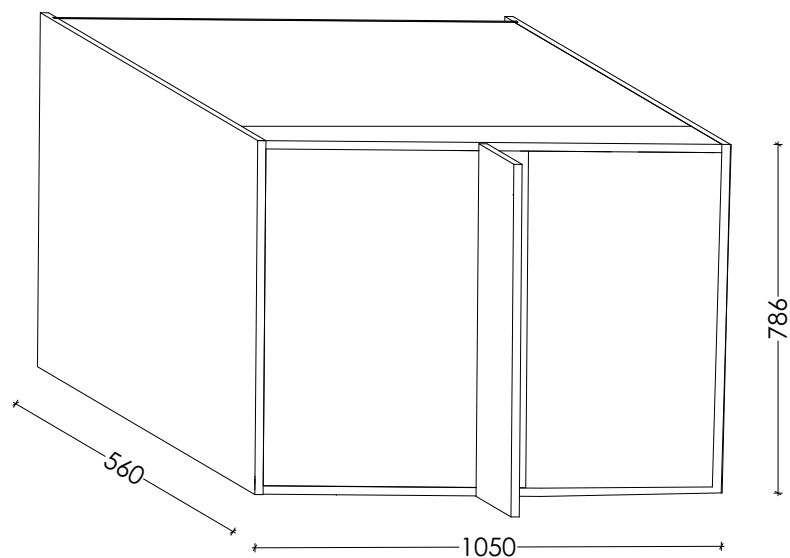


Use the right opening swing tray on the Left Hinge Opening cabinet.


STEP 2: Mount accessories B,C & L.

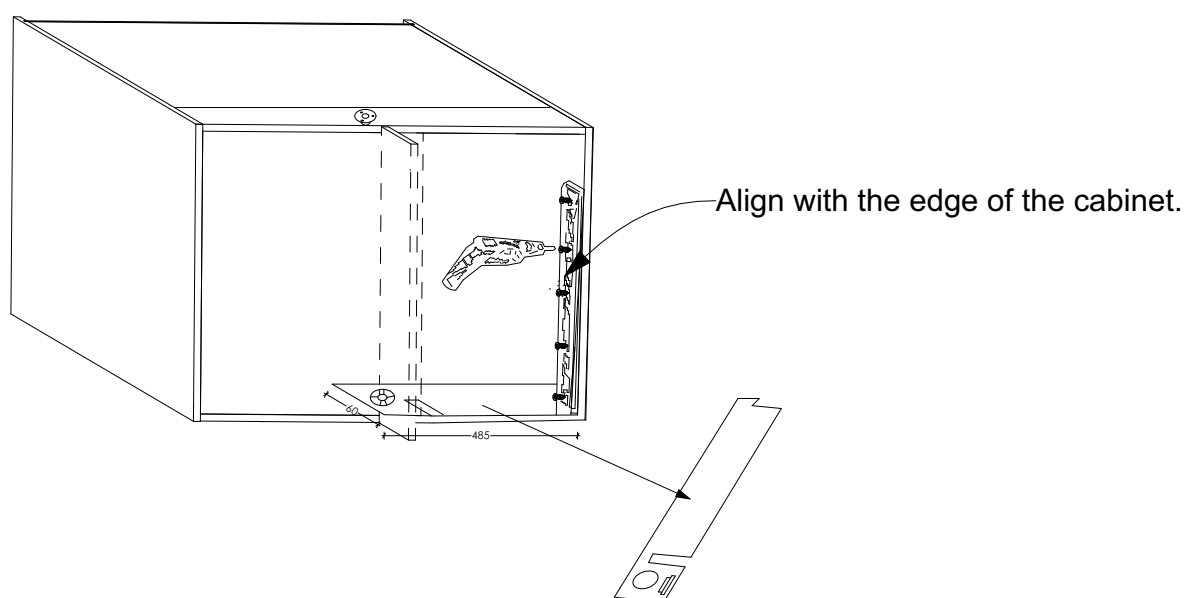


STEP 3: Installation of straight swing rod.

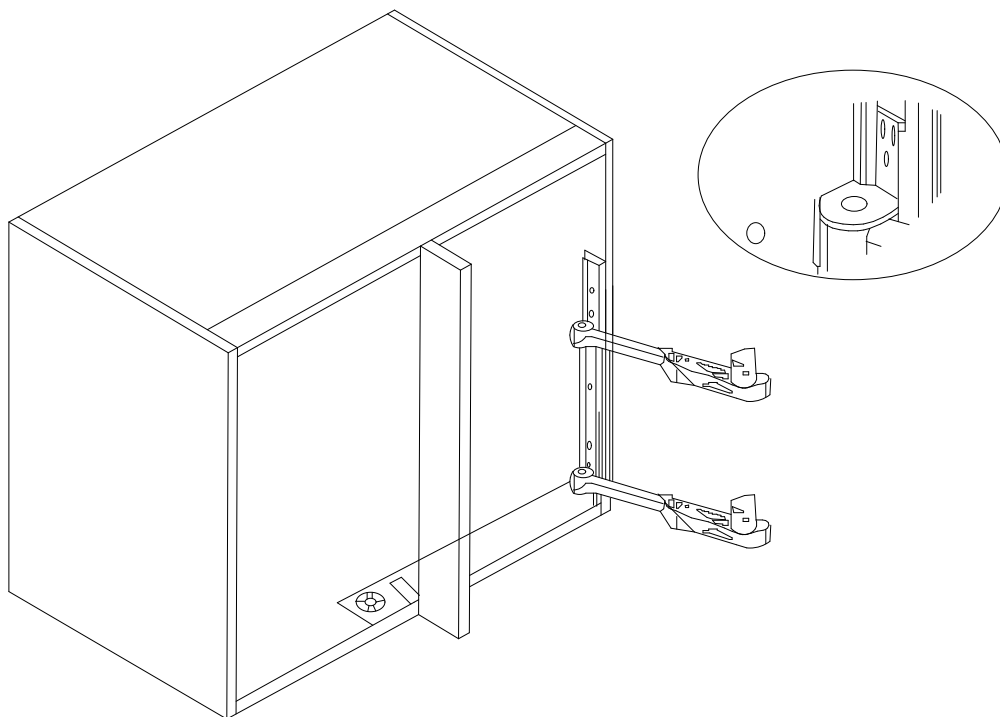

STEP 4: Installation of curved swing rod.

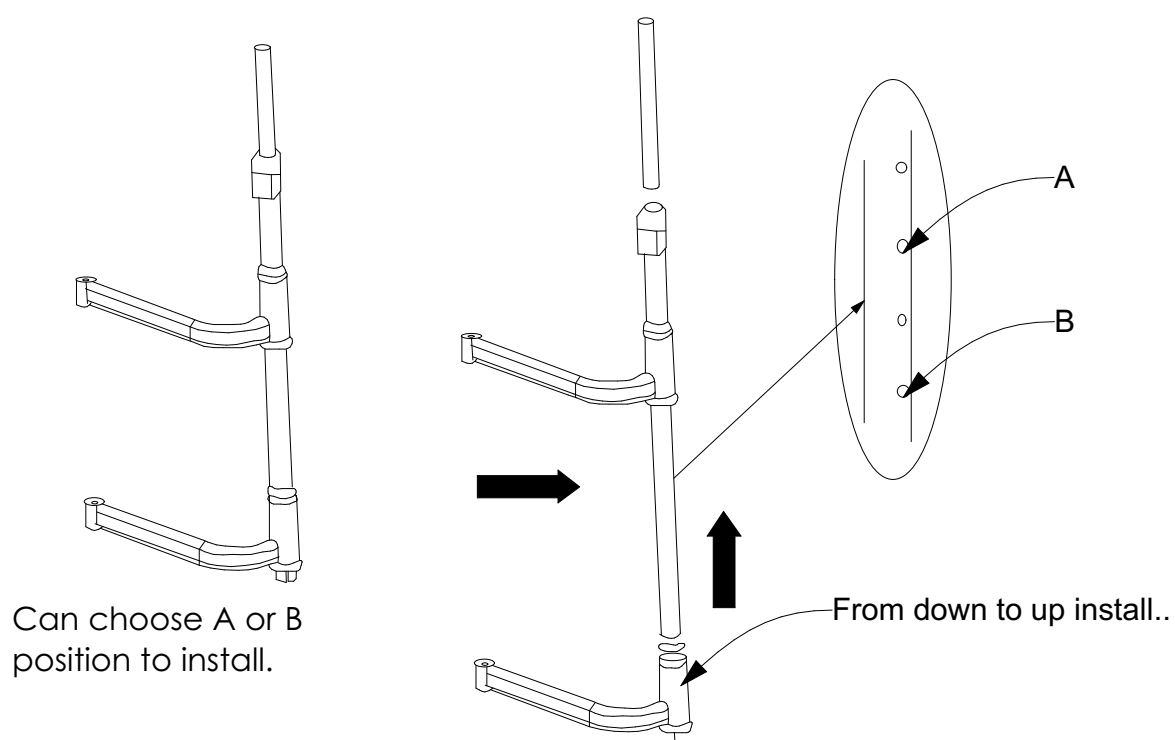

STEP 5: Tube installation.

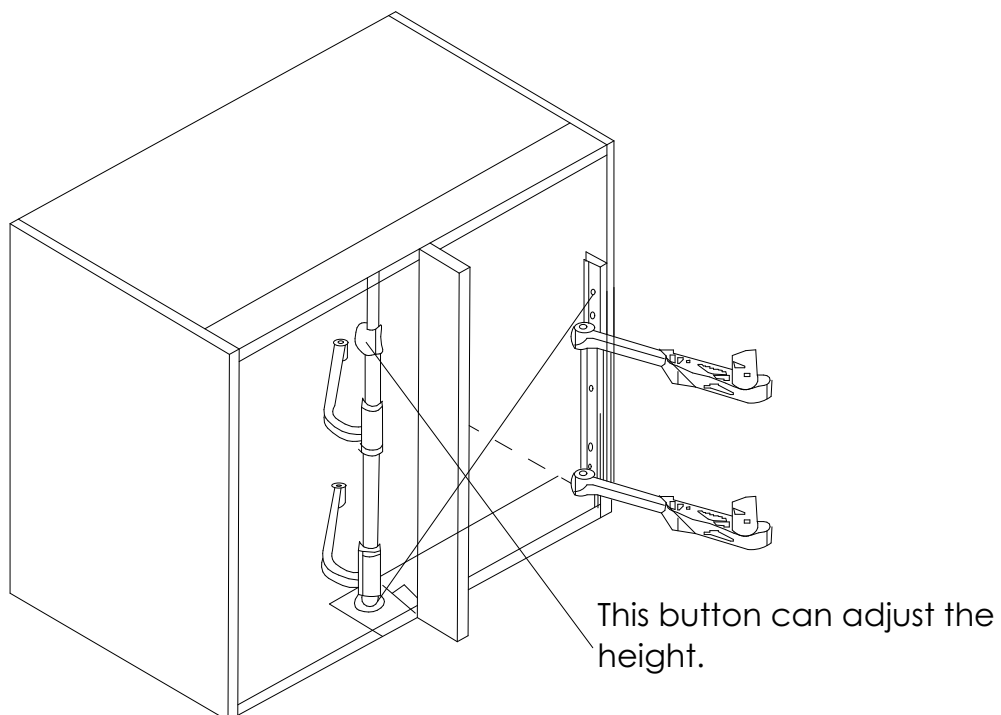

STEP 6: Basket Installation

