


QUICKLOC FLATPAX KITCHEN RANGE ASSEMBLY GUIDE LEGRABOX DRAWER BOX HEIGHT 1

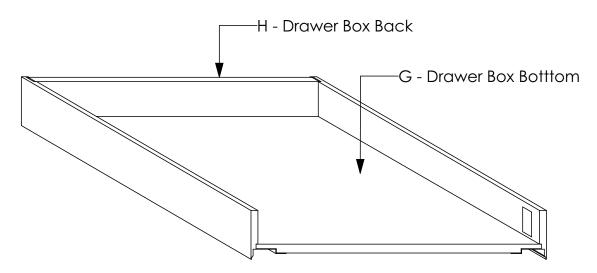


HARDWARE

TOTAL NUMBER OF PANELS: 2


PRODUCT	QTY	IMAGE
Legrabox Back Fixing Bracket Left/Right	1 Pair	A COMM
Legrabox Drawer Sides Left/Right	1 Pair	
Screw 3.5 x 16mm	24	** * */ */*
Legrabox Front Fixing Bracket	2	
Legrabox Runners Left/Right	1 Pair	
Blum Cover Cap for Drawer Sides	2 of each	

TOOLS REQUIRED


GENERAL INSTRUCTIONS

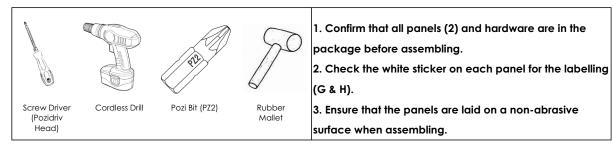

STEP 1

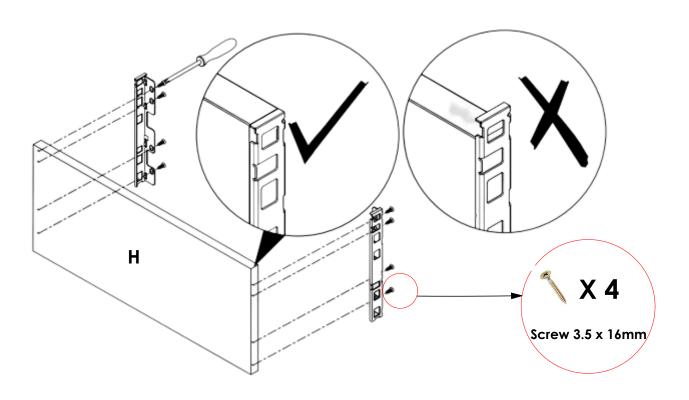


Place the Back Fixing Brackets in the shown positions on Panel H.

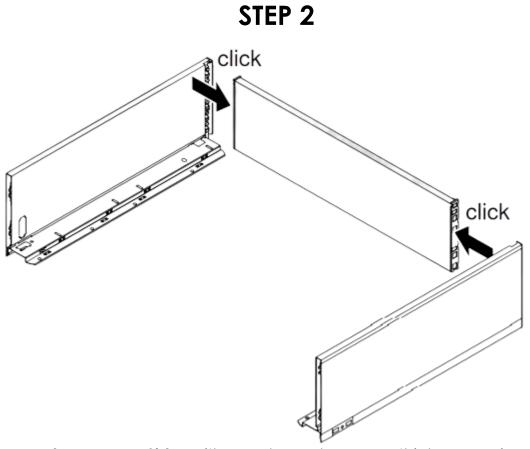

Connect the **Legrabox Drawer Sides** with panel **H** as shown. Do this by snapping the **Back Fixing** plates into the protrusions at the back of the **Drawer Sides**.




STEP 3

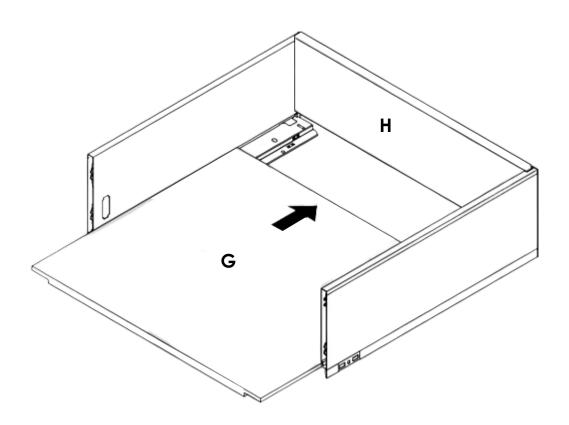


Slide in panel ${\bf G}$ into the Legrabox Drawer Sides Until it hits panel ${\bf H}$.



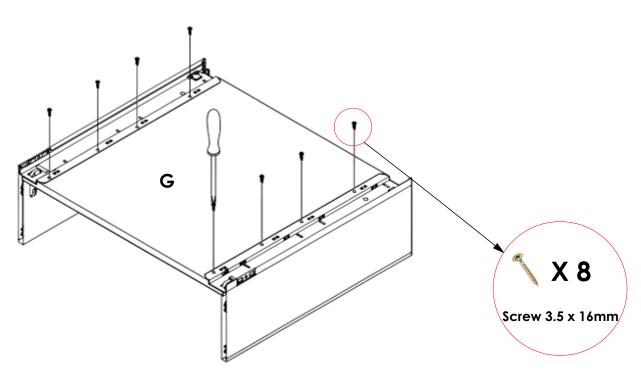


Using **Screw 3.5 x 16mm**, secure panel **G** in the shown positions.



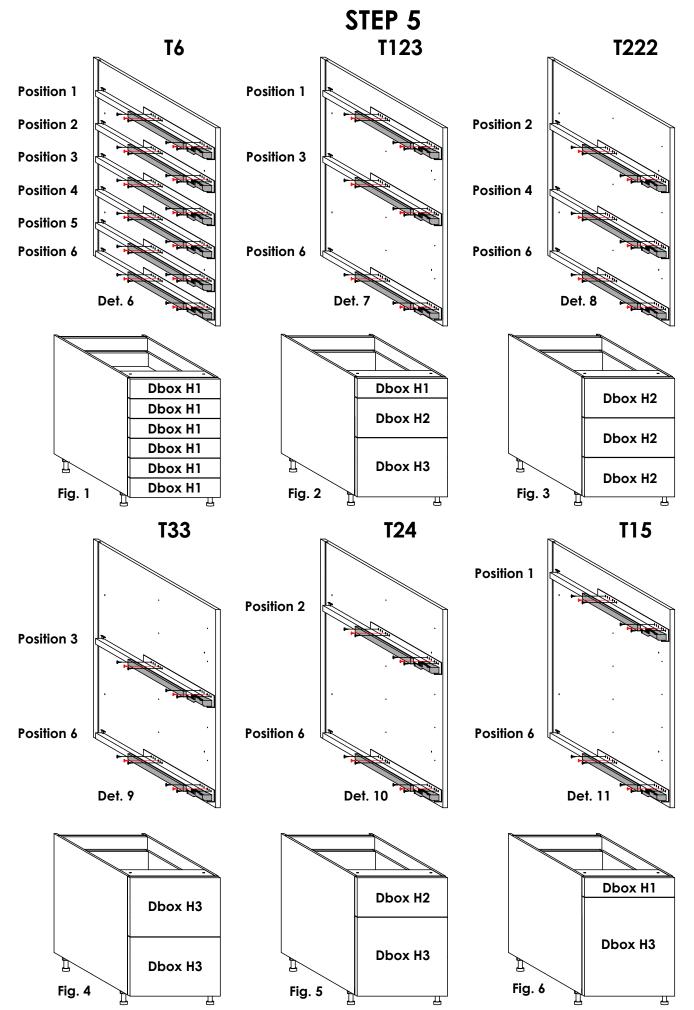

Using Screw 3.5 x 16mm, connect the Legrabox Runners to Panels A & B of the Drawer Cabinets. Confirm the desired configuration from Fig. 1-6 and connect the runners in the corresponding positions shown in Det. 6-11. The screws shown in red align with pre-drilled pilot holes. After fastening in the two screws in aligning positions, use four more screws to reinforce the runners as shown. Also, from fig. 1-6, note the specific Legrabox Drawer Box Heights that go into each configuration.

STEP 6

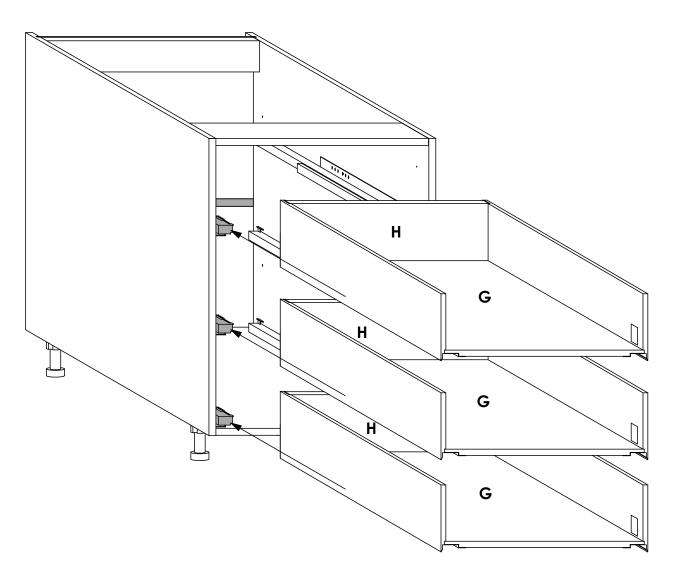

Slide in the Drawer Boxes all the way in with the Legrabox Drawer Sides sitting on the Legrabox Runners. See the Doors and Dummy Panels Installation guides for further instructions (Drawer Fronts Installation).