


QUICKLOC FLATPAX KITCHEN RANGE





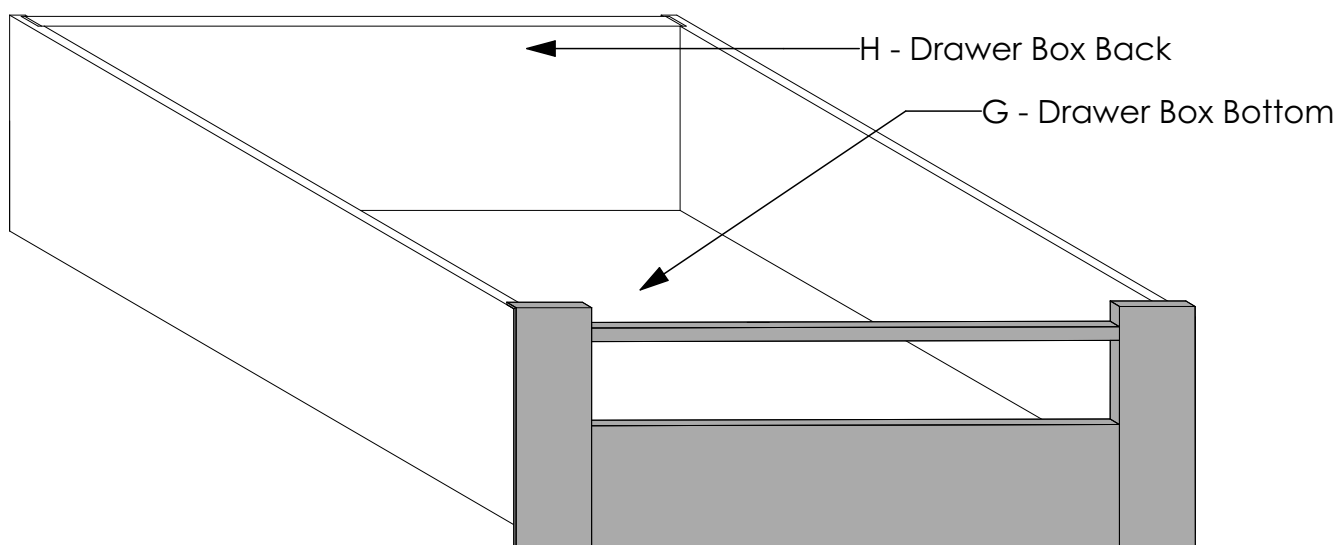


ASSEMBLY GUIDE

LEGRABOX INNER DRAWER BOX HEIGHT 2







HARDWARE

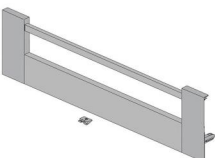TOTAL NUMBER OF PANELS: 2


PRODUCT	QTY	IMAGE
Legrabox Back Fixing Bracket Left/Right	1 Pair	
Legrabox Drawer Sides Left/Right	1 Pair	
Screw 3.5 x 16mm	28	
Legrabox Front Fixing Bracket	4	
Legrabox Runners Left/Right	1 Pair	
Blum Cover Cap for Drawer Sides	2 of each	
Legrabox cross gallery for inner draw	1	

TOOLS REQUIRED

GENERAL INSTRUCTIONS

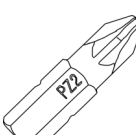
 Screw Driver (Pozi driv Head)	 Cordless Drill	 Pozi Bit (PZ2)	 Rubber Mallet	<ol style="list-style-type: none"> 1. Confirm that all panels (2) and hardware are in the package before assembling. 2. Check the white sticker on each panel for the labelling (G & H). 3. Ensure that the panels are laid on a non-abrasive surface when assembling.
--	---	---	---	---

STEP 1

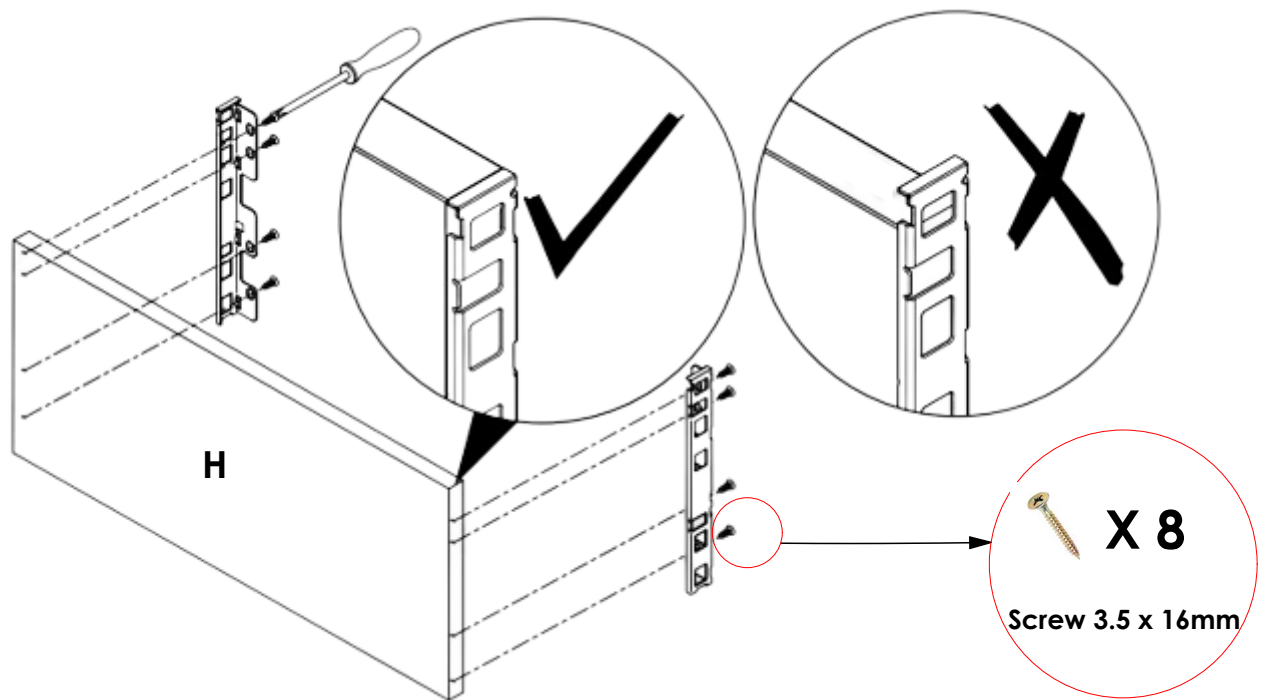


Place the Back Fixing Brackets in the shown positions on Panel **H**.

STEP 2

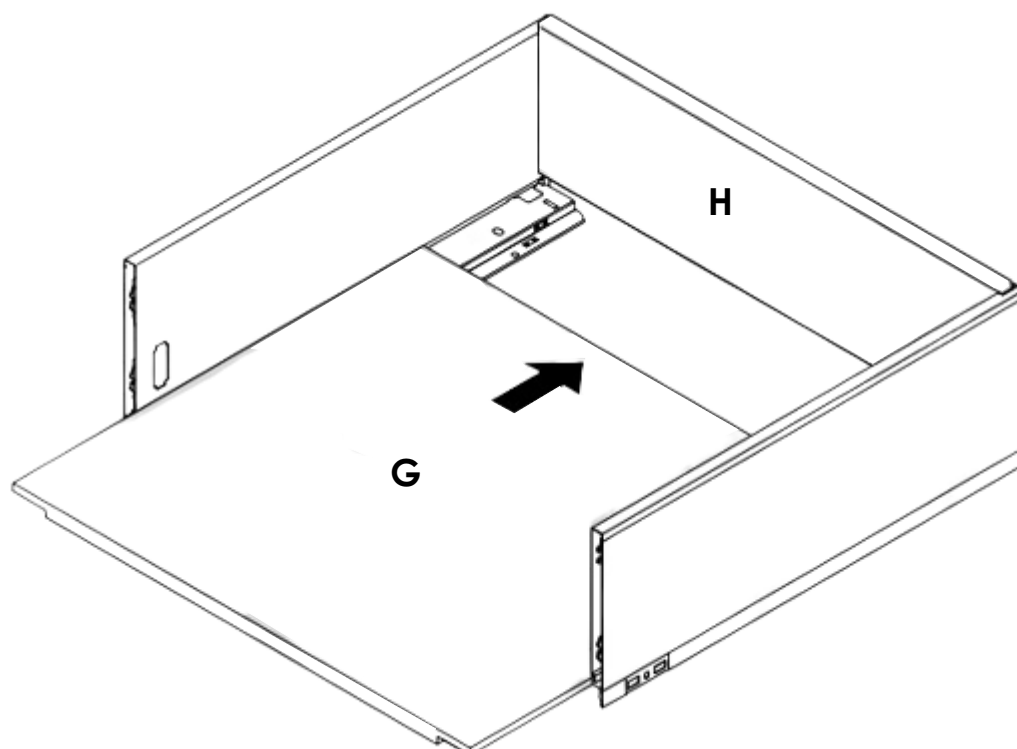


Slide in panel **G** into the Antaro Drawer Sides Until it hits panel **H**.

STEP 3

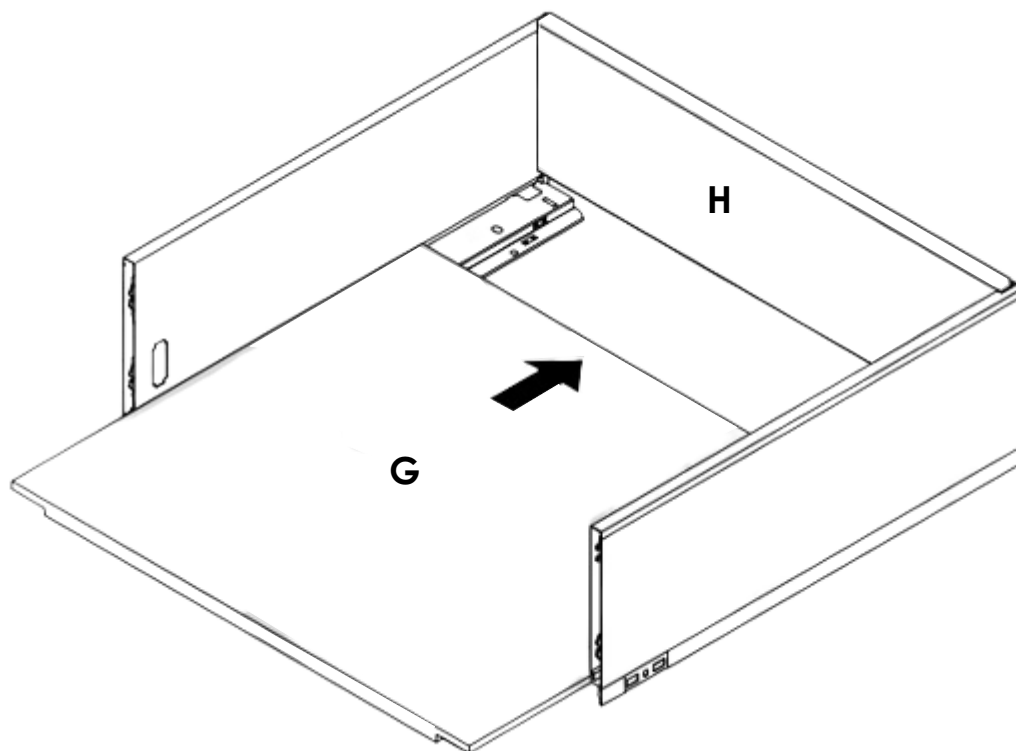

Slide in panel **G** into the Legrabox Drawer Sides Until it hits panel **H**.

STEP 4

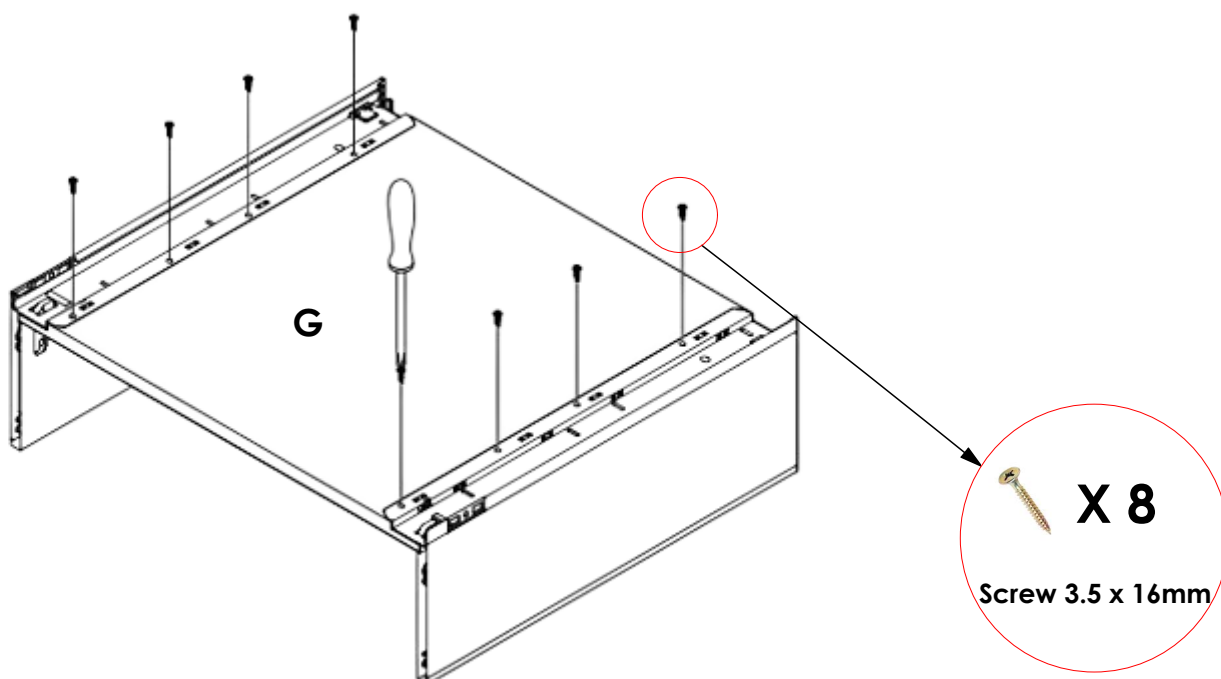

Using **Screw 3.5 x 16mm**, secure panel **G** in the shown positions.

STEP 5

Follow step by step to fix the front section and cross gallery for inner draw as illustrated below.

